

# RV110W VPN防火牆上的基本虛擬專用網路 (VPN)配置

## 目標

虛擬私人網路(VPN)是一種透過公用網路 (例如網際網路) 將不同網路上的終端連線在一起的方式。這允許遠離本地網路 (例如辦公室) 的使用者通過Internet安全地連線到該網路。基本VPN設定頁面可幫助您為網關到網關連線設定VPN隧道。

本文說明如何在RV110W VPN防火牆上配置基本VPN。

## 適用的裝置


·RV110W

## 軟體版本

·1.2.0.9

## 基本VPN設定配置

步驟1.登入到Web配置實用程式並選擇VPN > Basic VPN Setup。Basic VPN Setup頁面開啟：

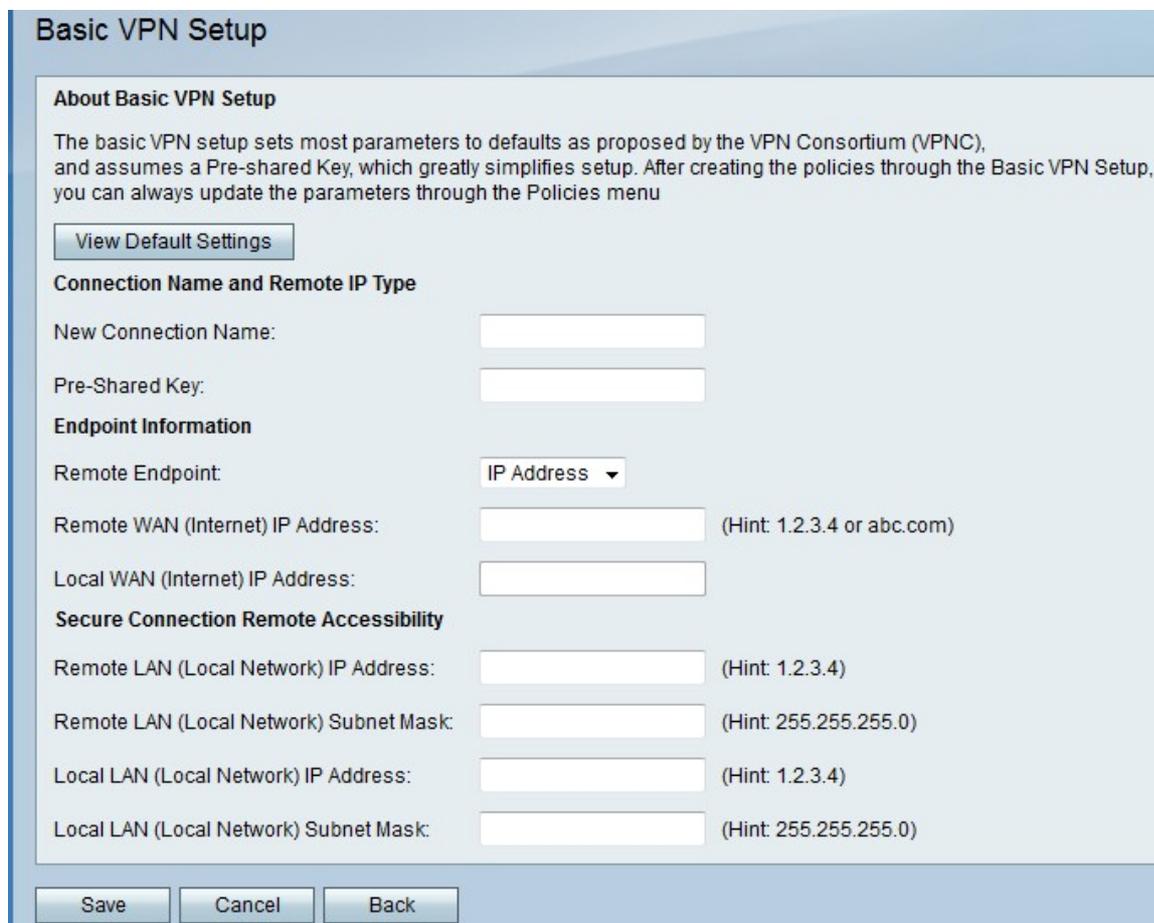

The screenshot shows the 'Basic VPN Setup' configuration page. It includes an 'About Basic VPN Setup' section with a 'View Default Settings' button. Below this are several configuration sections: 'Connection Name and Remote IP Type' with fields for 'New Connection Name' and 'Pre-Shared Key'; 'Endpoint Information' with a 'Remote Endpoint' dropdown set to 'IP Address' and fields for 'Remote WAN (Internet) IP Address', 'Local WAN (Internet) IP Address', 'Remote LAN (Local Network) IP Address', 'Remote LAN (Local Network) Subnet Mask', 'Local LAN (Local Network) IP Address', and 'Local LAN (Local Network) Subnet Mask'. Each IP address field has a hint (e.g., 'Hint: 1.2.3.4 or abc.com'). At the bottom, there are 'Save', 'Cancel', and 'Back' buttons.

### About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC) and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the you can always update the parameters through the Policies menu

[View Default Settings](#)

#### Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

#### Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address:  (Hint: 1.2.3.4 or abc.com)

Local WAN (Internet) IP Address:

#### Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address:  (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask:  (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address:  (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask:  (Hint: 255.255.255.0)

**附註：**要檢視VPN隧道的基本設定，請按一下**View Default Settings**。

步驟2.在New Connection Name欄位中輸入連線的名稱。此名稱用於管理目的。

步驟3.在Pre-Shared Key欄位中輸入密碼。VPN客戶端或遠端網關需要此金鑰來建立VPN連線。此金鑰的長度必須至少為8個字元。

步驟4.從Remote Endpoint下拉選單中選擇VPN的終端型別。有兩個可能的端點：

- IP地址 — IP地址將用於標識遠端網關。
- FQDN ( 完全限定域名 ) — 域名用於標識遠端網關。

步驟5.在Remote WAN(Internet)IP Address欄位中輸入遠端網關的IP地址或域名。

步驟6.在Local WAN(Internet)IP Address欄位中輸入本地網關的IP地址或域名。

步驟7.在「遠端LAN ( 本地網路 ) IP地址」欄位中輸入遠端LAN的遠端IP地址。

步驟8.在Remote LAN(Local Network)Subnet Mask欄位中輸入遠端LAN的遠端子網掩碼。

步驟9.在「本地LAN ( 本地網路 ) IP地址」欄位中輸入本地LAN的本地IP地址。

**附註：**遠端LAN的本地IP和本地LAN的本地IP應位於不同的子網中。

步驟10.在Local LAN(Local Network)Subnet Mask欄位中輸入本地LAN的本地子網掩碼。

步驟11.按一下「**Save**」以套用設定。