

# 通过FXOS机箱管理器更改或恢复FTD的密码

## 目录

[简介](#)

[先决条件](#)

[要求](#)

[使用的组件](#)

[背景信息](#)

[配置](#)

[配置](#)

[验证](#)

## 简介

Firepower(FXOS)Firepower(FTD)

## 先决条件

## 要求

Cisco 建议您了解以下主题：

- 思科Firepower威胁防御(FTD)
- 思科Firepower可扩展操作系统(FXOS)机箱管理器

## 使用的组件

- 思科Firepower威胁防御(FTD)6.2.2或更高版本
- 思科Firepower 4120安全设备FXOS 2.2版或更高版本

本文档中的信息都是基于特定实验室环境中的设备编写的。本文档中使用的所有设备最初均采用原始（默认）配置。如果您的网络处于活动状态，请确保您了解所有命令的潜在影响。

## 背景信息

在某些情况下，安全策略要求网络管理员定期更改设备的密码。

此外，也可能是设备的密码丢失，需要恢复。

在FP41xx和FP93xx安全设备上的FTD实例中，可通过FXOS机箱管理器实现。

## 配置


## 配置

要更改FTD应用的密码,执行下列步骤：

步骤1.使用管理权限用户名登录到机箱管理器。



步骤2.导航至“设备”选项卡，然后为相关FTD应用程序选择“编辑”按钮。

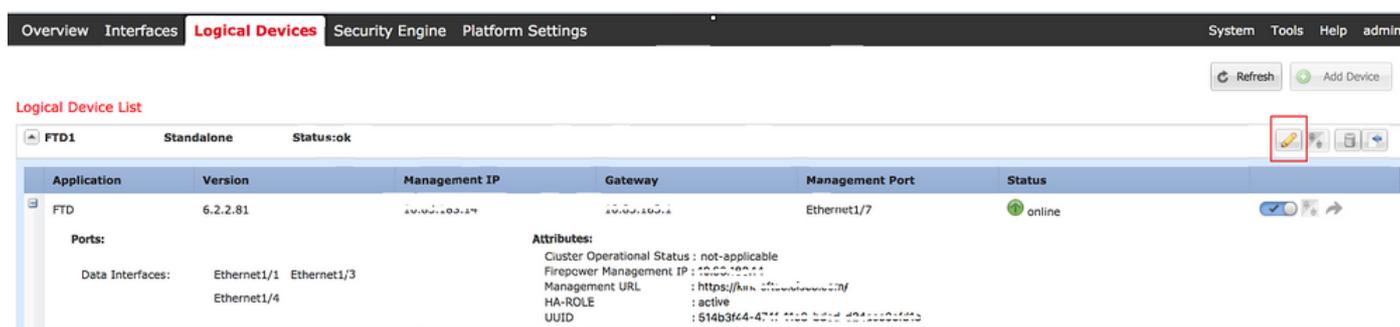

步骤3.选择FTD实例的图标，如图所示。



步骤4.显示Configuration窗口。一旦到达，导航至“设置”选项卡。

Cisco Firepower Threat Defense - Configuration

General Information Settings Agreement

Interface Information

Management Interface: Ethernet1/7

Management

Address Type: IPv4 only

IPv4

Management IP: 192.168.1.1

Network Mask: 255.255.255.0

Network Gateway: 192.168.1.254

OK Cancel

步骤5.在“密码”文本框中输入FTD应用的新密码。

Cisco Firepower Threat Defense - Configuration

General Information Settings Agreement

Registration Key: Set: Yes

Confirm Registration Key: \*\*\*\*\*

Password: \*\*\*\*\* Set: Yes

Confirm Password:

Firepower Management Center IP: 192.168.1.1

Search domains:

Firewall Mode: Transparent

DNS Servers: 192.168.1.1

Fully Qualified Hostname:

Eventing Interface:

OK Cancel

步骤6.在“确认密码”文本框中重新输入新密码。

**注意：**在新密码生效之前，在FXOS级别重新启动设备。

## Bootstrap Settings Update Confirmation



Updating the bootstrap settings from the Firepower Chassis Manager is for disaster recovery only; we recommend that you instead change bootstrap settings in the application. To update the bootstrap settings from the Firepower Chassis Manager, click **Restart Now**: the old bootstrap configuration will be overwritten, and the application will restart. Or click **Restart Later** so you can manually restart the application at a time of your choosing and apply the new bootstrap settings (**Logical Devices > Restart**).

**Note:** For FTD, if you change the management IP address, be sure to change the device IP address in **FMC (Devices > Device Management > Device tab > Management area)**. This task is not required if you specified the NAT ID instead of the device IP address in FMC.

Restart Now

Restart Later

Cancel

## 验证

通过SSH登录到FTD应用，确保已正确应用新密码。