



Optionality in Cisco NX-OS Software

This chapter describes optionality in Cisco NX-OS software.

This chapter includes the following sections:

- [Optionality in Cisco NX-OS Software, on page 1](#)
- [Using Modular Packages, on page 3](#)
- [Booting the NX-OS Image in Base or Full Mode, on page 4](#)
- [Information About RPMs, on page 4](#)
- [Information About YUM Commands, on page 15](#)
- [Configuring an FTP server and Setting up a Local FTP YUM Repository, on page 33](#)
- [Creating User Roles for Install Operation, on page 36](#)
- [Compacting Cisco NX-OS Software Images, on page 37](#)

Optionality in Cisco NX-OS Software

Beginning with Cisco NXOS Release 9.2(1), Cisco NX-OS software image supports modular package management. Cisco NX-OS software now provides flexibility to add, remove, and upgrade the features selectively without changing the base NX-OS software.


The advantages for using modular Cisco NX-OS software are:

- Lean NX-OS software
- Asynchronous delivery of the features and the fixes: Quick fixes are provided that are independent of the releases, including new features.
- Reduced footprint of binaries and libraries at run time

Cisco NX-OS software is provisioned to boot the NX-OS software in two modes as described in the following illustration:

- Base NX-OS mode
- Full NX-OS mode

Figure 1: Optionality in Cisco NX-OS Software

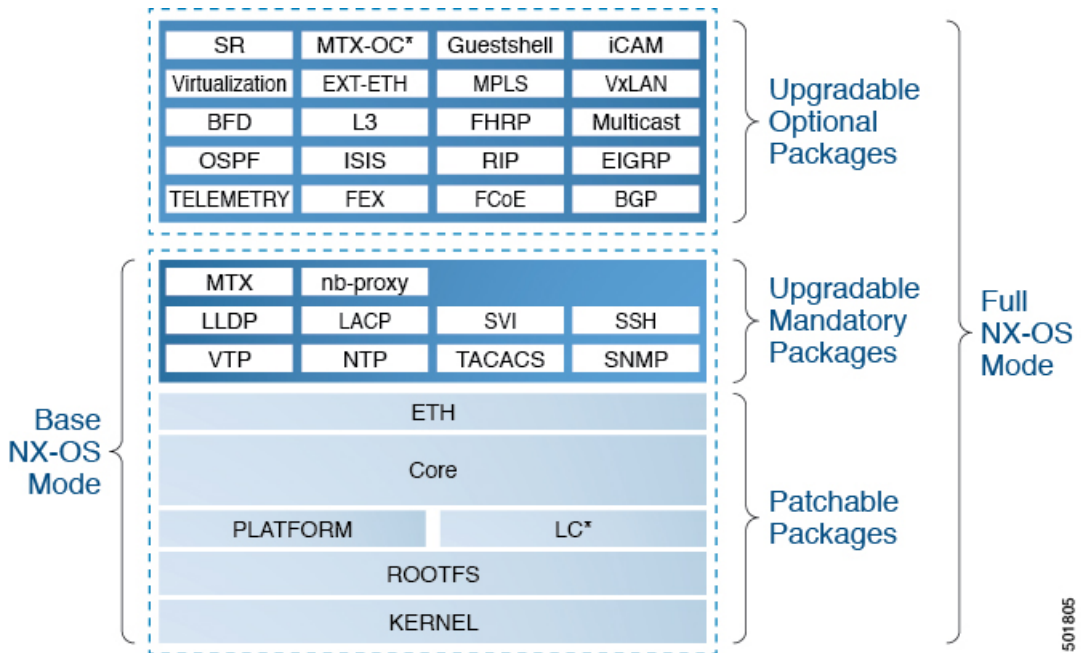

501805



Note The following optional packages are not supported in the Cisco NX-OS Release 9.2(2v):

- SR
- iCAM
- Virtualization
- MPLS
- VxLAN
- Multicast
- FEX
- FCoE

- Base NX-OS mode contains:
 - Upgradable mandatory packages
 - Patchable packages
- Full NX-OS mode contains:
 - Upgradable optional packages
 - Upgradable mandatory packages
 - Patchable packages



Note The default mode is full NX-OS mode.

In base NX-OS mode, basic Layer 2 and Layer 3 features are available. All dynamic routing features (for example, BGP, OSPF, EIGRP, RIP, and ISIS) and other optional feature RPMs are not available by default. You have to install the optional feature RPMs on top of the base image.

In full NX-OS mode, all feature RPMs are installed during boot time when Ethernet plugin is activated by the plugin manager. There is no change in the user behavior as compared to the previous releases.

Using Modular Packages

The Cisco NX-OS software image is traditionally constructed with the packaging that forms a Cisco Linux distribution. It makes upgrading certain packages difficult as each package is big in size.

This section describes a new package management for the Cisco NX-OS software image. Beginning with Cisco NX-OS Release 9.2(1), some NXOS features are considered as optional, for example, BGP and OSPF.

Each modular package has the following important characteristics:

- Upgrade functionality: The modular packages can be independently upgraded. The modular packages should be used from the same release as performing upgrades on these packages across multiple releases is not supported.
- Optionality: The modular packages are optional, for example, these packages can be removed or uninstalled at run time. The removal of the modular packages does not affect bringing-up the system and it does not affect any other functionality of the switches.



Note All APIs exported by the modular package should be used only after the installation of the feature.

RPM and YUM

RPM (RedHat Package Manager) is the package management system used for packaging in the Linux Standard Base (LSB). The RPM command options are grouped into three subgroups for:

- Querying and verifying packages
- Installing, upgrading, and removing packages
- Performing miscellaneous functions

Note that **rpm** is the command name for the main command used with RPM, while **.rpm** is the extension used for the RPM files.

YUM (Yellowdog Updater, Modified) is an open source command-line tool for RPM based Linux systems. It allows users and system administrators to easily install, update, remove, or search software packages on the systems. YUM adds the automatic updates and the package management, including dependency management, to the RPM systems. In addition to understanding the installed packages on a system, YUM works with the repositories that are collections of the packages and they are typically accessible over a network connection.

Booting the NX-OS Image in Base or Full Mode

You can now boot the NX-OS image in base or full mode. The full boot mode installs the complete NX-OS software which is similar to the software of the previous releases. This is the default boot mode. The base boot mode has no optional RPMs installed.

To use the command line option, see the following steps:

- Use the **install reset nxos base** option to install the NX-OS image in the base boot mode using the VSH prompt. After reload, the switch is in the base mode with no optional packages installed.
- Use the **install reset nxos full** option to install the NX-OS image in the full boot mode using the VSH prompt. After reload, the switch is in the full mode with the optional packages automatically installed.

For more information, see Using Install CLIs for Feature RPM Operation section.

Information About RPMs

RPMs can be upgraded or downgraded to a new software version using NXOS install commands or by using YUM commands. An upgradable RPM can be optional or mandatory.

See the following sections for more information about optional and mandatory RPMs.

Format of the RPM

The general format of a RPM is <name>-<version>-<release>.<arch>.rpm. The same format is followed for NXOS feature RPMs.

- Name: package name, for example, BFD
- Version in <x.y.x.b> format: <major.minor.patch.build_number>, for example, 2.0.1.0
- Release: The branch from which the RPM is created, for example, 9.2.2
- Arch: The architecture type of the RPM, for example, lib32_n3400-s

See the following table for more information on the naming convention, for example, bfd-2.0.0.0-9.2.2.lib32_n3400-s.rpm:

Table 1: RPM Naming Convention

RPM Naming Convention	Description
Example: bfd-2.0.0.0-9.2.2.lib32_n3400-s.rpm	
bfd	Indicates the name of the component.
2	Indicates that the RPM is not backward compatible. Configuration loss takes place during an upgrade.

RPM Naming Convention Example: bfd-2.0.0.0-9.2.2.lib32_n3400-s.rpm	Description
0	Indicates the incremental API changes/CLI changes/Schema changes with backward compatibility. It is applicable to the new features on top of the existing capabilities. No configuration is lost during an upgrade.
0	Indicates a bug fix without any functionality change. No configuration is lost during an upgrade.
0	This number tracks how many times the component has changed during the development cycle of a release. This value will be 0 for all the release images.
9.2.2	Indicates the release number or the distribution version for the RPM. It aligns to the NVR format. Since the feature RPM is only applicable to a NXOS release, this field has NXOS release version number present.
lib32_n3400-s	Indicates the architecture type of the RPM.

Optional RPMs and Their Associated Features

The optional RPMs are the RPMs that can be installed to enable the features without affecting the native NXOS behavior or they can be removed using the **install deactivate** command from the switch.

Optional RPMs, for example, EIGRP are not a part of the base software. They can be added, upgraded, and removed as required using either **yum** or **install** CLI commands from the switch.

See the following list of the optional RPMs and their associated features:

Table 2: List of Optional RPMs and Their Associated Features

Package Name	Associated Features
BGP	feature bgp
BFD	feature bfd
Container-tracker	feature container-tracker
EIGRP	feature eigrp
Ext-Eth	<ul style="list-style-type: none"> • feature sla_sender • feature sla_responder • feature sla twamp-server • feature sflow

Package Name	Associated Features
FHRP	<ul style="list-style-type: none"> • feature hsrp • feature vrrpv3
ISIS	feature isis
OSPF	<ul style="list-style-type: none"> • feature ospf • feature ospfv3
RIP	feature rip
TELEMETRY	feature telemetry

Guidelines for NX-OS Feature RPM Installation

See the following NX-OS system RPM repositories that are present in the Cisco NX-OS Series switches for the RPM management.



Note Avoid manually copying the RPMs to system repositories. Instead use the install or YUM commands.

Table 3: RPM Repositories That Are Present in the Switches

Repository Name	Repository Path	Description
groups-repo	/rpms	Part of the bundled NX-OS image. It is used to keep all the RPMs that are bundled as part of the NX-OS image. All RPMs based in this repository are known as base RPMs.

Repository Name	Repository Path	Description
localdb	/bootflash/.rpmstore/patching/localrepo	Used for RPM persistency. When a user adds a NX-OS feature RPM as part of install add command, the RPM is copied to this location and it is persisted during the reloads. User has the responsibility to clean the repository. To add a RPM to this repository, use install add command. To remove a RPM from this repository, use install remove command. YUM commands can be used to populate the repository too. The maximum space for the repository is 200Mb along with the patching repository for Cisco Nexus 9000 Series switches except Cisco Nexus 3000 Series switches. For Cisco Nexus 3000 Series switches, the maximum space for the repository is 20 Mb only.
patching	/bootflash/.rpmstore/patching/patchrepo	Used for RPM persistency. When a user adds a NX-OS patch RPM to the switch, the patch RPM is copied to this repository.
thirdparty	/bootflash/.rpmstore/thirdparty	Used for RPM persistency when a user adds a third party RPM.

The **groups-repo** and **localdb** repositories hold the NX-OS feature RPMs that should be installed during the system boot or during activation. YUM commands or **install** command can be used for the installation or the removal of these RPMs.

The following rules are applied to the feature RPM installation procedure during boot or install time:

- Only RPMs with the same NX-OS release number should be selected for the installation.
- Base RPMs cannot be added to the **localdb** repository.

Using Install CLIs for Feature RPM Operation

See the following reference table for using install CLIs for the feature RPM operations:

Table 4: Reference for Install CLIs for the Feature RPM Operations

CLI	Description
install reset	<p>This operation removes all the patches, persisted configurations, upgraded packages, third party installed packages, unsaved configurations, and reloads the switch's previous mode (Full/Base) with the default packages.</p> <p>The install reset command also performs write erase operation. The following message is displayed at the prompt:</p> <pre>switch(config)# install reset</pre> <hr/> <p>WARNING!!This operation will remove all patches, upgraded packages, persisted etc configs, third party packages installed, startup configuration(write erase) and reload the switch with default packages.</p> <hr/> <p>Do you want to proceed with reset operation? (y/n)? [n]</p>
install reset nxos base	This operation installs NXOS in base mode by removing all patches, upgraded packages, persisted etc configurations, third party packages installed, startup configuration (write erase), and reloads the switch with the default packages.
install reset nxos full	This operation installs NXOS with full mode by removing all patches, upgraded packages, persisted etc configs, third party packages installed, startup configuration (write erase), and reloads the switch with the default packages (with mandatory and optional RPMs).
install add <>	Adds an RPM file to respective repository and updates the repository (patch/feature/third-party).
install activate <rpm name>	Installs an RPM that is present in the repository.
install commit <rpm name>	Used for the patch RPMs. Makes the patch persist during reload.
install deactivate <rpm name>	Un-installs an RPM.
install remove <rpm name>	Removes an RPM file from the repository and updates the repository.
sh install active	Displays the list of the installed RPMs in the system apart from base rootfs RPMs. (features/patch/third-party).

CLI	Description
sh install inactive	Displays the list of the RPMs that are present in the repository but they are not installed.
sh install packages	Lists all the RPMs that are installed including rootfs RPMs.

Using Install CLIs for Digital Signature Support

Use the following CLI commands to install CLIs for digital signature support:

SUMMARY STEPS

1. switch#**install add bootflash:<keyfile> gpg-key**
2. switch#**install verify package <package-name>**
3. OR switch#**install verify bootflash:<RPM file>**

DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# install add bootflash:<keyfile> gpg-key Example: <pre>install add bootflash:RPM-GPG-KEY-puppetlabs gpg-key [#####] 100% Install operation 304 completed successfully at Thu Jun 19 16:40:28 2018</pre>	Cisco release RPMs are signed with Cisco GPG (GNU Privacy Guard) key. The public GPG key is present at /etc/pki/rpm-gpg/arm-Nexus9k-rel.gpg . To add other public keys from different sources, use the steps in this section.
Step 2	switch# install verify package <package-name>	Verifies the package.
Step 3	OR switch# install verify bootflash:<RPM file> Example: <pre>switch# install verify bootflash:bgp-2.0.0.0-9.2.2.lib32_n3400.rpm RSA signed switch#</pre>	Use step 2 or 3 to verify whether the RPM file is a signed or non-signed file.

Querying All Installed RPMs

Complete the following step to query all the installed RPMs:

SUMMARY STEPS

1. **show install packages**

DETAILED STEPS

	Command or Action	Purpose
Step 1	<p>show install packages</p> <p>Example:</p> <pre>switch# show install packages</pre> <p>Boot Image: NXOS Image: bootflash:/nxos.9.2.2.bin</p> <p>-----</p> <pre>Installed Packages attr.x86_64 2.4.47-r0.0 installed Unsigned aufs-util.x86_64 3.14+git0+b59a2167a1-r0.0 installed Unsigned base-files.n3400-s 3.0.14-r89.0 installed Unsigned base-passwd.lib32_x86 3.5.29-r0.1.0 installed Unsigned bash.lib32_x86 4.3.30-r0.0 installed Unsigned bfd.lib32_n3400-s 2.0.0.0-9.2.2 installed Signed bgp.lib32_n3400-s 2.0.0.0-9.2.2 installed Signed binutils.x86_64 2.25.1-r0.0 installed Unsigned bridge-utils.x86_64 1.5-r0.0 installed Unsigned busybox.x86_64 1.23.2-r0.0 installed Unsigned busybox-udhcp.x86_64 1.23.2-r0.0 installed Unsigned bzip2.x86_64 1.0.6-r5.0 installed Unsigned ca-certificates.all 20150426-r0.0 installed Unsigned cgroup-lite.x86_64 1.1-r0.0 installed Unsigned chkconfig.x86_64 1.3.58-r7.0 installed Unsigned container-tracker.lib32_n3400-s 2.0.0.0-9.2.2 installed Signed containerd-docker.x86_64 0.2.3+gitaa8187dbd3b7ad67d8e5e3a15115d3eef43a7ed1-r0.0 installed Unsigned core.lib32_n3400-s 2.0.0.0-9.2.2 installed Signed coreutils.lib32_x86 8.24-r0.0 installed Unsigned cpio.x86_64 2.12-r0.0 installed Unsigned cracklib.lib32_x86 2.9.5-r0.0 installed Unsigned cracklib.x86_64 2.9.5-r0.0 installed Unsigned createrepo.x86_64 0.4.11-r9.0 installed Unsigned cronie.x86_64 1.5.0-r0.0 installed Unsigned curl.lib32_x86 7.60.0-r0.0 installed Unsigned db.x86_64 6.0.30-r0.0 installed Unsigned dbus-1.lib32_x86 1.8.20-r0.0 installed Unsigned dhcp-client.x86_64 4.3.2-r0.0 installed Unsigned dhcp-server.x86_64 4.3.2-r0.0 installed Unsigned switch#</pre>	Queries all the installed RPMs.

Installing the RPMs Using One Step Procedure

The CLIs for both install and upgrade RPMs are the same. See the following step to install the RPMs using one step procedure:

Procedure

	Command or Action	Purpose
Step 1	<p>install add <rpm> activate</p> <p>Example:</p> <pre>switch# install add bootflash:chef.rpm activate Adding the patch (/chef.rpm) [#####] 100% Install operation 868 completed successfully at Tue May 8 11:20:10 2018 Activating the patch (/chef.rpm) [#####] 100% Install operation 869 completed successfully at Tue May 8 11:20:20 2018</pre>	Installs and activates the RPM.

Example

```
switch# show install active
Boot Image:
    NXOS Image: bootflash:/nxos.9.2.2.bin

Active Packages:
bgp-2.0.1.0-9.2.2.lib32_n3400-s
chef-12.0.0alpha.2+20150319234423.git.1608.b6eb10f-1.e15.x86_64

Active Base Packages:
lACP-2.0.0.0-9.2.2.lib32_n3400-s
lldp-2.0.0.0-9.2.2.lib32_n3400-s
mtx-device-2.0.0.0-9.2.2.lib32_n3400-s
mtx-grpc-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-infra-2.0.0.0-9.2.2.lib32_n3400-s
mtx-netconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-restconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-telemetry-2.0.0.0-9.2.2.lib32_n3400-s
ntp-2.0.0.0-9.2.2.lib32_n3400-s
nxos-ssh-2.0.0.0-9.2.2.lib32_n3400-s
snmp-2.0.0.0-9.2.2.lib32_n3400-s
svi-2.0.0.0-9.2.2.lib32_n3400-s
tacacs-2.0.0.0-9.2.2.lib32_n3400-s
vtp-2.0.0.0-9.2.2.lib32_n3400-s
switch(config)#
```

Installing the RPMs Using Two Steps Procedure

The CLIs for both install and upgrade RPMs are the same. See the following steps to install the RPMs using two steps procedure:

SUMMARY STEPS

1. `install add <rpm>`
2. `install activate <rpm>`

DETAILED STEPS

	Command or Action	Purpose
Step 1	install add <rpm> Example: <pre>switch# install add bootflash:bgp-2.0.1.0-9.2.2.lib32_n3400.rpm [#####] 100% Install operation 892 completed successfully at Thu Jun 7 13:56:38 2018 switch(config)# sh install inactive grep bgp bgp-2.0.1.0-9.2.2.lib32_n3400-s</pre>	Installs the RPM.
Step 2	install activate <rpm> Example:	Activates the RPM.

Example

```
switch#install activate bgp

[#####] 100%
Install operation 891 completed successfully at Thu Jun  7 13:53:07 2018

switch# show install active | grep bgp
bgp-2.0.0.0-9.2.2.lib32_n3400

switch# sh install inactive | grep bgp

switch#
```

Upgrading the RPMs Using One Step

The CLIs for both install and upgrade RPMs are the same. See the following steps to upgrade the RPMs:

Procedure

	Command or Action	Purpose
Step 1	<p>install add <rpm>activate upgrade</p> <p>Example:</p> <pre>switch(config)# install add bootflash:bgp-2.0.2.0-9.2.2.lib32_n3400-s.rpm activate upgrade</pre> <p>Adding the patch (/bgp-2.0.2.0-9.2.2.lib32_n3400-s.rpm) [#####] 100% Install operation 870 completed successfully at Tue May 8 11:22:30 2018</p> <p>Activating the patch (/bgp-2.0.2.0-9.2.2.lib32_n3400-s.rpm) [#####] 100% Install operation 871 completed successfully at Tue May 8 11:22:40 2018</p>	Installs the RPM.

Example

```
switch(config)# show install active
```

Boot Image:

```
NXOS Image: bootflash:/nxos.9.2.2.bin
```

Active Packages:

```
bgp-2.0.2.0-9.2.2.lib32_n3400-s
chef-12.0.0alpha.2+20150319234423.git.1608.b6eb10f-1.e15.x86_64
```

Active Base Packages:

```
lACP-2.0.0.0-9.2.2.lib32_n3400-s
lldp-2.0.0.0-9.2.2.lib32_n3400-s
mtx-device-2.0.0.0-9.2.2.lib32_n3400-s
mtx-grpc-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-infra-2.0.0.0-9.2.2.lib32_n3400-s
mtx-netconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-restconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-telemetry-2.0.0.0-9.2.2.lib32_n3400-s
ntp-2.0.0.0-9.2.2.lib32_n3400-s
nxos-ssh-2.0.0.0-9.2.2.lib32_n3400-s
snmp-2.0.0.0-9.2.2.lib32_n3400-s
svi-2.0.0.0-9.2.2.lib32_n3400-s
tacacs-2.0.0.0-9.2.2.lib32_n3400-s
vtp-2.0.0.0-9.2.2.lib32_n3400-s
```

Downgrading the RPMs

The downgrade procedure needs a special CLI attribute. See the following step to downgrade the RPMs using the one step procedure:

Procedure

	Command or Action	Purpose
Step 1	<pre>install add <rpm>activate downgrade</pre> <p>Example:</p> <pre>switch(config)# install add bootflash:bgp-2.0.1.0-9.2.2.lib32_n3400-s.rpm activate downgrade</pre> <p>Adding the patch (/bgp-2.0.1.0-9.2.2.lib32_n3400-s.rpm) [#####] 100% Install operation 872 completed successfully at Tue May 8 11:24:43 2018</p> <p>Activating the patch (/bgp-2.0.1.0-9.2.2.lib32_n3400-s.rpm) [#####] 100% Install operation 873 completed successfully at Tue May 8 11:24:52 2018</p>	Downgrades the RPM.

Example

```
switch(config)# show install active
Boot Image:
  NXOS Image: bootflash:/nxos.9.2.2.bin

Active Packages:
  bgp-2.0.1.0-9.2.2.lib32_n3400-s
  chef-12.0.0alpha.2+20150319234423.git.1608.b6eb10f-1.e15.x86_64

Active Base Packages:
  lacp-2.0.0.0-9.2.2.lib32_n3400-s
  lldp-2.0.0.0-9.2.2.lib32_n3400-s
  mtx-device-2.0.0.0-9.2.2.lib32_n3400-s
  mtx-grpc-agent-2.0.0.0-9.2.2.lib32_n3400-s
  mtx-infra-2.0.0.0-9.2.2.lib32_n3400-s
  mtx-netconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
  mtx-restconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
  mtx-telemetry-2.0.0.0-9.2.2.lib32_n3400-s
  ntp-2.0.0.0-9.2.2.lib32_n3400-s
  nxos-ssh-2.0.0.0-9.2.2.lib32_n3400-s
  snmp-2.0.0.0-9.2.2.lib32_n3400-s
  svi-2.0.0.0-9.2.2.lib32_n3400-s
  tacacs-2.0.0.0-9.2.2.lib32_n3400-s
  vtp-2.0.0.0-9.2.2.lib32_n3400-s
switch(config)#
```

Removing the RPMs

See the following steps to remove the RPMs:

SUMMARY STEPS

1. `install remove <rpm>`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><code>install remove <rpm></code></p> <p>Example:</p> <pre>switch(config)# show install inactive grep bgp bgp-2.0.0.0-9.2.2.lib32_n93400 switch(config)# install remove bgp Proceed with removing bgp? (y/n)? [n] y [#####] 100% Install operation 890 Removal of base rpm package is not permitted at Thu Jun 7 13:52:15 2018</pre>	Removes the RPM from the repository.

Information About YUM Commands

See the following sections for more information about YUM commands.



Note YUM commands do not support ctrl+c. Install commands do support ctrl+c. If YUM commands are aborted using ctrl+c, manual cleanup must be performed using `"/isan/bin/patching_utils.py --unlock"`.

Performing Package Operations Using the YUM Commands

See the following sections for performing package operations using the YUM commands:



Note YUM commands are accessed only from the BASH shell on the box and they are not allowed from the NXOS VSH terminal.



Note Make sure that as a sudo user, you have access to the super user privileges.

Finding the Base Version RPM of the Image

Use the `ls/rpms` command to find the base version RPM of the image. The base RPM version is the pre-installed RPM that is archived in the system image.

```
#ls /rpms
```

```
bfd-2.0.0.0-9.2.2.lib32_n3400-s.rpm          lacp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      nxos-ssh-2.0.0.0-9.2.2.lib32_n3400-s.rpm
bgp-2.0.0.0-9.2.2.lib32_n3400-s.rpm        lldp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      ospf-2.0.0.0-9.2.2.lib32_n3400-s.rpm
container-tracker-2.0.0.0-9.2.2.lib32_n3400-s.rpm  mtx-device-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      repodata
eigrp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
mtx-grpc-agent-2.0.0.0-9.2.2.lib32_n3400-s.rpm    rip-2.0.0.0-9.2.2.lib32_n3400-s.rpm
ext-eth-2.0.0.0-9.2.2.lib32_n3400-s.rpm        mtx-infra-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      snmp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
fhrp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
mtx-netconf-agent-2.0.0.0-9.2.2.lib32_n3400-s.rpm  svi-2.0.0.0-9.2.2.lib32_n3400-s.rpm
guestshell-2.0.0.0-9.2.2.lib32_n3400-s.rpm
mtx-restconf-agent-2.0.0.0-9.2.2.lib32_n3400-s.rpm  tacacs-2.0.0.0-9.2.2.lib32_n3400-s.rpm
ins_tor_sdk_t2-1.0.0.0-9.2.0.77.lib32_n3400-s.rpm
mtx-telemetry-2.0.0.0-9.2.2.lib32_n3400-s.rpm    telemetry-2.3.4.0-9.2.2.lib32_n3400-s.rpm
ins_tor_sdk_t3-1.0.0.0-9.2.0.77.lib32_n3400-s.rpm  nbproxy-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      vtp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
isis-2.0.0.0-9.2.2.lib32_n3400-s.rpm          ntp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
```

Checking the List of the Installed RPMs

Use the `yum list installed` command to query the feature and third party RPMs and `grep` a specific RPM. See the following example for feature RPMs:

```
bash-4.2# yum list installed | grep lib32_n3400-s
```

```
bfd.lib32_n3400-s          2.0.0.0-9.2.2          @groups-repo
core.lib32_n3400-s        2.0.0.0-9.2.2          installed
eth.lib32_n3400-s         2.0.0.0-9.2.2          installed
guestshell.lib32_n3400-s  2.0.0.0-9.2.2          @groups-repo
lacp.lib32_n3400-s        2.0.0.0-9.2.2          installed
linecard2.lib32_n3400-s   2.0.0.0-9.2.2          installed
lldp.lib32_n3400-s        2.0.0.0-9.2.2          installed
mtx-device.lib32_n3400-s  2.0.0.0-9.2.2          installed
mtx-grpc-agent.lib32_n3400-s  2.0.0.0-9.2.2          installed
mtx-infra.lib32_n3400-s   2.0.0.0-9.2.2          installed
mtx-netconf-agent.lib32_n3400-s  2.0.0.0-9.2.2          installed
mtx-restconf-agent.lib32_n3400-s  2.0.0.0-9.2.2          installed
mtx-telemetry.lib32_n3400-s  2.0.0.0-9.2.2          installed
nbproxy.lib32_n3400-s     2.0.0.0-9.2.2          installed
ntp.lib32_n3400-s         2.0.0.0-9.2.2          installed
nxos-ssh.lib32_n3400-s    2.0.0.0-9.2.2          installed
ospf.lib32_n3400-s        2.0.0.0-9.2.2          @groups-repo
platform.lib32_n3400-s    2.0.0.0-9.2.2          installed
snmp.lib32_n3400-s        2.0.0.0-9.2.2          installed
svi.lib32_n3400-s         2.0.0.0-9.2.2          installed
tacacs.lib32_n3400-s      2.0.0.0-9.2.2          installed
tor.lib32_n3400-s         2.0.0.0-9.2.0.77       installed
virtualization.lib32_n3400-s  2.0.1.0-9.2.2          @localdb
vtp.lib32_n3400-s         2.0.0.0-9.2.2          installed
...
```


Getting Details of the Installed RPMs

The `yum info <rpmname>` command lists out the detailed info of the installed RPM.

`yum info bfd`

```
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo
```

```
localdb          | 1.1 kB    00:00 ...
patching        | 951 B     00:00 ...
thirdparty      | 951 B     00:00 ...
                | 951 B     00:00 ...
```

Installed Packages

```
Name       : bfd
Arch       : lib32_n3400-s
Version    : 2.0.0.0
Release    : 9.2.2
Size       : 6.4 M
Repo       : installed
From repo  : groups-repo
Summary    : Cisco NXOS BFD
URL        : http://cisco.com/
License    : Proprietary
Description: Provides BFD support
```

Installing the RPMs

Installing the RPMs downloads the RPMs and copies the respective program to the switches. See the following example for installing the RPMs from a remote server (that is reachable in the network):

```
bash-4.3# yum install
http://10.0.0.2/modularity/rpms/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
```

```
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo
```

```
localdb          | 1.1 kB    00:00 ...
localdb          | 951 B     00:00 ...
localdb/primary  | 886 B     00:00 ...
localdb          |           1/1
patching        | 951 B     00:00 ...
thirdparty      | 951 B     00:00 ...
```

Setting up Install Process

```
bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
                | 1.6 MB    00:00
Examining /var/tmp/yum-root-RaANgb/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm:
bfd-2.0.1.0-9.2.2.lib32_n3400
```

```

Marking /var/tmp/yum-root-RaANgb/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm to be installed
Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be installed
--> Finished Dependency Resolution

```

Dependencies Resolved

Package	Repository	Arch	Version	Size
Installing:				
bfd		lib32_n3400	2.0.1.0-9.2.2	
	/bfd-2.0.1.0-9.2.2.lib32_n3400			6.4 M
Transaction Summary				

Install 1 Package

```

Total size: 6.4 M
Installed size: 6.4 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction

```

```

Installing : bfd-2.0.1.0-9.2.2.lib32_n3400

```

1/1

```

starting pre-install package version mgmt for bfd
pre-install for bfd complete
starting post-install package version mgmt for bfd
post-install for bfd complete

```

```

Installed:
  bfd.lib32_n3400 0:2.0.1.0-9.2.2

```

Complete!

See the following example for installing the RPMs from local bootflash:

```
sudo yum install /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
```

```

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

```

```

localdb          | 1.1 kB    00:00 ...
patching         | 951 B     00:00 ...
thirdparty      | 951 B     00:00 ...

```

```

Setting up Install Process
Examining /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm: bfd-2.0.1.0-9.2.2.lib32_n3400
Marking /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm as an update to
bfd-2.0.0.0-9.2.2.lib32_n3400
Resolving Dependencies

```

```
--> Running transaction check
---> Package bfd.lib32_n3400 0:2.0.0.0-9.2.2 will be updated
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be an update
--> Finished Dependency Resolution
```

Dependencies Resolved

Package Version	Arch Size	Repository
Updating: bfd 2.0.1.0-9.2.2	lib32_n3400 6.4 M	/bfd-2.0.1.0-9.2.2.lib32_n3400

Transaction Summary

Upgrade 1 Package

```
Total size: 6.4 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
  Updating   : bfd-2.0.1.0-9.2.2.lib32_n3400
```

```
1/2
starting pre-install package version mgmt for bfd
pre-install for bfd complete
starting post-install package version mgmt for bfd
post-install for bfd complete
Cleanup    : bfd-2.0.0.0-9.2.2.lib32_n3400
```

2/2

```
Updated:
  bfd.lib32_n3400 0:2.0.1.0-9.2.2
```

Complete!

See the following example for installing the RPM if it is available in a repository:

```
yum install eigrp
```

Upgrading the RPMs

See the following example for upgrading the RPMs from a remote server (that is reachable in the network):

```
bash-4.3# yum upgrade
http://10.0.0.2/modularity/rpms/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
```

```
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo
```

```

localdb | 1.1 kB 00:00 ...
patching | 951 B 00:00 ...
thirdparty | 951 B 00:00 ...
Setting up Upgrade Process
bfd-2.0.1.0-9.2.2.lib32_n3400.rpm | 1.6 MB 00:00
Examining /var/tmp/yum-root-RaANgb/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm:
bfd-2.0.1.0-9.2.2.lib32_n3400
Marking /var/tmp/yum-root-RaANgb/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm as an update to
bfd-2.0.0.0-9.2.2.lib32_n3400
Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400 0:2.0.0.0-9.2.2 will be updated
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be an update
--> Finished Dependency Resolution

```

Dependencies Resolved

Package	Repository	Arch	Version	Size
Updating:				
bfd		lib32_n3400	2.0.1.0-9.2.2	
	/bfd-2.0.1.0-9.2.2.lib32_n3400			6.4 M

Transaction Summary

Upgrade 1 Package

```

Total size: 6.4 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
** Found 1 pre-existing rpmdb problem(s), 'yum check' output follows:
busybox-1.23.2-r0.0.x86_64 has missing requires of busybox-syslog
Updating : bfd-2.0.1.0-9.2.2.lib32_n3400 1/2

starting pre-install package version mgmt for bfd
pre-install for bfd complete
starting post-install package version mgmt for bfd
post-install for bfd complete
Cleanup : bfd-2.0.0.0-9.2.2.lib32_n3400 2/2

Updated:
bfd.lib32_n3400 0:2.0.1.0-9.2.2

```

Complete!

See the following example for upgrading the RPMs from local bootflash:

```
sudo yum upgrade /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
```

```
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo
```

```
localdb          | 1.1 kB    00:00 ...
```

```
patching        | 951 B    00:00 ...
```

```
thirdparty      | 951 B    00:00 ...
```

```
                | 951 B    00:00 ...
```

```
Setting up Upgrade Process
```

```
Examining /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm: bfd-2.0.1.0-9.2.2.lib32_n3400
```

```
Marking /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm as an update to
```

```
bfd-2.0.0.0-9.2.2.lib32_n3400
```

```
Resolving Dependencies
```

```
--> Running transaction check
```

```
---> Package bfd.lib32_n3400 0:2.0.0.0-9.2.2 will be updated
```

```
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be an update
```

```
--> Finished Dependency Resolution
```

```
Dependencies Resolved
```

Package Version	Arch Size	Repository
--------------------	--------------	------------

```
Updating:
```

bfd	lib32_n3400	
2.0.1.0-9.2.2	6.4 M	/bfd-2.0.1.0-9.2.2.lib32_n3400

```
Transaction Summary
```

```
Upgrade      1 Package
```

```
Total size: 6.4 M
```

```
Is this ok [y/N]: y
```

```
Downloading Packages:
```

```
Running Transaction Check
```

```
Running Transaction Test
```

```
Transaction Test Succeeded
```

```
Running Transaction
```

```
  Updating      : bfd-2.0.1.0-9.2.2.lib32_n3400
```

```
1/2
```

```
starting pre-install package version mgmt for bfd
```

```
pre-install for bfd complete
```

```
starting post-install package version mgmt for bfd
```

```
post-install for bfd complete
```

```
  Cleanup      : bfd-2.0.0.0-9.2.2.lib32_n3400
```

```
2/2
```

```
Updated:
```

```
  bfd.lib32_n3400 0:2.0.1.0-9.2.2
```

Complete!

See the following example for upgrading the RPMs if it is available in any repository:

```
yum upgrade eigrp
```

Downgrading the RPMs

See the following example for downgrading the RPMs from a remote server (that is reachable in the network):

```
sudo yum downgrade bfd-2.0.0.0-9.2.2.lib32_n3400
```

```
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Downgrade Process
groups-repo
```

```
localdb | 1.1 kB 00:00 ...
```

```
localdb/primary | 951 B 00:00 ...
```

```
localdb | 1.3 kB 00:00 ...
```

```
patching 2/2
```

```
thirdparty | 951 B 00:00 ...
```

```
| 951 B 00:00 ...
```

```
Resolving Dependencies
```

```
--> Running transaction check
```

```
---> Package bfd.lib32_n3400 0:2.0.0.0-9.2.2 will be a downgrade
```

```
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be erased
```

```
--> Finished Dependency Resolution
```

```
Dependencies Resolved
```

Package	Version	Size	Arch	Repository
Downgrading:				
bfd	2.0.0.0-9.2.2	1.6 M	lib32_n3400	groups-repo

```
Transaction Summary
```

```
Downgrade 1 Package
```

```
Total download size: 1.6 M
```

```
Is this ok [y/N]: y
```

```
Downloading Packages:
```

```
Running Transaction Check
```

```

Running Transaction Test
Transaction Test Succeeded
Running Transaction
  Installing : bfd-2.0.0.0-9.2.2.lib32_n3400

                1/2
starting pre-install package version mgmt for bfd
pre-install for bfd complete
starting post-install package version mgmt for bfd
post-install for bfd complete
  Cleanup    : bfd-2.0.1.0-9.2.2.lib32_n3400

                2/2

```

```

Removed:
  bfd.lib32_n3400 0:2.0.1.0-9.2.2

```

```

Installed:
  bfd.lib32_n3400 0:2.0.0.0-9.2.2

```

Complete!

See the following example for downgrading the RPMs from local bootflash:

```
yum downgrade /bootflash/eigrp-2.0.0-9.2.2.lib32_n3400.rpm
```

See the following example for downgrading the RPMs if it is available in any repository:

```
yum downgrade eigrp
```

Deleting the RPMs

Deleting the RPMs de-installs the RPMs and removes any configuration CLI of the feature. Use the **yum erase** *<rpm>* command to delete the RPMs.

```
bash-4.2# sudo yum erase bfd
```

```

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Remove Process
Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400-S 0:2.0.1.0-9.2.2 will be erased
--> Finished Dependency Resolution

```

Dependencies Resolved

Package	Arch	Repository	Version	Size
Removing:				
bfd	lib32_n3400-s		2.0.1.0-9.2.2	

```

@/bfd-2.0.1.0-9.2.2.lib32_n3400-s                               6.4 M
Transaction Summary
-----
Remove          1 Package

Installed size: 6.4 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
  Erasing      : bfd-2.0.1.0-9.2.2.lib32_n3400-s

                               1/1
starting pre-remove package version mgmt for bfd
pre-remove for bfd complete

Removed:
  bfd.lib32_n3400-s 0:2.0.1.0-9.2.2

Complete!

```

Support for YUM Groups

The support for YUM groups is part of the package management. It simplifies the management of the packages for the administrators and it provides greater flexibility.

The administrators can group a list of packages (RPMs) into a logical group and they can perform various operations. YUM supports the following group commands:

- grouplist
- groupinfo
- groupinstall
- groupremove
- groupupdate

YUM groups can be broadly classified as L2, L3, routing, and management.

Using the grouplist Command

In Linux, number of packages are bundled to particular group. Instead of installing individual packages with yum, you can install particular group that will install all the related packages that belongs to the group. For example to list all the available groups, use the **yum grouplist** command:

```

bash-4.2# sudo yum grouplist

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Group Process
groups-repo

localdb                               | 1.1 kB      00:00 ...

```



```

patching                | 951 B    00:00 ...
thirdparty              | 951 B    00:00 ...
groups-repo/group      | 951 B    00:00 ...
Installed Groups:
  L2
  L3
  management
Available Groups:
  routing
Done
bash-4.3$

```

Using the groupmembers Command

Use **yum groupinfo** command to display the description and the contents of a package group. The command lists out the feature members of the group.

```

bash-4.2# sudo yum groupinfo l2

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Group Process
groups-repo

localdb                | 1.1 kB   00:00 ...
patching               | 951 B    00:00 ...
thirdparty             | 951 B    00:00 ...
                       | 951 B    00:00 ...

Group: L2
Mandatory Packages:
  lACP
  lldp
  svi
  vtp

```

Using the groupinstall Command

This command is for both install & upgrade of the members RPM. If the member is not installed, it will install the highest version available. If the member is already installed and higher RPM is available, it will upgrade that member.

```
bash-4.2# sudo yum groupinstall routing
```

```
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo
```

```
localdb | 1.1 kB 00:00 ...
```

```
localdb
```

```
patching | 951 B 00:00 ...
```

```
patching
```

```
thirdparty | 951 B 00:00 ...
```

```
thirdparty
```

```
 | 951 B 00:00 ...
```

```
Setting up Group Process
```

```
Package ospf-2.0.0.0-9.2.2.lib32_n3400-s already installed and latest version
```

```
Resolving Dependencies
```

```
--> Running transaction check
```

```
----> Package bgp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be installed
```

```
----> Package eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be installed
```

```
----> Package isis.lib32_n3400-s 0:2.0.0.0-9.2.2 will be installed
```

```
----> Package rip.lib32_n3400-s 0:2.0.0.0-9.2.2 will be installed
```

```
--> Finished Dependency Resolution
```

```
Dependencies Resolved
```

Package	Arch	Repository	Version Size
Installing:			
bgp	lib32_n3400-s	groups-repo	2.0.0.0-9.2.2 2.4 M
eigrp	lib32_n3400-s	groups-repo	2.0.0.0-9.2.2 428 k
isis	lib32_n3400-s	groups-repo	2.0.0.0-9.2.2 1.2 M
rip	lib32_n3400-s	groups-repo	2.0.0.0-9.2.2 214 k

```
Transaction Summary
```

```
Install      4 Packages
```

```
Total download size: 4.2 M
```

```
Installed size: 19 M
```

```
Is this ok [y/N]: y
```

```
Downloading Packages:
```

```
Total
```

```
132 MB/s | 4.2 MB 00:00
```

```
Running Transaction Check
```

```
Running Transaction Test
```

```
Transaction Test Succeeded
```

```
Running Transaction
```

```
Installing : rip-2.0.0.0-9.2.2.lib32_n3400-s
```

```
1/4
```

```
starting pre-install package version mgmt for rip
```

```
pre-install for rip complete
```

```
starting post-install package version mgmt for rip
```

```

post-install for rip complete
  Installing : isis-2.0.0.0-9.2.2.lib32_n3400-s

                2/4
starting pre-install package version mgmt for isis
pre-install for isis complete
starting post-install package version mgmt for isis
post-install for isis complete
  Installing : eigrp-2.0.0.0-9.2.2.lib32_n3400-s

                3/4
starting pre-install package version mgmt for eigrp
pre-install for eigrp complete
starting post-install package version mgmt for eigrp
post-install for eigrp complete
  Installing : bgp-2.0.0.0-9.2.2.lib32_n3400-s

                4/4
starting pre-install package version mgmt for bgp
pre-install for bgp complete
starting post-install package version mgmt for bgp
post-install for bgp complete

Installed:
  bgp.lib32_n3400-s 0:2.0.0.0-9.2.2          eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2
  isis.lib32_n3400-s 0:2.0.0.0-9.2.2      rip.lib32_n3400-s
0:2.0.0.0-9.2.2

Complete!

```

Using the groupupdate Command

Use the **yum groupupdate** command to update any existing installed group packages.

```

bash-4.3# yum groupupdate routing

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

localdb           | 1.1 kB    00:00 ...
localdb/primary   | 951 B     00:00 ...
localdb           | 1.9 kB    00:00 ...

                6/6
patching

thirdparty        | 951 B     00:00 ...

Setting up Group Process
Resolving Dependencies
--> Running transaction check
---> Package bgp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated

```

```

---> Package bgp.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
---> Package eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
---> Package eigrp.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
---> Package isis.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
---> Package isis.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
---> Package ospf.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
---> Package ospf.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
---> Package rip.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
---> Package rip.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
--> Finished Dependency Resolution

```

Dependencies Resolved

Package	Arch	Repository	Size	Version
Updating:				
bgp	lib32_n3400-s			
2.0.1.0-9.2.2		localdb		2.4 M
eigrp	lib32_n3400-s			
2.0.1.0-9.2.2		locald		428 k
isis	lib32_n3400-s			
2.0.1.0-9.2.2		local		1.2 M
ospf	lib32_n3400-s			
2.0.1.0-9.2.2		localdb		2.8 M
rip	lib32_n3400-s			
2.0.1.0-9.2.2		localdb		214 k
Transaction Summary				

Upgrade 5 Packages

Total download size: 7.0 M

Is this ok [y/N]: y

Downloading Packages:

Total

269 MB/s | 7.0 MB 00:00

Running Transaction Check

Running Transaction Test

Transaction Test Succeeded

Running Transaction

Updating : eigrp-2.0.1.0-9.2.2.lib32_n3400-s

1/10

starting pre-install package version mgmt for eigrp

pre-install for eigrp complete

starting post-install package version mgmt for eigrp

post-install for eigrp complete

Updating : ospf-2.0.1.0-9.2.2.lib32_n3400-s

2/10

starting pre-install package version mgmt for ospf

pre-install for ospf complete

starting post-install package version mgmt for ospf

post-install for ospf complete

Updating : rip-2.0.1.0-9.2.2.lib32_n3400-s

3/10

starting pre-install package version mgmt for rip

pre-install for rip complete

starting post-install package version mgmt for rip

```

post-install for rip complete
  Updating   : isis-2.0.1.0-9.2.2.lib32_n3400-s

                                4/10
starting pre-install package version mgmt for isis
pre-install for isis complete
starting post-install package version mgmt for isis
post-install for isis complete
  Updating   : bgp-2.0.1.0-9.2.2.lib32_n3400-s

                                5/10
starting pre-install package version mgmt for bgp
pre-install for bgp complete
starting post-install package version mgmt for bgp
post-install for bgp complete
  Cleanup    : bgp-2.0.0.0-9.2.2.lib32_n3400-s

                                6/10
Cleanup     : isis-2.0.0.0-9.2.2.lib32_n3400-s

                                7/10
Cleanup     : rip-2.0.0.0-9.2.2.lib32_n3400-s

                                8/10
Cleanup     : ospf-2.0.0.0-9.2.2.lib32_n3400-s

                                9/10
Cleanup     : eigrp-2.0.0.0-9.2.2.lib32_n3400-s

                                10/10

Updated:
  bgp.lib32_n3400-s 0:2.0.1.0-9.2.2      eigrp.lib32_n3400-s 0:2.0.1.0-9.2.2
  isis.lib32_n3400-s 0:2.0.1.0-9.2.2    ospf.lib32_n3400-s 0:2.0.1.0-9.2.2
  rip.lib32_n3400-s 0:2.0.1.0-9.2.2

Complete!

```

Using the grouperase Command

Use the **yum grouperase** command to delete the groups or all the RPM members of the group.

```

bash-4.3$ sudo yum grouperase routing

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Group Process
groups-repo

localdb          | 1.1 kB    00:00 ...
patching         | 951 B     00:00 ...
thirdparty      | 951 B     00:00 ...

Resolving Dependencies
--> Running transaction check
---> Package bgp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
---> Package eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased

```

```

---> Package isis.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
---> Package ospf.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
---> Package rip.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
--> Finished Dependency Resolution

```

Dependencies Resolved

Package	Arch	Repository	Size	Version
Removing:				
bgp	lib32_n3400-s	@groups-repo	11 M	2.0.0.0-9.2.2
eigrp	lib32_n3400-s	@groups-repo	2.0 M	2.0.0.0-9.2.2
isis	lib32_n3400-s	@groups-repo	5.7 M	2.0.0.0-9.2.2
ospf	lib32_n3400-s	@groups-repo	15 M	2.0.0.0-9.2.2
rip	lib32_n3400-s	@groups-repo	1.0 M	2.0.0.0-9.2.2

Transaction Summary

Remove 5 Packages

Installed size: 34 M

Is this ok [y/N]: y

Downloading Packages:

Running Transaction Check

Running Transaction Test

Transaction Test Succeeded

Running Transaction

Erasing : isis-2.0.0.0-9.2.2.lib32_n3400-s

1/5

starting pre-remove package version mgmt for isis

pre-remove for isis complete

Erasing : ospf-2.0.0.0-9.2.2.lib32_n3400-s

2/5

starting post-remove package version mgmt for isis

post-remove for isis complete

starting pre-remove package version mgmt for ospf

pre-remove for ospf complete

Erasing : eigrp-2.0.0.0-9.2.2.lib32_n3400-s

3/5

starting post-remove package version mgmt for ospf

post-remove for ospf complete

starting pre-remove package version mgmt for eigrp

pre-remove for eigrp complete

Erasing : rip-2.0.0.0-9.2.2.lib32_n3400-s

4/5

starting post-remove package version mgmt for eigrp

post-remove for eigrp complete

starting pre-remove package version mgmt for rip

pre-remove for rip complete

Erasing : bgp-2.0.0.0-9.2.2.lib32_n3400-s

5/5

```

starting post-remove package version mgmt for rip
post-remove for rip complete
starting pre-remove package version mgmt for bgp
pre-remove for bgp complete

Removed:
  bgp.lib32_n3400-s 0:2.0.0.0-9.2.2      eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2
  isis.lib32_n3400-s 0:2.0.0.0-9.2.2   ospf.lib32_n3400-s 0:2.0.0.0-9.2.2
  rip.lib32_n3400-s 0:2.0.0.0-9.2.2

Complete!

```

Finding Repositories

This command lists the repositories that the switch has along with the number of RPMs it has to those repositories.

```

bash-4.3# yum reposit all

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

localdb          | 1.1 kB    00:00 ...
patching         | 951 B     00:00 ...
thirdparty      | 951 B     00:00 ...
repo id         | 951 B     00:00 ...
  repo name
  status
groups-repo
  Groups-RPM Database      enabled: 37
localdb
  Local RPM Database      enabled: 6
patching
  Patch-RPM Database      enabled: 0
thirdparty
  Thirdparty RPM Database  enabled: 0
open-nxos
  open-nxos                disabled
repolist: 43

```

Finding the Installed YUM Version

See the following example for listing the installed YUM version:

```

yum --version

3.4.3

```

```

Installed: rpm-5.4.14-r0.0.x86_64 at 2018-06-02 13:04
Built      : Wind River <info@windriver.com> at 2018-04-27 08:36
Committed: Wind River <info@windriver.com> at 2018-04-27

```

```

Installed: yum-3.4.3-r9.0.x86_64 at 2018-06-02 13:05
Built      : Wind River <info@windriver.com> at 2018-04-27 08:36
Committed: Wind River <info@windriver.com> at 2018-04-27

```

Mapping the NX-OS CLI to the YUM Commands

See the following table for mapping the NX-OS CLI to the YUM commands:

Table 5: Patching Command Reference


NX-OS CLI Commands	YUM Commands
show install inactive	yum list --patch-only available
show install active	yum list --patch-only installed
show install committed	yum list --patch-only committed
show install packages	yum list --patch-only
show install pkg-info	yum info --patch-only
show install log	<p>yum history --show-patch-log</p> <p>where log_cmd:</p> <ul style="list-style-type: none"> • opid= - Log that is specific to an operation ID. • last - Shows the latest operation log. • reverse – Shows the log in reverse order. • detail – Show detailed log. • from= - Shows logging from a specific operation ID.
clear install log	<p>yum history --clear-patch-log=</p> <p>where clear_log_cmd:</p> <ul style="list-style-type: none"> • all - Clears the complete log. • - Clears the logs above this operation ID.
install add	yum install --add bootflash:/
install remove	yum install --remove
install remove inactive	yum install --remove all

NX-OS CLI Commands	YUM Commands
<code>install activate</code>	<code>yum install --no-persist --nocommit</code> Note By default, all packages are activated and committed.
<code>install deactivate</code>	<code>yum erase --nocommit</code> Note By default, all packages are de-activated and committed.
<code>install commit</code>	<code>yum install --commit</code>
<code>Install commit</code>	<code>yum install --commit all</code>

Configuring an FTP server and Setting up a Local FTP YUM Repository

For setting up a local FTP YUM repository, you have to first create an FTP server, create a local FTP YUM repository, and configure the Cisco NX-OS switch to reach the FTP server as outlined in the following illustration.

Figure 2: Configuring an FTP server and Setting up a Local FTP YUM Repository

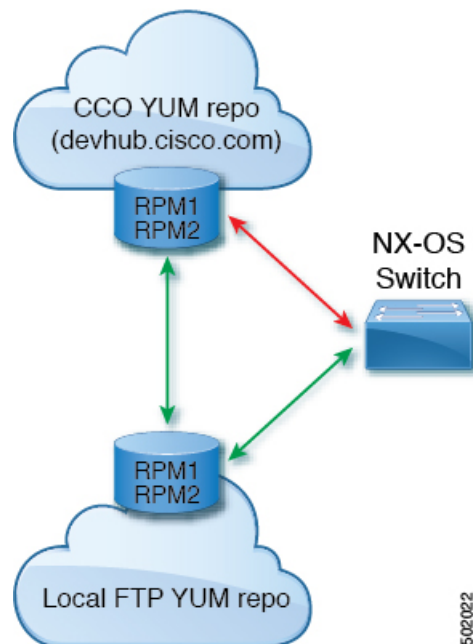

Note Visit <https://devhub.cisco.com/artifactory/open-nxos/9.2.1/> for Cisco **open-nxos** repository.

Creating an FTP Server on Red Hat Enterprise Linux 7 (RHEL7) Virtual Machine

Complete the following steps to create an FTP server on Red Hat Enterprise Linux 7 (RHEL7) Virtual Machine (VM):

SUMMARY STEPS

1. `yum install vsftpd`
2. `systemctl start vsftpd`
3. `systemctl status vsftpd`
4. `firewall-cmd --zone=public --permanent --add-port=21/tcp`
5. `firewall-cmd --zone=public --permanent --add-service=ftp`
6. `firewall-cmd --reload`
7. `wget ftp:// <ip of FTP server> /test.txt`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>yum install vsftpd</code>	Installs vsftpd, an FTP server.
Step 2	<code>systemctl start vsftpd</code>	Starts the FTP Server.
Step 3	<code>systemctl status vsftpd</code>	Checks the status of the FTP Server.
Step 4	<code>firewall-cmd --zone=public --permanent --add-port=21/tcp</code>	Allows access to the FTP services from the external systems and opens port 21.
Step 5	<code>firewall-cmd --zone=public --permanent --add-service=ftp</code>	Adds the FTP service.
Step 6	<code>firewall-cmd --reload</code>	Reloads the server.
Step 7	<code>wget ftp:// <ip of FTP server> /test.txt</code>	Hosts a file in the FTP server (for example, test.txt) and attempts Wget of that file. Note Note that <code>/var/ftp/</code> is the default home directory of the FTP server.

Creating a Local FTP YUM Repository

Complete the following steps to synchronize the external repository RPMs to the FTP server and create a local FTP YUM repository:

SUMMARY STEPS

1. `cat /etc/yum.repos.d/local.repo`
2. `bash-4.3#yum repolist`
3. `nohup reposync -r <repo-name mentioned in the local.repo> -p <directory path to sync>&`
4. `tail -f nouhup.out`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<p>cat /etc/yum.repos.d/local.repo</p> <p>Example:</p> <pre>bash-4.3#cat /etc/yum.repos.d/local.repo [localrepo] name=localrepo baseurl= https://devhub.cisco.com/artifactory/open-nxos/7.0-3-I2-1/x86_64/ enabled=1 gpgcheck=0 ssilverify=0</pre>	Creates a repository file under /etc/yum.repos.d/ , for example, creates local.repo repository and adds the base URL.
Step 2	<p>bash-4.3#yum repolist</p> <p>Example:</p> <pre>bash-4.3# yum repolist Loaded plugins: fastestmirror, langpacks Loading mirror speeds from cached hostfile * base: mirror.dhakacom.com * extras: mirror.dhakacom.com * updates: mirror.dhakacom.com repo id repo name status base/7/x86_64 CentOS-7 - Base 9,911 extras/7/x86_64 CentOS-7 - Extras 313 localrepo localrepo 687 updates/7/x86_64 CentOS-7 - Updates 711 repolist: 11,622</pre>	Checks the reachability of the repository.
Step 3	<p>nohup reposync -r <repo-name mentioned in the local.repo> -p <directory path to sync>&</p> <p>Example:</p> <pre>nohup reposync -r localrepo -p /var/ftp/ &</pre> <p>This command creates a directory with the name local.repo inside /var/ftp/ and downloads all the packages from devhub.cisco.com to the directory.</p>	Synchronizes all the packages from the external repository to the FTP server home directory.
Step 4	tail -f nouhup.out	Checks the status of the synchronization.

Configuring a Switch to Reach an FTP Server

Complete the following steps to configure a switch to reach an FTP server:

SUMMARY STEPS

1. **run bash sudo su**
2. **ip netns exec management ping <ip_address>**
3. **cat /etc/yum/repos.d/ftp.repo**
4. **ip netns exec management bash**
5. **yum repolist**

6. yum list available

DETAILED STEPS

	Command or Action	Purpose
Step 1	run bash sudo su	Logs in as a sudo user.
Step 2	ip netns exec management ping <ip_address>	Checks the reachability of the FTP server address from the switch using the ping command.
Step 3	cat /etc/yum/repos.d/ftp.repo Example: <pre>bash-4.3# cat /etc/yum/repos.d/ftp.repo [ftp] name=ftp baseurl=ftp://10.232.44.34/localrepo/ enabled=1 gpgcheck=0 sslverify=0</pre>	Creates a repository file on the switch with the FTP server address as the URL.
Step 4	ip netns exec management bash	Uses the Bash shell prompt.
Step 5	yum repolist Example: <pre>bash-4.3# yum repolist Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching, : protect-packages groups-repo 1.1 kB 00:00 ... localdb 951 B 00:00 ... patching 951 B 00:00 ... thirdparty 951 B 00:00 ... thirdparty/primary 758 B 00:00 ... thirdparty 1/1 repo id repo name status groups-repo Groups-RPM Database 37 localdb Local RPM Database 0 patching Patch-RPM Database 0 thirdparty Thirdparty RPM Database 1 ftp ftp 686 repolist: 724</pre>	Checks the reachability of newly created repository.
Step 6	yum list available	Lists the available packages in the new repository.

Creating User Roles for Install Operation

The **install** command is only available to the users of admin role. The **install** command can be available to a user by RBAC. See RBAC configuration guidelines for the same.

Compacting Cisco NX-OS Software Images

Cisco NX-OS software image compaction reduces the size of the image file before completing a copy request. Use SCP, HTTP, or HTTPS as the source and bootflash or USB as the destination. The following example uses SCP and bootflash:

```
switch# copy scp://user@scpserver.cisco.com/download/nxos.9.3.5.bin  
bootflash:nxos.9.3.5.bin compact vrf management use-kstack
```

```
user1@10.65.42.196's password:  
nxos.9.3.5.bin 100% 1887MB 6.6MB/s 04:47  
Copy complete, now saving to disk (please wait)...  
Copy complete.
```

The **compact** keyword compacts the NX-OS image prior to copying the file to the supervisor module.



Note Software image compaction is only supported on SCP, HTTP, or HTTPS. If you attempt compaction with any other protocol, the system returns the following error:

```
Compact option is allowed only with source as scp/http/https and destination  
as bootflash or usb
```



Note Compacted images are not supported with LXC boot mode.
