

Cisco Application Centric Infrastructure Multi-Pod Configuration

Cisco ACI Release 4.2

Contents

Overview	3
Deploying a Multi-Pod solution with multiple Cisco APICs	3
Configuring the IPN	4
Configuring a VRF instance	5
Configuring the OSPF process	5
Configuring multicast	6
Configuring DHCP relay	9
Configuring IPN interfaces for DHCP relay	10
Configuring Cisco APIC for a Multi-Pod setup	11
Configuring Cisco APIC	13
Using the Cisco APIC fabric setup script	14
Configuring the Multi-Pod setup	15
Verifying the configuration	26
Verifying fabric membership and topology	26
Verifying the IPN	28
Verifying external TEP interfaces on spine switches	31
Verifying spine MP-BGP EVPN	31
Verifying the COOP database entry	35
Building dynamic tunnels	36
Dynamic tunnel: Same bridge domain and EPG	37
Dynamic tunnel: Different bridge domains and EPGs	41
Appendix: Configuring the Multi-Pod setup manually	45
Configuring the routed-outside interface for EVPN	56
Updating the infrastructure interface: external routed	59
Configuring fabric membership for Pod2 spine switches	59
Creating the routed-outside interface for Pod2	61
For more information	62

Overview

The Cisco® Application Centric Infrastructure (Cisco ACI™) Multi-Pod solution is an evolution of the stretched-fabric use case. Multiple pods provide intensive fault isolation in the control plane along with infrastructure cabling flexibility. As the name indicates, it connects multiple Cisco Application Policy Infrastructure Controller (APIC) pods using a Layer 3 interpod network (IPN).

Note: Pod spine switches cannot be connected back to back. IPN supports only Open Shortest Path First (OSPF) connectivity between the IPN and the spine switches. Though each pod consists of its own spine and leaf switches, all the pods reside within the same fabric and are managed by a single APIC cluster. This approach provides a single management and policy domain across all pods for end-to-end policy enforcement. In the data plane, the Multi-Pod solution uses Multiprotocol Border Gateway Protocol (MP-BGP) Ethernet Virtual Private Network (EVPN) connectivity over the IPN between the spine switches from each pod for communication using Virtual Extensible LAN (VXLAN) encapsulation.

This document describes a Multi-Pod deployment with five APICs. You can refer to the [Cisco ACI Multi-Pod white paper](#) for additional details.

Deploying a Multi-Pod solution with multiple Cisco APICs

The topology in Figure 1 shows a Multi-Pod design with five APICs. The Multi-Pod setup uses two Cisco Nexus® 7000 Series Switches configured using Virtual Device Contexts (VDCs) for the IPN setup.

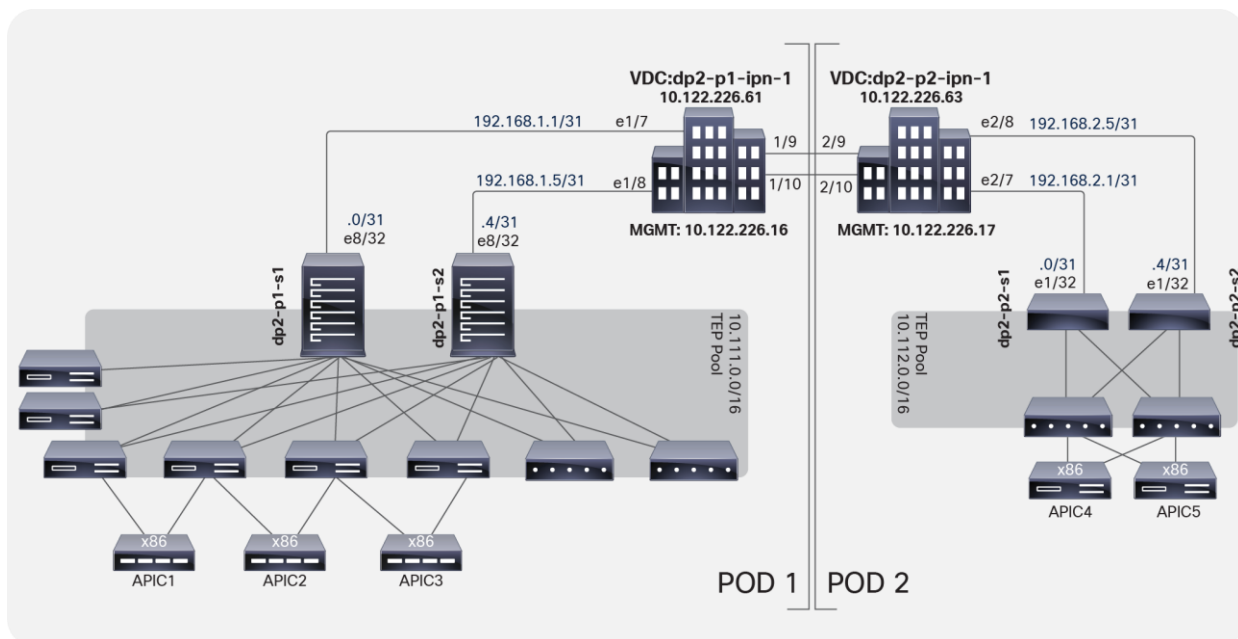


Figure 1.
Multi-Pod design topology

Follow these steps to configure a Multi-Pod solution with multiple APICs:

1. [Configure the IPN.](#)
2. [Configure a Virtual Routing and Forwarding \(VRF\) instance.](#)
3. [Configure the OSPF process.](#)
4. [Configure multicast.](#)
5. [Configure Domain Host Configuration Protocol \(DHCP\) relay.](#)
6. [Configure IPN interfaces with DHCP relay.](#)

Configuring the IPN

Note: The following instructions are for the Cisco Nexus 7000 Series. For different platforms, such as the Cisco Aggregation Services Router (ASR) running Cisco IOS® Software or the Cisco ASR 9000 Series with Cisco IOS XR Software, the configuration varies but can easily be derived.

With Link Layer Discovery Protocol (LLDP) you can verify the connections between the spine switch and the IPN ports. Make sure that you enable LLDP on the Cisco Nexus switch.

```
dp2-p1-ipn1(conf)# feature lldp
dp2-p1-ipn1(conf)# exit
!
dp2-p1-ipn1# show lldp neighbors
Capability codes:
  (R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device
  (W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other
Device ID                Local Intf             Hold-time  Capability  Port ID
dp2-p1-s1                Eth1/7                 120       BR          Eth8/32
dp2-p1-s2                Eth1/8                 120       BR          Eth8/32
dp2-p2-ipn1              Eth1/9                 120       BR          Eth2/9
dp2-p2-ipn1              Eth1/10                120       BR          Eth2/10
Total entries displayed: 4
dp2-p1-ipn1#
```

```
dp2-p2-ipn1(conf)# feature lldp
dp2-p2-ipn1(conf)# exit
!
dp2-p2-ipn1# show lldp neighbors
Capability codes:
  (R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device
  (W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other
Device ID                Local Intf             Hold-time  Capability  Port ID
dp2-p2-s1                Eth2/7                 120       BR          Eth1/32
dp2-p2-s2                Eth2/8                 120       BR          Eth1/32
dp2-p1-ipn1              Eth2/9                 120       BR          Eth1/9
```

```

dp2-p1-ipn1                               Eth2/10                               120                               BR                               Eth1/10
Total entries displayed: 4
dp2-p2-ipn1#

```

Configuring a VRF instance

As a best practice, isolate the traffic between the two fabrics across the IPN in a VRF instance because the solution exposes the underlay (overlay-1) of Cisco ACI to the IPN.

dp2-p1-ipn-1	dp2-p2-ipn-1
vrf context IPN-1	vrf context IPN-1

Note: The use of a dedicated VRF is simply a best-practice recommendation to simplify operations in the IPN when that infrastructure is used at the same time for other connectivity requirements. It is, however, possible and fully supported to use the global table routing domain for inter-site communication, if desired.

Configuring the OSPF process

On each IPN switch, enable and configure OSPF (Figure 2). As a best practice for isolating the network used between pods, create the VRF instance in the OSPF process as well. Currently, OSPF is the only supported routing protocol for peering an IPN switch and a Cisco ACI spine switch.

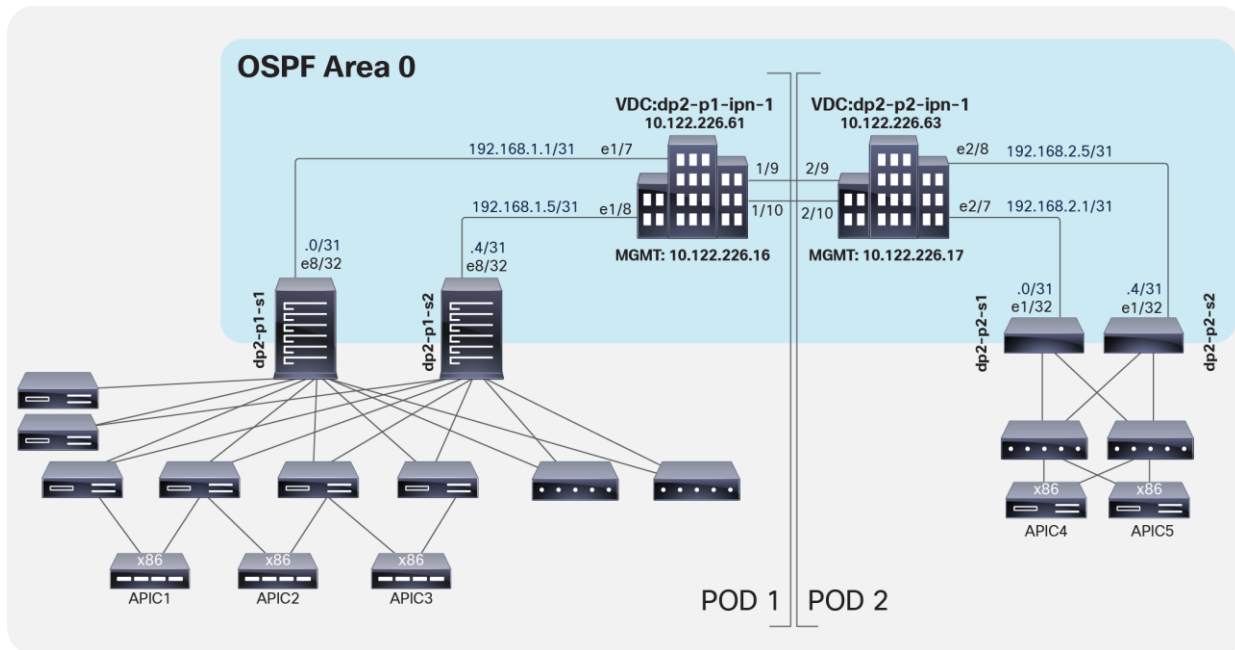


Figure 2.
OSPF configuration

dp2-p1-ipn-1	dp2-p2-ipn-1
<pre>feature ospf ! router ospf IPN vrf IPN-1 router-id 1.1.1.1 log-adjacency-changes</pre>	<pre>feature ospf ! router ospf IPN vrf IPN-1 router-id 2.2.2.1 log-adjacency-changes</pre>

Configuring multicast

Follow these guidelines for configuring multicast on the IPN switch:

- Bidirectional Protocol-Independent Multicast (Bidir PIM) for Broadcast, unknown Unicast, and Multicast (BUM) traffic between pods must be supported.
 - IPN device must support Bidir PIM for a range of at least /15.
 - Because of this requirement all first generation N9Ks are not supported IPN devices because the Broadcom T2/T2+ ASICs only support a maximum Bidir PIM range of /24. The N9Ks will let you configure larger ranges for Bidir PIM but it will not work as expected.
- The multicast Rendezvous Point (RP) must be defined.
- A loopback interface part of a subnet that includes the RP address must be defined on at least a pair of IPN devices (for the sake of redundancy).

Bidir PIM does not support the concept of an anycast rendezvous point like traditional PIM Sparse Mode (PIM-SM) Any-Source Multicast (ASM). Bidir PIM redundancy is based on a backup model, or phantom rendezvous points. In other words, a single rendezvous point handles everything, and in the case of a failure, another rendezvous point takes over. This model is achieved by configuring different subnet masks on these loopback addresses for each IPN switch, which allows the use of the longest-prefix-match logic in the routing process.

Bidir PIM is used for many-to-many communication and uses only the shared tree for traffic distribution. Shared trees handle the distribution of multicast data traffic from the rendezvous point to the receivers and use a mechanism for the sources called the Designated Forwarder (DF). The designated forwarder decides which packets need to be forwarded upstream to the rendezvous point. The designated forwarder is elected by all the PIM neighbors in a subnet advertising their unicast routes to the rendezvous point, with the router with the best route being elected. With bidir PIM, the same shared tree is used for traffic to be sent from the rendezvous point to receivers and from the sources to the rendezvous point. Thus, sources can also be receivers, and vice-versa, leading to bidirectional branches within the shared tree.

Note: The spine nodes generating and receiving BUM traffic act like multicast sources and receivers.

Figure 3 shows the multicast configuration.

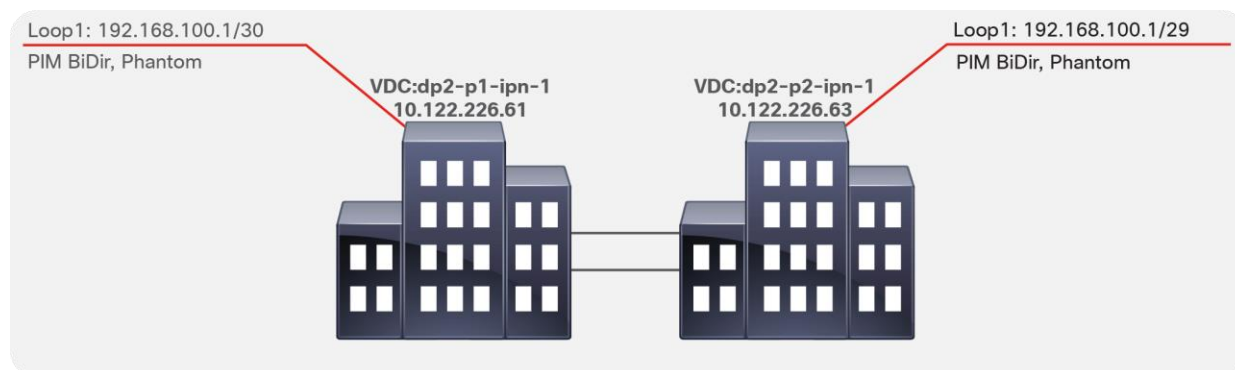


Figure 3.
Multicast configuration

dp2-p1-ipn-1	dp2-p2-ipn-1
<pre>interface loopback1 description BIDIR Phantom RP vrf member IPN-1 ip address 192.168.100.1/30 ip ospf network point-to-point ip router ospf IPN area 0.0.0.0 ip pim sparse-mode</pre>	<pre>interface loopback1 description BIDIR Phantom RP vrf member IPN-1 ip address 192.168.100.1/29 ip ospf network point-to-point ip router ospf IPN area 0.0.0.0 ip pim sparse-mode</pre>

When isolating the IPN in a VRF instance, configure the static designated rendezvous point address (part of the IP subnet previously defined under the loopback interface) under the VRF instance and use the `bidir` configuration keyword at the end of the configuration syntax.

dp2-p1-ipn-1	dp2-p2-ipn-1
<pre>vrf context IPN-1 ip pim rp-address 192.168.100.2 group- list 225.0.0.0/15 bidir ip pim rp-address 192.168.100.2 group- list 239.255.255.240/28 bidir</pre>	<pre>vrf context IPN-1 ip pim rp-address 192.168.100.2 group- list 225.0.0.0/15 bidir ip pim rp-address 192.168.100.2 group- list 239.255.255.240/28 bidir</pre>

In the configuration samples above, 192.168.100.2 is the RP address. All the devices in the IPN will see the RP as reachable via the `dp2-p1-ipn1` device, since it advertises a 192.168.100.0/30 subnet that includes the specific RP address. If that device were to fail, all the IPN routers would immediately switch to `dp2-p2-ipn-1`, which advertises the 192.168.100.0/29 subnet.

Configure the IPN Interfaces.

dp2-p1-ipn-1	dp2-p2-ipn-1
<pre>interface Ethernet1/7 mtu 9150 no shutdown</pre>	<pre>interface Ethernet2/7 mtu 9150 no shutdown</pre>
<pre>interface Ethernet1/7.4 description dp2-p1-s1 mtu 9150 encapsulation dot1q 4 vrf member IPN-1 ip address 192.168.1.1/31 ip ospf network point-to-point ip router ospf IPN area 0.0.0.0 ip pim sparse-mode no shutdown</pre>	<pre>interface Ethernet2/7.4 description dp2-p2-s3 mtu 9150 encapsulation dot1q 4 vrf member IPN-1 ip address 192.168.2.1/31 ip ospf network point-to-point ip router ospf IPN area 0.0.0.0 ip pim sparse-mode no shutdown</pre>
<pre>interface Ethernet1/8 mtu 9150 no shutdown</pre>	<pre>interface Ethernet2/8 mtu 9150 no shutdown</pre>
<pre>interface Ethernet1/8.4 description dp2-p1-s2 mtu 9150 encapsulation dot1q 4 vrf member IPN-1 ip address 192.168.1.5/31 ip ospf network point-to-point ip router ospf IPN area 0.0.0.0 ip pim sparse-mode no shutdown</pre>	<pre>interface Ethernet2/8.4 description dp2-p2-s4 mtu 9150 encapsulation dot1q 4 vrf member IPN-1 ip address 192.168.2.5/31 ip ospf network point-to-point ip router ospf IPN area 0.0.0.0 ip pim sparse-mode no shutdown</pre>
<pre>interface Ethernet1/9.4 description dp2-p2-ipn1 link 1 mtu 9150 encapsulation dot1q 4 vrf member IPN-1 ip address 192.168.3.0/31 ip ospf network point-to-point ip router ospf IPN area 0.0.0.0</pre>	<pre>interface Ethernet2/9.4 description dp2-p1-ipn1 link 1 mtu 9150 encapsulation dot1q 4 vrf member IPN-1 ip address 192.168.3.1/31 ip ospf network point-to-point ip router ospf IPN area 0.0.0.0</pre>

dp2-p1-ipn-1	dp2-p2-ipn-1
<pre> ip pim sparse-mode no shutdown interface Ethernet1/10.4 description dp2-p2-ipn1 link 2 mtu 9150 encapsulation dot1q 4 vrf member IPN-1 ip address 192.168.3.2/31 ip ospf network point-to-point ip router ospf IPN area 0.0.0.0 ip pim sparse-mode no shutdown </pre>	<pre> ip pim sparse-mode no shutdown interface Ethernet2/10.4 description dp2-p1-ipn1 link 2 mtu 9150 encapsulation dot1q 4 vrf member IPN-1 ip address 192.168.3.3/31 ip ospf network point-to-point ip router ospf IPN area 0.0.0.0 ip pim sparse-mode no shutdown </pre>

The use of subinterfaces on the links connecting the IPN devices to the spines is mandatory; it is, however, optional for the links between IPN devices and is only required when multiple VRFs need to be connected over the same physical interface.

Configuring DHCP relay

Each IPN switch connecting to a Cisco ACI spine switch needs to have the DHCP feature enabled. This feature will be used to enable DHCP relay on the IPN switch subinterfaces connected to remote pod spine switches.

dp2-p1-ipn-1	dp2-p2-ipn-1
<pre> feature dhcp service dhcp ip dhcp relay </pre>	<pre> feature dhcp service dhcp ip dhcp relay </pre>

Configuring IPN interfaces for DHCP relay

The configuration of the interfaces must include a relay to the destination IP addresses of the APICs located in the fabrics. Any DHCP request received is then forwarded. This configuration enables automatic discovery of the fabric nodes across the IPN.

dp2-p1-ipn-1	dp2-p2-ipn-1
<pre>interface Ethernet 1/7.4 ip dhcp relay address 10.111.0.1 ip dhcp relay address 10.111.0.2 ip dhcp relay address 10.111.0.3 ip dhcp relay address 10.111.0.4 ip dhcp relay address 10.111.0.5</pre>	<pre>interface Ethernet 2/7.4 ip dhcp relay address 10.111.0.1 ip dhcp relay address 10.111.0.2 ip dhcp relay address 10.111.0.3 ip dhcp relay address 10.111.0.4 ip dhcp relay address 10.111.0.5</pre>
<pre>interface Ethernet 1/8.4 ip dhcp relay address 10.111.0.1 ip dhcp relay address 10.111.0.2 ip dhcp relay address 10.111.0.3 ip dhcp relay address 10.111.0.4 ip dhcp relay address 10.111.0.5</pre>	<pre>interface Ethernet 2/8.4 ip dhcp relay address 10.111.0.1 ip dhcp relay address 10.111.0.2 ip dhcp relay address 10.111.0.3 ip dhcp relay address 10.111.0.4 ip dhcp relay address 10.111.0.5</pre>

Note: Since it is not possible to know beforehand in which pod the specific APIC nodes may get connected, the recommendation is to configure a DHCP relay statement for each APIC node on all the IPN interfaces connecting to the spines.

Configuring Cisco APIC for a Multi-Pod setup

In a Multi-Pod setup, the configuration of the APIC clusters should be specific to the pod to which they belong. Because the Tunnel Endpoint (TEP) pool for each pod must be unique, each pod has its own TEP address pool. This setup enables east-west communication for endpoints connected to separate pods via VXLAN tunnels established between the specific leaf nodes VTEP addresses taken from those not overlapping TEP address pools.

In Figure 4, the IPN routers (in this case, the Cisco Nexus 7000 Series Switches) learn routes that are redistributed from the underlay Intermediate System-to-Intermediate System (IS-IS) network of the Cisco ACI fabric (overlay-1) to the IPN OSPF process. This redistribution can occur in the reverse direction as well, with the IPN OSPF process redistributed to the Cisco ACI fabric underlay IS-IS network. This processing occurs on the spine switches. This route redistribution is also how TEPs between the pods are learned. As best practice configuration, you should use a VRF instance in the IPN routers to isolate the fabric-to-fabric network from the outside world. In a Multi-Pod setup, you do not need to expose the inside of the Cisco ACI fabric to the entire network.

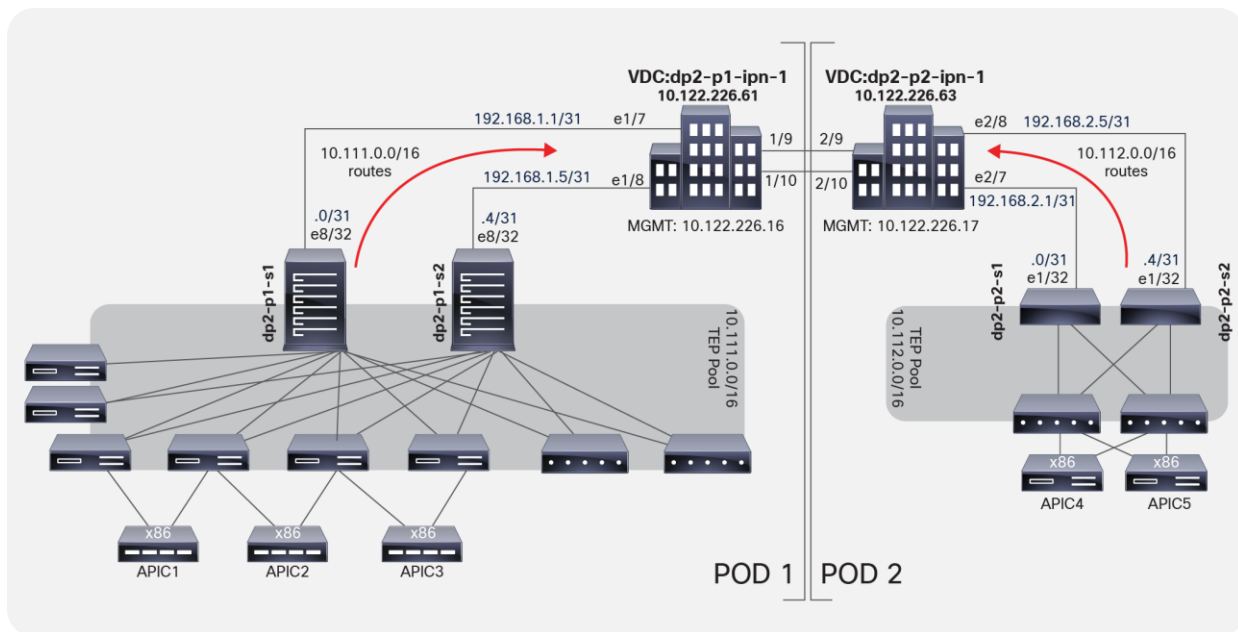


Figure 4.
IPN routers learn routes through route redistribution

You need different TEP pools so that the subnet route redistribution works correctly and each side learns the proper routes to the remote TEPs across the IPN.

You must configure the APICs for this new feature. In particular, the APICs must exist in different pods with different pod identifiers. Cisco ACI provides a pod identifier, always defined as 1. There are two scenarios:

- New (greenfield) installation: Each new APIC should exist in a pod. If you have a three-APIC cluster and you want to move one APIC to a new data center, then the best approach is to decommission this APIC, wipe the configuration, and move the APIC to the new data center (pod) to be reconfigured in that different pod.
- Existing (brownfield) installation: This scenario includes newly added and configured APIC fabrics in a new data center and pod location, with the new pod ID and appropriate configuration.

Table 1 lists the APIC fabric initialization configuration parameters. The pod ID and the TEP address pool are the critical elements.

Table 1. Cisco APIC fabric initialization configuration parameters

Configuration	APIC1	APIC2	APIC3	APIC4	APIC5
Fabric name	dp2-fabric	dp2-fabric	dp2-fabric	dp2-fabric	dp2-fabric
Fabric ID	1	1	1	1	1
Number of controllers	5	5	5	5	5
Pod ID	1	1	1	2	2
Controller ID	1	2	3	4	5
Controller name	dp2-apic1	dp2-apic2	dp2-apic3	dp2-apic4	dp2-apic5
TEP address pool	10.111.0.0/16	10.111.0.0/16	10.111.0.0/16	10.111.0.0/16	10.111.0.0/16
VLAN ID for infrastructure VLAN	3967	3967	3967	3967	3967
Administrator credentials	admin/password				
IPv6 enabled out of band	N	N	N	N	N
Management IP	<IP>/<mask>	<IP>/<mask>	<IP>/<mask>	<IP>/<mask>	<IP>/<mask>
Default gateway	<IP>	<IP>	<IP>	<IP>	<IP>

You do not need to have an APIC node in your remote Multi-Pod environment. The discovery of the fabric will occur across the IPN without the APIC nodes in the remote site.

Note: The same TEP address pool (10.111.0.0/16 in the specific example in Table 1) must be used as the initialization configuration parameter for all of the APIC nodes that are connected to the Multi-Pod fabric, independently from the specific pod to which the nodes are connected. This is because all of the APIC nodes get assigned an IP address from the TEP pool that is associated to the first pod that was brought up as part of the Multi-Pod fabric (also known as the “seed” pod).

Note: The deployment of a 5-node APIC cluster across two pods is not recommended and is only required when the total number of leaf nodes connected to the Multi-Pod fabric is more than 200. With fewer than a total of 80 leaf nodes, it is strongly recommended to deploy a 3-active-node APIC cluster, whereas between 80 and 200 leaf nodes it is possible to deploy a 4-active-node APIC cluster, leveraging two nodes per pod. For more information on this, please refer to the ACI Multi-Pod white paper below:

<https://www.cisco.com/c/en/us/solutions/collateral/data-center-virtualization/application-centric-infrastructure/white-paper-c11-737855.html>

Configuring Cisco APIC

To set up the APIC, follow these steps:

1. **Configure access policies.** Configure access policies for all the interfaces on the spine switches used to connect to the IPN. Define these policies as spine access policies. Use these policies to associate an Attached Entity Profile (AEP) for a Layer 3 domain that uses VLAN 4 for the encapsulation for the subinterface. VLAN 4 must be used; you cannot modify or change this requirement. Define these subinterfaces in the same way as normal leaf access ports. The subinterfaces are used by the infrastructure Layer 3 Outside (L3Out) interface that you define.
2. **Define the Multi-Pod environment.** In a Multi-Pod setup, you define the Fabric TEP (FTEP) address for the spines facing each other across the IPN. You also define the Layer 3 interfaces between the IPN and the spine interfaces.
3. **Configure the IPN.** The IPN creates OSPF adjacencies with the spine switches and exchanges the routes of the underlying IS-IS network part of VRF overlay-1. The configuration of the IPN defines the DHCP relay, which is critical for learning adjacencies because the DHCP frames forwarded across the IPN will reach the primary APIC in Pod1 to get a DHCP address assignment from the TEP pool. Without DHCP relay in the IPN, zero-touch provisioning will not occur for Cisco ACI nodes deployed in Pod2.
4. **Establish the interface access policies for the second pod.** If you do not establish the access policies for the second pod, then the second pod cannot complete the process of joining the fabric. You can add the device to the fabric, but it does not complete the discovery process. In Cisco ACI, OSPF adjacency cannot be established because VLAN 4, the OSPF interface profile, and the external Layer 3 definition don't exist, and the spine switch has no way to talk to the original pod. You can reuse the access policies of Pod1 as long as the spine interfaces you are using on Pod1 and Pod2 are the same. In many cases, the spine interfaces connecting the two pods will not be the same because Pod2 may have a smaller spine. If the spine interfaces in both pods are the same and the ports in all the switches also are the same, then the only action you need to take is to add the spine switches to the switch profile that you define.

Guidelines and limitations

Note the following when configuring the APIC:

- A spine switch must have an active leaf-facing link (LLDP up). Otherwise, it is deemed unused and cannot be used by the fabric.
- LLDP must be enabled on the IPN switch.
- At least one spine switch should be configured with a BGP EVPN session for peering with remote pods.
- The Round-Trip Time (RTT) is up to 50 milliseconds (ms) for Cisco ACI Release 2.3 and later.

Using the Cisco APIC fabric setup script

The fabric setup script requests a fabric ID, with 1 being the default suggested value. You then need to configure the pod ID according to the location of the APIC. For example, as shown in Table 1, APICs 4 and 5 will be in Pod2. Thus, in their respective fabric setup scripts, the pod ID value will be 2.

Cluster configuration ...

```
Enter the fabric name [ACI Fabric1 #1]: dp2-fabric
Enter the fabric ID (1-128) [1]:
Enter the number of controllers in the fabric (1-9) [3]: 5
Enter the POD ID (1-9): [1]
Enter the controller ID (1-3) [1]:
Enter the controller name [apic1]: dp2-apic1
Enter address pool for TEP addresses [10.0.0.0/16]: 10.111.0.0/16
Note: The infra VLAN ID should not be used elsewhere in your environment
      and should not overlap with any other reserved VLANs on other platforms.
Enter the VLAN ID for infra network (2-4094): 3967
Enter address pool for BD multicast addresses (GIPO) [225.0.0.0/15]:
```

Out-of-band management configuration ...

```
Enter the IP address for out-of-band management: 10.122.226.31/24
Enter the IP address of the default gateway [None]: 10.122.226.1
Enter the interface speed/duplex mode [auto]:
```

Administrator user configuration...

```
Enable strong passwords? [Y]
Enter the password for admin:
```

Configuring the Multi-Pod setup

When running ACI release 4.2(1) or newer, it is strongly recommended to use the APIC wizard to configure the Multi-Pod setup. The wizard takes care of configuring:

- An L3Out in the infra tenant specifying the spine nodes and interfaces to connect each pod to the IPN.
- Access policies for the spine interfaces connecting to the IPN.
- An internal TEP pool to be assigned to each pod.
- An external TEP pool to be assigned to each pod, used to define the control-plane IP addresses on the spines used for establishing MP-BGP EVPN adjacencies across pods and also to assign an anycast TEP address to each pod used for data-plane traffic.

The step-by-step procedure to run through the APIC wizard is shown in the rest of this section. For more information on how to set up Multi-Pod without using the APIC wizard (using manual configuration instead), please refer to Appendix.

The initial assumptions are the following:

- The first pod in the ACI fabric has been already successfully brought up, and the spines are physically connected to the IPN devices (as shown in Figure 4).
- The IPN devices are properly configured with DHCP-Relay, OSPF, and PIM enabled, as described in the “Configuring the IPN” section.
- The spine and leaf nodes in Pod2 have been powered up and properly cabled to connect with each other and with the IPN devices.

The first configuration-step required configures the connection between the spines in Pod1 and the IPN devices. This action is triggered by selecting “Add Pod” in Fabric → Inventory:

Quick Start

Summary

The **Inventory** menu displays the set of controllers, switches, and blade switches belonging to the fabric. APIC discovers new switches that are directly connected to any registered switch that it currently manages. Each APIC instance in the cluster first discovers only the leaf switch to which it is directly connected. After the leaf switch is registered with APIC, the leaf switch discovers all spine switches that are directly connected to it. As each spine switch is registered, APIC discovers all leaf switches that are connected to that spine switch. This cascaded discovery allows APIC to discover the entire fabric topology in a few simple steps.

Follow the steps below to register a new switch to the fabric and verify the topology.

Steps


- Add Remote Leaf
- Add Pod
- Validate the connected switches
- Register unregistered switches
- Validate the fabric topology

Then select “Add Pod” in the following window, which opens up:

Add Pod

Pod


Cisco ACI multipod represents the natural evolution of the original Cisco ACI stretched Fabric design and allows users to interconnect and centrally manage separate Cisco ACI fabrics.

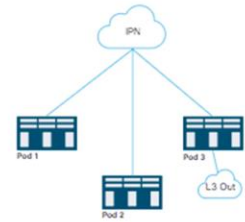

Add Pod

Virtual Pod

With an Cisco ACI Virtual Pod, you can extend Cisco ACI services and APIC management to remote Cisco ACI fabrics that have no local spine switch or Cisco APIC attached.

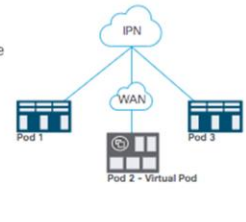

Add Virtual Pod


The window to start configuring interpod connectivity is displayed. Select “Get Started.”

Configure Interpod Connectivity

STEP 1 > Overview
1. Overview
2. IP Connectivity
3. Routing Protocol
4. External TEP
5. Confirmation


Warning: Physical Pod to IPN connectivity is not configured. This connectivity is a prerequisite before extending ACI to another location. Follow these steps to configure Pod to IPN connectivity:

IP Connectivity



The interpod network (IPN) connects Cisco ACI locations to provide end-to-end network connectivity. To achieve this, spines need IP connectivity to the IPN. Identify spines and interfaces that will communicate with the IPN. IP configuration is required for at least one interface of each spine.


Routing Protocols



OSPF is used in the underlay to peer between the physical spines and the IPN. To configure OSPF, you need an **OSPF Area ID**, an **Area Type** and **OSPF Interface Policy** specific settings.

BGP is used between physical and virtual pods to exchange overlay connectivity information. This wizard provides default configuration for BGP peering.

External TEP



The physical pod uses external TEP addresses to communicate with remote locations. Identify a subnet that is routable across the network connecting the different locations. It must not overlap with existing TEP pools.

Cancel
Get Started

In the next step, you need to select the specific interfaces of the spine nodes connected to the IPN nodes, and assign them their IP addresses. To add more spine nodes (two in our examples), you can hit the “+” button. When you are finished, hit “Next.”

Configure Interpod Connectivity

STEP 2 > IP Connectivity

1. Overview 2. IP Connectivity 3. Routing Protocol 4. External TEP 5. Confirmation

Pod — IP Connectivity — OSPF — IPN — IP Connectivity — External Location

MP BGP EVPN

IP Connectivity

The interpod network (IPN) connects Cisco ACI locations to provide end-to-end network connectivity. To achieve this, spines need IP connectivity to the IPN. Identify each spine by entering its node ID and define the interfaces that are connected to the IPN. Also provide IP configuration for at least one interface for each spine. Multiple interfaces are supported. It is best to have the same MTU set on all spine-to-IPN interfaces.

Spine ID: 1101

Interfaces

Interface	IPv4 Address	MTU (bytes)
8/32	192.168.1.0/31	9150

Spine ID: 1102

Interfaces

Interface	IPv4 Address	MTU (bytes)
8/32	192.168.1.4/31	9150

Previous Cancel Next

A window opens up to allow enabling of the OSPF routing protocol on the spines' interfaces. As shown in Figure 2, we are here using OSPF area 0, extending between pods across the IPN.

Configure Interpod Connectivity

STEP 3 > Routing Protocol

1. Overview 2. IP Connectivity 3. Routing Protocol 4. External TEP 5. Confirmation

Pod IPN External Location

MP BGP EVPN

IP Connectivity OSPF

Routing Protocols

OSPF is used in the underlay to peer between the physical spines and the IPN. Configure the OSPF **Area ID**, an **Area Type** and OSPF **Interface Policy**. OSPF interface policy contains OSPF-specific settings like OSPF network type, interface cost, and timers.

OSPF Use Defaults:

Area ID: 0

Area Type: **NSSA area** Regular area Stub area

Interface Policy: select an option

default
common

Create OSPF Interface Policy

BGP Use Defaults:

As shown above, another requirement is to create a specific OSPF Interface Policy: in our example, we want to ensure that the policy specifies point-to-point as the network type of the OSPF adjacencies.

Create OSPF Interface Policy

Name: OSPF-P2P

Description: optional

Network Type: **Broadcast** Point-to-point Unspecified

Priority: 1

Cost of Interface: unspecified

Interface Controls:

Advertise subnet
 BFD
 MTU ignore
 Passive participation

Hello Interval (sec): 10

Dead Interval (sec): 40

Retransmit Interval (sec): 5

Transmit Delay (sec): 1

Cancel Submit

After submitting the OSPF interface policy configuration, click “Next” to move to the following step.

Configure Interpod Connectivity ? ✕

STEP 4 > External TEP
1. Overview
2. IP Connectivity
3. Routing Protocol
4. External TEP
5. Confirmation

External TEP

The physical pod uses external TEP to communicate with remote locations. Configure a subnet that is routable across the network connecting the different locations. The external TEP pool must not overlap external TEP pools belonging to other pods. The pool size should be between /27 and /22. The pool should be large enough to address all Cisco APICs, all spines, all border leaves, pod-specific TEP addresses and spine router IDs.

The wizard automatically allocates addresses for pod-specific TEP addresses and spine router IDs from the external TEP pool.
 Use Defaults:

Pod:	Internal TEP Pool:	External TEP Pool:	Data Plane TEP IP:
1	10.0.0.0/16	<input style="border: 1px solid #0070c0;" type="text" value="192.168.10.0/24"/>	<input type="text" value="192.168.10.1/32"/>

Spine ID:	Router ID:	Loopback Address:
1101	<input type="text" value="192.168.10.3"/>	<input type="text"/> <small>Leave blank to use Router ID</small>
1102	<input type="text" value="192.168.10.4"/>	<input type="text"/> <small>Leave blank to use Router ID</small>

In this step you need to specify an “External TEP pool,” which must be routable across the IPN connecting the pods; this is used to dynamically assign a unique Router-ID address to each spine node and a common Data Plane TEP IP address to all the spines in the pod (anycast TEP). The Router-ID will be used to establish MP-BGP EVPN peerings with the spine nodes in remote pods, whereas the anycast TEP address represents the next-hop for all the EVPN prefixes (MAC and IP addresses for locally discovered endpoints) advertised between pods. Then click “Next” to move to the final step.

Note: It is best practice to specify a network prefix different from the one used to address the physical connection between the spine nodes and the IPN and between the IPN nodes. This simplifies troubleshooting, because it is easier to track those IP addresses that are used for different purposes. Also, the mask for the external TEP pool subnet must have a length of between /22 and /29.

Configure Interpod Connectivity

STEP 5 > Confirmation

1. Overview | 2. IP Connectivity | 3. Routing Protocol | 4. External TEP | 5. Confirmation

Here is the list of policies this wizard will create, you can change these names if needed

Attachable Access Entity Profiles:

External EPG:

Fabric External Connection Policy:

Fabric External Routing Profile:

L3 Domain:

L3Out:

Logical Interface Profile:

Logical Node Profile:

Spine Access Port Policy Groups:

VLAN Pool:

A confirmation page is finally displayed, showing all the configuration objects that are going to be created as the result of the simple steps taken during the wizard configuration. Those are all the objects that otherwise must be manually configured, as described in Appendix. Click “Finish.”

A summary window is shown; at this point the spines in Pod1 should successfully have established OSPF peering with the directly connected IPN devices. It is worth pointing out how at this point also a “Fabric External Connection Policy” has been dynamically created. This can be seen as part of the “infra” tenant configuration:

The screenshot shows the APIC interface with the 'infra' tenant selected. The 'Fabric Ext Connection Policies' section is expanded, showing a table with the following data:

ID	Name	Global Route Target
1	default	extended:as2-nn4:5:16

Selecting the specific policy, we can display the following information:

Intrasite/Intersite Profile - Fabric Ext Connection Policy default

Policy Faults History

Properties

Fabric ID: 1

Name: default

Community: extended.as2-nn4:5:16
Ex: extended.as2-nn4:5:16

Enable Pod Peering Profile:

Pod Peering Profile

Peering Type: Full Mesh Route Reflector

Password:

Confirm Password:

Pod Connection Profile

Pod ID	Data Plane TEP	Multi-site Unicast Data Plane TEP
1	192.168.10.1/32	

Fabric External Routing Profile

Name	Subnet
multipodL3Out_RoutingProfile	192.168.1.0/31, 192.168.1.2/31

A community value is automatically assigned to allow the exchange of EVPN prefixes with the spines in remote pods. Also, the EVPN peering type is configured, by default, for full mesh. It is strongly recommended to keep the full mesh configuration for a Multi-Pod fabric that has up to three pods. External route reflectors could then be introduced, if really desired, for a deployment with a larger number of pods (the configuration of E-RRs is not covered in this paper). Finally, the data-plane TEP (anycast TEP) assigned to all the spines in the pod is also displayed here, together with the IP prefixes assigned to the underlay connection between the spine nodes and the IPN devices (this is needed to ensure those prefixes are then redistributed into the IS-IS control plane running inside each pod).

If at this point you are ready to add a second pod, you can start the wizard workflow simply by selecting “Add Physical Pod.”

Note: A second pod can also be added later on by going back to Fabric → Inventory and selecting “Add Pod.”

Add Physical Pod



STEP 2 > Pod Fabric

- 1. Overview
- 2. Pod Fabric**
- 3. Routing Protocol
- 4. External TEP
- 5. Confirmation



IP Connectivity

Every pod in Cisco ACI needs a pod ID. Choose a unique pod ID.

A pod uses a pool of addresses to allocate IPs for spines, leaves, and virtual leaves. This pool is called a TEP pool, and its addresses are distributed by the Cisco APIC using DHCP. Configure a TEP pool that does not overlap with existing TEP pools.

The interpod network (IPN) connects Cisco ACI locations to provide end-to-end network connectivity. To achieve this, spines need IP connectivity IPN.

Identify spines by entering their node IDs. For each spine, define the interfaces that are connected to the IPN and provide IPN configuration for at least one interface for each spine. Multiple interfaces are supported. It is best to have the same MTU set on all spine-to-IPN interfaces. Configure the IPN to act as a DHCP relay pointing to Cisco APIC.

Pod Configuration

Pod ID:

Pod TEP Pool:
[View existing TEP Pools](#)

Spine ID:



Interface	IPv4 Address	MTU (bytes)
<input type="text" value="1/32"/>	<input type="text" value="192.168.2.0/31"/>	<input type="text" value="9150"/>

Spine ID:



Interface	IPv4 Address	MTU (bytes)
<input type="text" value="1/32"/>	<input type="text" value="192.168.2.4/31"/>	<input type="text" value="9150"/>

Previous

Cancel

Next

In the “Add Physical Pod” window, specify the spine nodes in Pod2 and configure their interfaces connected to the IPN, similarly to how it was done for Pod1. At the end click “Next.”

Add Physical Pod

STEP 3 > Routing Protocol

1. Overview 2. Pod Fabric 3. Routing Protocol 4. External TEP 5. Confirmation

MP BGP EVPN

Pod IP Connectivity OSPF IPN External Location

Routing Protocols

OSPF is used in the underlay to peer between the physical spines and the IPN. Configure the OSPF **Area ID**, an **Area Type** and OSPF **Interface Policy**. OSPF interface policy contains OSPF-specific settings like OSPF network type, interface cost, and timers.

OSPF

Area ID:

Area Type: NSSA area Regular area Stub area

Area Cost:

Interface Policy:

For sub-interfaces

Notice above how the wizard assumes that the same OSPF area 0 (“backbone”) is extended across the pods through the IPN. As a consequence, the only required configuration in this window is the selection of the same OSPF Interface Policy already used for Pod1. Click “Next” to move to the next page.

Add Physical Pod

STEP 4 > External TEP

1. Overview 2. Pod Fabric 3. Routing Protocol 4. External TEP 5. Confirmation

MP BGP EVPN

Pod IP Connectivity OSPF IPN IP Connectivity pPod

Pod Configuration

External TEP addresses are used by the physical Pod to communicate with remote locations. Configure a subnet that is routable across the network connecting the different locations. The external TEP pool cannot overlap with other Pods internal or external TEP pools. The pool size should be between /27 and /22. The pool should be large enough to address all APICs, all spines, all border leaves, pod-specific TEP addresses, and spine router IDs.

The wizard will automatically allocate addresses for pod-specific TEP addresses and spine router IDs from the external TEP pool. Proposed addresses can be modified, but modified addresses must be outside of the external TEP pool.

Use Defaults:

Pod:	Internal TEP Pool:	External TEP Pool:	Data Plane TEP IP:
1	10.0.0.0/16	192.168.10.0/24	192.168.10.1/32
2	10.112.0.0/16	<input type="text" value="192.168.20.0/24"/>	<input type="text" value="192.168.20.1/32"/>

Node:	Router ID:	Loopback Address:
2101	<input type="text" value="192.168.20.3"/>	<input type="text"/>
		<small>Leave blank to use Router ID</small>
Node:	Router ID:	Loopback Address:
2102	<input type="text" value="192.168.20.4"/>	<input type="text"/>
		<small>Leave blank to use Router ID</small>

A separate External TEP pool 192.168.20.0/24 can be used for Pod2, as shown above. Click “Next.”

Add Physical Pod
?
✕

STEP 5 > Confirmation

1. Overview
2. Pod Fabric
3. Routing Protocol
4. External TEP
5. Confirmation

Here is the list of policies this wizard will create, you can change these names if needed

Attachable Access Entity Profiles:

Fabric External Connection Policy:

Fabric External Routing Profile:

L3 Domain:

L3Out:

Logical Interface Profile:

Logical Node Profile:

Spine Access Port Policy Groups:

VLAN Pool:

The confirmation page is displayed showing all the objects that are going to be created. Click “Finish.”

At this point, all the infra configuration required to connect Pod2 as well to the IPN is completed, and the auto-discovery process can start to ensure that configuration can be dynamically provisioned to all the spine and leaf nodes in Pod2.

In order for this process to be completed, it is required to ensure that all the nodes in Pod2 are registered as part of the fabric. This can be done from Fabric → Inventory accessing the Fabric Membership table.

Fabric Membership
☰
?

Registered Nodes
Nodes Pending Registration
Unreachable Nodes
Unmanaged Fabric Nodes

0

Unsupported

0

Undiscovered

1

Unknown

Serial Number	Pod ID	Node ID	RL TEP Pool	Name	Node Type	Supported Model	SSL Certificate	Status	
FDO220609KT	1	0	0		Spine	yes	n/a		<div style="border: 1px solid #ccc; padding: 2px; font-size: 0.8em;"> <div style="background-color: #0070c0; color: white; padding: 2px;">Create Fabric Node Member</div> <div style="padding: 2px;">Register</div> <div style="padding: 2px;">Edit Node and Rack Names</div> <div style="padding: 2px;">Remove From Controller</div> <div style="padding: 2px;">Delete</div> </div>

As shown above, the spine nodes in Pod2 should dynamically appear as part of the “Nodes Pending Registration” tab. At this point it is possible to select each node displayed there, identify the role it should have, based on its unique serial number, and register it as part of the fabric.

Register

Serial Number: FDO220609KT

Pod ID: 2

Node ID: 2101

Node Name: Pod2-Spine1

Role: spine

Rack Name: select

Cancel Register

Above is the information required to register a node as the first spine of Pod2. After clicking “Register,” the registration process will start and the spine will receive the required configuration from the APIC nodes connected in Pod1. Once the auto-provisioning process is completed for the spine, it is possible to repeat the same registration step for all the other nodes in Pod2.

At the end of the registration process for Pod2, it is also possible to verify that the fabric’s External Connection Policy in the “infra” tenant has been dynamically updated to include the information relative to Pod2.

Intrasite/Intersite Profile - Fabric Ext Connection Policy default

Policy Faults History

Properties

Fabric ID: 1

Name: default

Community: extended.as2-nn4.5:16
Ex: extended.as2-nn4.5:16

Enable Pod Peering Profile:

Pod Peering Profile

Peering Type: Full Mesh Route Reflector

Password:

Confirm Password:

Pod Connection Profile

Pod ID	Data Plane TEP	Multi-site Unicast Data Plane TEP
1	192.168.10.1/32	
2	192.168.20.1/32	

Fabric External Routing Profile

Name	Subnet
multiPodL3Out_RoutingProfile	192.168.1.0/31, 192.168.1.2/31, 192.168.2.0/31, 192.168.2.2/31

As a last step, it is then possible to run the setup script on the two APIC nodes connected to the leaf nodes in Pod2, using the information displayed in Table 1. At the end of this process, the two APIC nodes will join the cluster with the three nodes already deployed in Pod1.

Verifying the configuration

Follow the steps in this section to verify the preceding configuration.


Verifying fabric membership and topology

Return to the Fabric Membership list and verify that the spine switches have their TEP addresses, which allowed discovery of the connected leaf switches.

Fabric Membership										
Serial Number	Pod ID	Node ID	Node Name	Rack Name	Model	Role	IP	Supported Model	SSL Certificate	Status
FDO20231J3S	1	1206	dp2-p1-l6		N9K-C93180Y...	leaf	10.111.152.6...	True	yes	Active
FDO20231J32	1	1205	dp2-p1-l5		N9K-C93180Y...	leaf	10.111.152.6...	True	yes	Active
FGE180305R9	1	1102	dp2-p1-s2		N9K-C9508	spine	10.111.152.6...	True	yes	Active
FGE180406HN	1	1101	dp2-p1-s1		N9K-C9508	spine	10.111.152.6...	True	yes	Active
SAL1811NRLQ	1	1204	dp2-p1-l4		N9K-C9396PX	leaf	10.111.152.7...	True	yes	Active
SAL1813P3UT	1	1208	dp2-p1-bl2		N9K-C9396PX	leaf	10.111.200.6...	True	yes	Active
SAL1814PTB0	1	1202	dp2-p1-l2		N9K-C9396PX	leaf	10.111.152.6...	True	yes	Active
SAL1814PTDX	1	1207	dp2-p1-bl1		N9K-C9396PX	leaf	10.111.152.7...	True	yes	Active
SAL1815Q3ER	1	1201	dp2-p1-l1		N9K-C9396PX	leaf	10.111.152.6...	True	yes	Active
SAL1815Q3HL	1	1203	dp2-p1-l3		N9K-C9396PX	leaf	10.111.152.7...	True	yes	Active
SAL1925H04B	1	0			N9K-C9372PX	leaf	0.0.0.0	True	n/a	
SAL1925H08C	1	0			N9K-C9372PX	leaf	0.0.0.0	True	n/a	
SAL18516J5Z	2	2101	dp2-p2-s1		N9K-C9336PQ	spine	10.112.224.6...	True	yes	Active
SAL18516J6W	2	2102	dp2-p2-s2		N9K-C9336PQ	spine	10.112.224.6...	True	yes	Active

After the discovered leaf switches are acknowledged in the fabric, the Topology screen should show all your switches. If all your IPN switches do not appear on in the IPN topology, you can verify their connectivity under Unmanaged Fabric Nodes.

Topology - Pods: 2

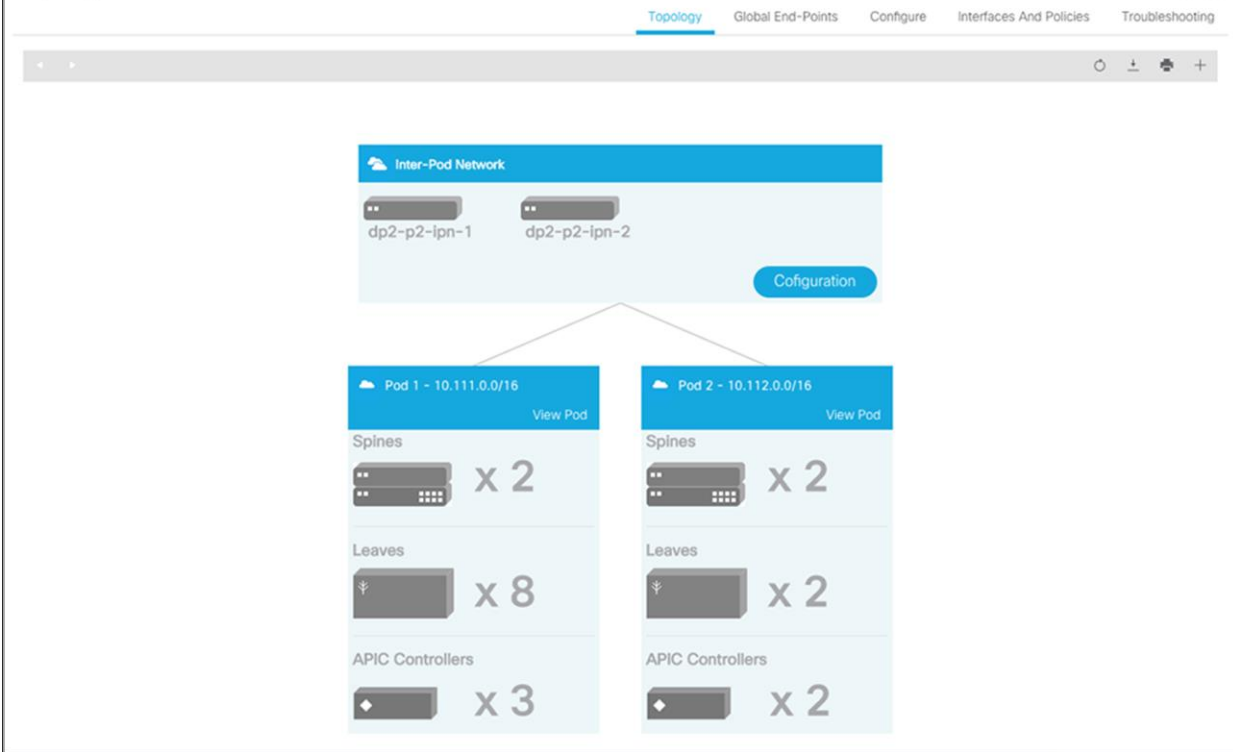

Unmanaged Fabric Nodes

Refresh Download

ID	System Name
10.122.226.61	dp2-p1-ipn1
10.122.226.63	dp2-p2-ipn1

Serial Number	Pod ID	Node ID	Node Name	Rack Name	Model	Role	IP	Supported Model	SSL Certificate	Status
FGE180406HN	1	1101	dp2-p1-s1		N9K-C9508	spine	10.111.152.6...	True	yes	Active
FGE180305R9	1	1102	dp2-p1-s2		N9K-C9508	spine	10.111.152.6...	True	yes	Active
SAL1815Q3ER	1	1201	dp2-p1-l1		N9K-C9396PX	leaf	10.111.152.6...	True	yes	Active
SAL1814PTB0	1	1202	dp2-p1-l2		N9K-C9396PX	leaf	10.111.152.6...	True	yes	Active
SAL1815Q3HL	1	1203	dp2-p1-l3		N9K-C9396PX	leaf	10.111.152.7...	True	yes	Active
SAL1811NRLQ	1	1204	dp2-p1-l4		N9K-C9396PX	leaf	10.111.152.7...	True	yes	Active
FDO20231J32	1	1205	dp2-p1-l5		N9K-C93180Y...	leaf	10.111.152.6...	True	yes	Active
FDO20231J3S	1	1206	dp2-p1-l6		N9K-C93180Y...	leaf	10.111.152.6...	True	yes	Active
SAL1814PTDX	1	1207	dp2-p1-bl1		N9K-C9396PX	leaf	10.111.152.7...	True	yes	Active
SAL1813P3UT	1	1208	dp2-p1-bl2		N9K-C9396PX	leaf	10.111.200.6...	True	yes	Active
SAL18516J5Z	2	2101	dp2-p2-s1		N9K-C9336PQ	spine	10.112.224.6...	True	yes	Active
SAL18516J6W	2	2102	dp2-p2-s2		N9K-C9336PQ	spine	10.112.224.6...	True	yes	Active
SAL1925H08C	2	2201	dp2-p2-l1		N9K-C9372PX	leaf	10.112.32.64/...	True	yes	Active
SAL1925H04B	2	2202	dp2-p2-l2		N9K-C9372PX	leaf	10.112.160.6...	True	yes	Active

Verifying the IPN

To verify the IPN, first check the OSPF adjacency status between the Cisco Nexus 7000 Series Switch and the adjacent spine switches.

```
dp2-p1-ipn1# show ip ospf neighbors vrf IPN-1
```

```
OSPF Process ID IPN VRF IPN-1
```

```
Total number of neighbors: 4
```

Neighbor ID	Pri	State	Up Time	Address	Interface
192.168.10.3	1	FULL/ -	02:46:04	192.168.1.0	Eth1/7.4
192.168.10.4	1	FULL/ -	02:46:02	192.168.1.4	Eth1/8.4
2.2.2.1	1	FULL/ -	1w6d	192.168.12.1	Po910

```
dp2-p1-ipn1#
```

With the adjacency established, you should see the learned routes into this VRF instance from the adjacent spine switches.

```
dp2-p1-ipn1# show ip route vrf IPN-1
```

```
IP Route Table for VRF "IPN-1"
```

```
'*' denotes best ucast next-hop
```

```
'**' denotes best mcast next-hop
```

```
'[x/y]' denotes [preference/metric]
```

```
'%<string>' in via output denotes VRF <string>
```

```
10.111.0.0/16, ubest/mbest: 2/0
```

```
*via 192.168.1.0, Eth1/7.4, [110/20], 02:44:02, ospf-IPN, type-2
```

```
*via 192.168.1.4, Eth1/8.4, [110/20], 02:44:02, ospf-IPN, type-2
```

```
10.111.0.1/32, ubest/mbest: 2/0
```

```
*via 192.168.1.0, Eth1/7.4, [110/20], 02:44:02, ospf-IPN, type-2
```

```
*via 192.168.1.4, Eth1/8.4, [110/20], 02:44:02, ospf-IPN, type-2
```

```
10.111.0.2/32, ubest/mbest: 2/0
    *via 192.168.1.0, Eth1/7.4, [110/20], 02:44:02, ospf-IPN, type-2
    *via 192.168.1.4, Eth1/8.4, [110/20], 02:44:02, ospf-IPN, type-2
10.111.0.3/32, ubest/mbest: 2/0
    *via 192.168.1.0, Eth1/7.4, [110/20], 02:44:02, ospf-IPN, type-2
    *via 192.168.1.4, Eth1/8.4, [110/20], 02:44:02, ospf-IPN, type-2
10.111.0.4/32, ubest/mbest: 1/0
    *via 192.168.12.1, Po910, [110/20], 02:25:25, ospf-IPN, type-2
10.111.0.5/32, ubest/mbest: 1/0
    *via 192.168.12.1, Po910, [110/20], 02:25:25, ospf-IPN, type-2
10.111.0.33/32, ubest/mbest: 2/0
    *via 192.168.1.0, Eth1/7.4, [110/20], 02:44:02, ospf-IPN, type-2
    *via 192.168.1.4, Eth1/8.4, [110/20], 02:44:02, ospf-IPN, type-2
10.111.0.34/32, ubest/mbest: 2/0
    *via 192.168.1.0, Eth1/7.4, [110/20], 02:44:02, ospf-IPN, type-2
    *via 192.168.1.4, Eth1/8.4, [110/20], 02:44:02, ospf-IPN, type-2
10.111.0.35/32, ubest/mbest: 2/0
    *via 192.168.1.0, Eth1/7.4, [110/20], 02:44:02, ospf-IPN, type-2
    *via 192.168.1.4, Eth1/8.4, [110/20], 02:44:02, ospf-IPN, type-2
10.111.152.63/32, ubest/mbest: 1/0
    *via 192.168.1.0, Eth1/7.4, [110/2], 02:44:07, ospf-IPN, intra
10.111.152.64/32, ubest/mbest: 1/0
    *via 192.168.1.4, Eth1/8.4, [110/2], 02:44:02, ospf-IPN, intra
10.112.0.0/16, ubest/mbest: 1/0
    *via 192.168.12.1, Po910, [110/20], 02:25:25, ospf-IPN, type-2
10.112.0.33/32, ubest/mbest: 1/0
    *via 192.168.12.1, Po910, [110/20], 02:25:25, ospf-IPN, type-2
10.112.0.34/32, ubest/mbest: 1/0
    *via 192.168.12.1, Po910, [110/20], 02:25:25, ospf-IPN, type-2
10.112.0.35/32, ubest/mbest: 1/0
    *via 192.168.12.1, Po910, [110/20], 02:25:25, ospf-IPN, type-2
10.112.224.64/32, ubest/mbest: 1/0
    *via 192.168.12.1, Po910, [110/3], 02:25:25, ospf-IPN, intra
10.112.224.65/32, ubest/mbest: 1/0
    *via 192.168.12.1, Po910, [110/3], 02:25:22, ospf-IPN, intra
192.168.1.0/31, ubest/mbest: 1/0, attached
    *via 192.168.1.1, Eth1/7.4, [0/0], 03:28:46, direct
192.168.1.1/32, ubest/mbest: 1/0, attached
    *via 192.168.1.1, Eth1/7.4, [0/0], 03:28:46, local
192.168.1.4/31, ubest/mbest: 1/0, attached
    *via 192.168.1.5, Eth1/8.4, [0/0], 03:28:53, direct
192.168.1.5/32, ubest/mbest: 1/0, attached
```

```
*via 192.168.1.5, Eth1/8.4, [0/0], 03:28:53, local
192.168.10.0/24, ubest/mbest: 1/0
  *via 192.168.1.0, Eth1/7.4, [110/20], 02:44:02, ospf-IPN, type-2
  *via 192.168.1.4, Eth1/8.4, [110/20], 02:44:02, ospf-IPN, type-2
192.168.10.3/32, ubest/mbest: 1/0
  *via 192.168.1.0, Eth1/7.4, [110/2], 02:44:07, ospf-IPN, intra
192.168.10.4/32, ubest/mbest: 1/0
  *via 192.168.1.4, Eth1/8.4, [110/2], 02:44:02, ospf-IPN, intra
192.168.2.0/31, ubest/mbest: 1/0
  *via 192.168.12.1, Po910, [110/2], 03:30:46, ospf-IPN, intra
192.168.2.4/31, ubest/mbest: 1/0
  *via 192.168.12.1, Po910, [110/2], 03:30:53, ospf-IPN, intra
192.168.20.0/24, ubest/mbest: 1/0
  *via 192.168.12.1, Po910, [110/20], 02:25:25, ospf-IPN, type-2
192.168.20.3/32, ubest/mbest: 1/0
  *via 192.168.12.1, Po910, [110/20], 02:25:25, ospf-IPN, type-2
192.168.20.4/32, ubest/mbest: 1/0
  *via 192.168.12.1, Po910, [110/20], 02:25:25, ospf-IPN, type-2
dp2-p1-ipn1#
```

Verifying external TEP interfaces on spine switches

Using virtual shell (VSH), verify all the interfaces on the spine switches. The Multi-Pod design introduces some new external TEP addresses used in the data plane as the external anycast TEP addresses (MAC, IPv4, and IPv6 addresses); see Figure 5. These will be discussed in the following sections as relevant.

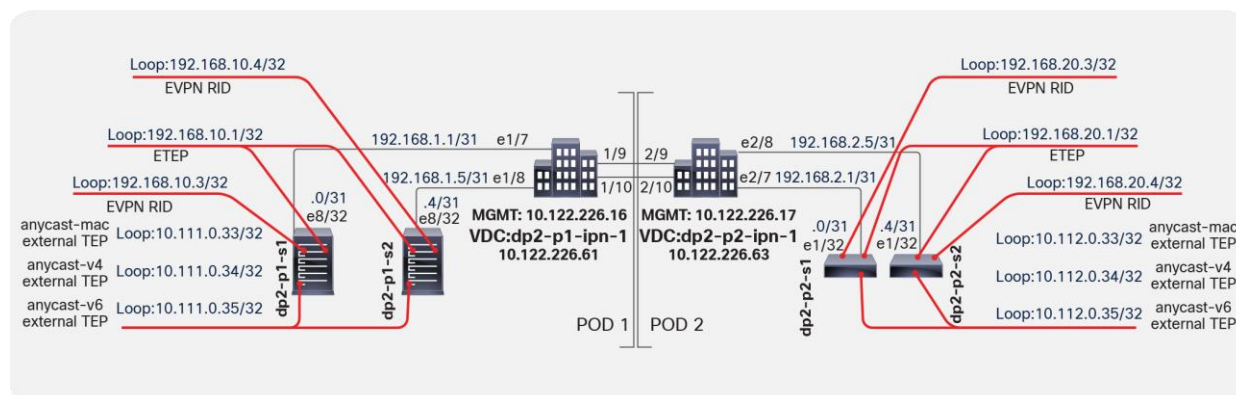


Figure 5.
Verifying external TEP interfaces on spine switches

Note: The next-hop for the EVPN prefixes (MAC and IP addresses for the endpoint) exchanged between pods is always the anycast ETEP address defined for the spines of each pod. However, because of specific implementation reasons, data-plane traffic (for L2, IPv4, and IPv6 communication) is always encapsulated to a specific anycast-address part of the original TEP pool (those are the “anycast-mac,” “anycast-v4,” and “anycast-v6” addresses displayed in Figure 5, above).

Verifying spine MP-BGP EVPN

On each spine device, you can verify the MP-BGP EVPN peering and route advertisements. The learned routes represent endpoints learned between the two pods (that is, host MAC and IP address information). In MP-BGP EVPN, these types of routes are called Route Type: 2-Host MAC/IP. In the summary command, the number of learned routes will increase as the number of endpoints in the fabric increase.

Note that the router IDs selected in the policy configuration are the MP-BGP EVPN Router-IDs (EVPN-RID) assigned by the wizard workflow from the specified external TEP pool. These IP addresses are used to establish MP-BGP EVPN peering. The same fabric BGP process is extended across pods, thus making this MP-iBGP EVPN (Figure 6). As mentioned previously, the Data-Plane ETEP (DP-ETEP) address is used as the next hop in host route advertisement between pods.

This verification process assumes that you have configured the fabric profile with an MP-BGP Autonomous System Number (ASN). Otherwise, the BGP process will not be running.

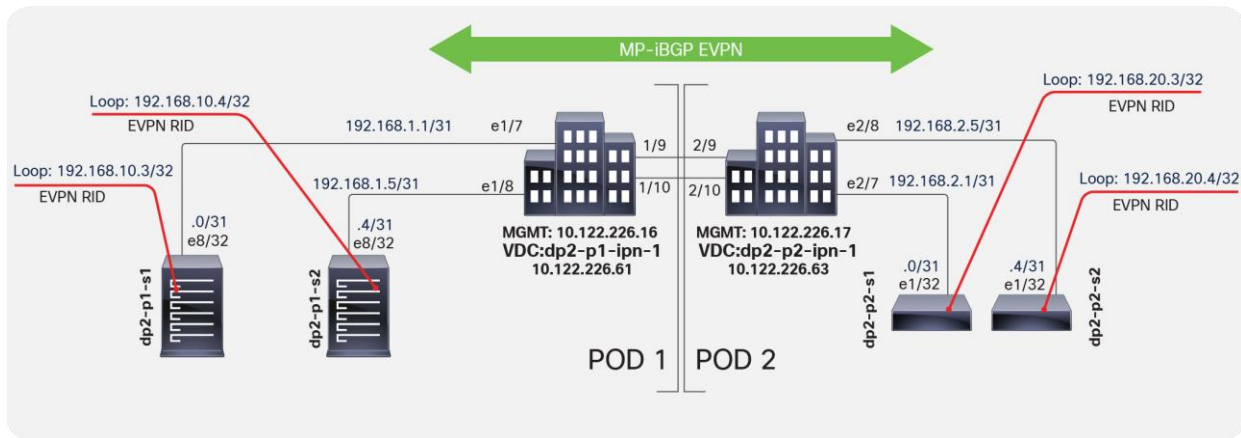


Figure 6.
Verifying spine MP-BGP EVPN

```

dp2-p1-s1# show bgp l2vpn evpn summary vrf overlay-1
BGP summary information for VRF overlay-1, address family L2VPN EVPN
BGP router identifier 192.168.10.3, local AS number 65000
BGP table version is 806, L2VPN EVPN config peers 2, capable peers 2
57 network entries and 73 paths using 10140 bytes of memory
BGP attribute entries [6/864], BGP AS path entries [0/0]
BGP community entries [0/0], BGP clusterlist entries [0/0]

```

Neighbor	V	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State/PfxRcd
192.168.20.3	4	65000	35723	36745	806	0	0	1w5d	13
192.168.20.4	4	65000	35725	36744	806	0	0	1w5d	13

```

dp2-p1-s1#

```


The host route shown in Figure 7 uses the endpoint MAC address and is taken from a remote Pod2 spine switch, with the host route being advertised from a Pod1 spine switch.

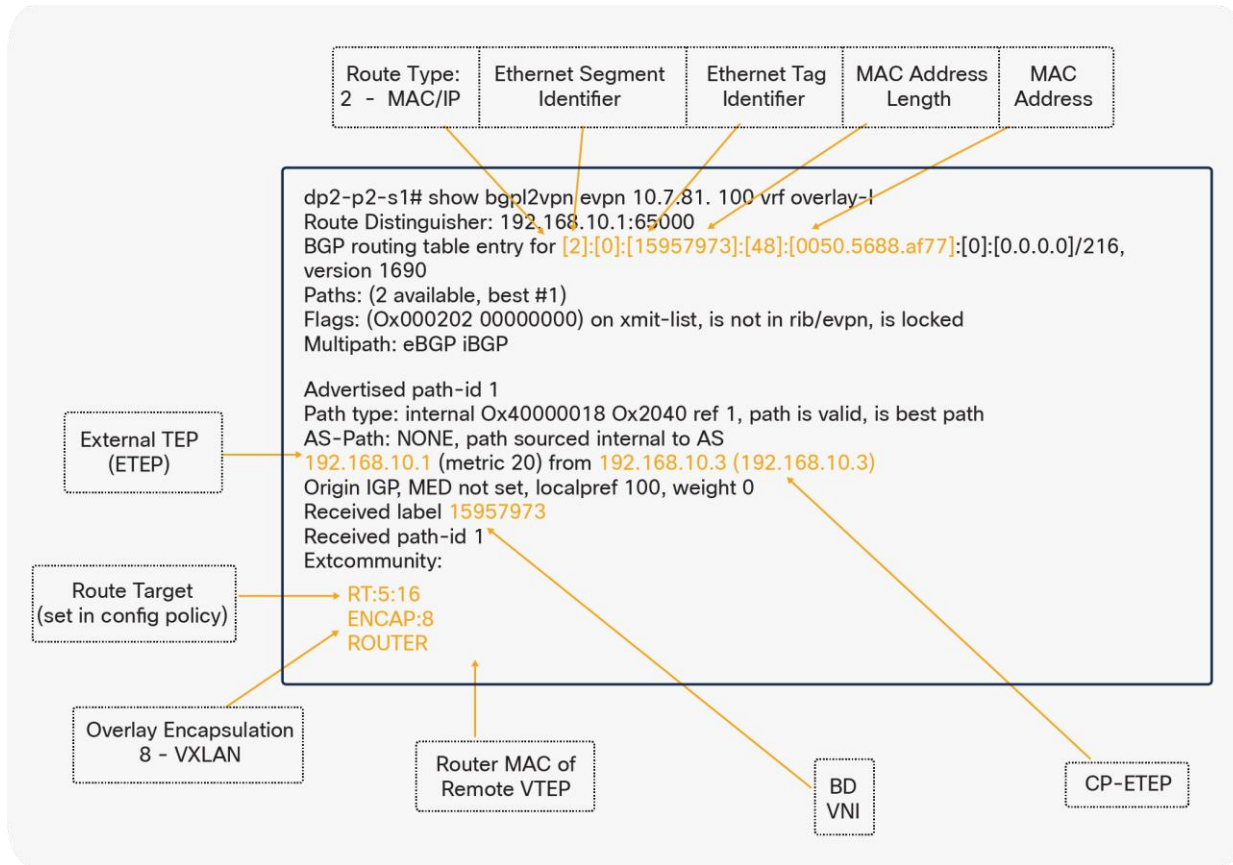


Figure 7.
Host route with endpoint MAC address

The host route shown in Figure 8 uses the endpoint IP address and is taken from a remote Pod2 spine switch, with the host route being advertised from a Pod1 spine switch.

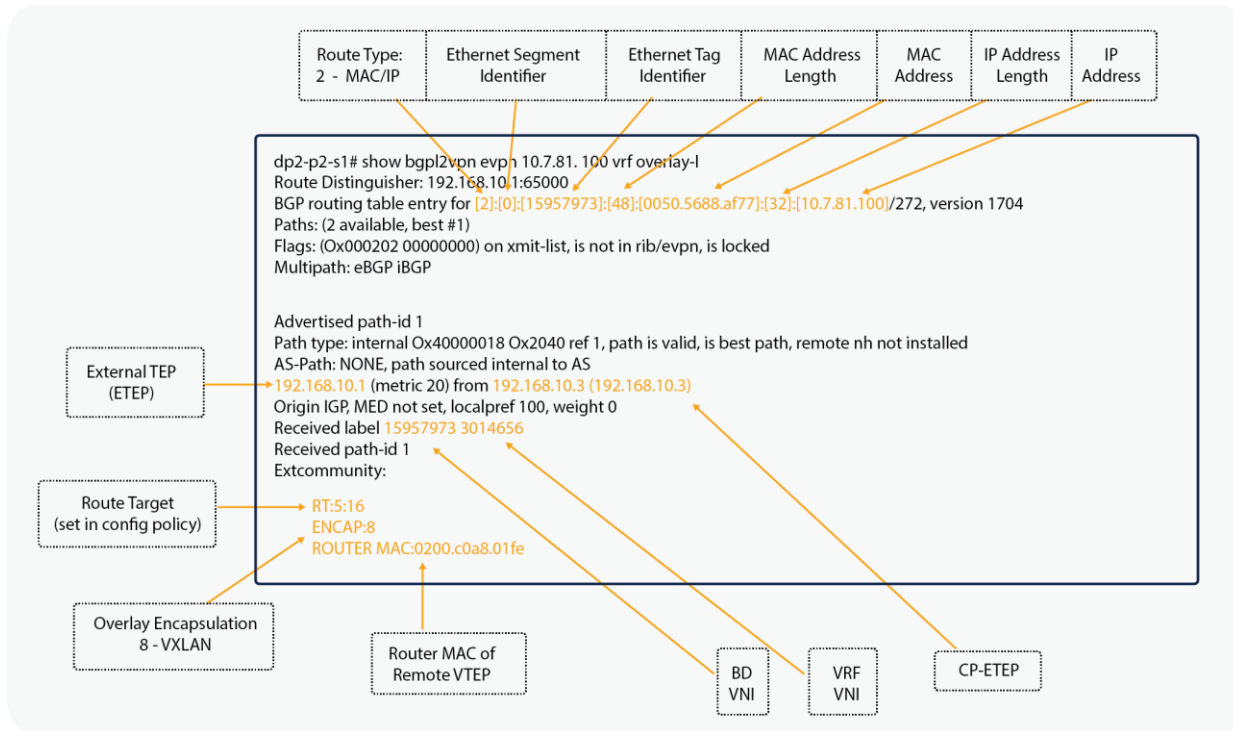


Figure 8.
Remote Pod2 Endpoint IP address

Note that the router MAC address for the EVPN routes is derived from the VDC and system MAC address of the advertising spine switch.

```
dp2-p1-s1# vsh -c 'show vdc'
```

```
vdc_id  vdc_name  state  mac  type
lc
-----
-----
-----
1      dp2-p1-s1  active  a8:0c:0d:96:c1:bf  Ethernet
m1 f1 m1x1 m2x1
```

```
dp2-p1-s1#
```

Verifying the COOP database entry

On the remote spine switch, you can verify the council of oracles protocol and Council or Oracles Protocol (COOP) database entry and check that the entry is known through the proxy tunnel established between the spine switches in different pods. Also note that the ETEP, when used for MP-iBGP EVPN, is used by COOP to identify a remote pod's set of anycast addresses.

```
dp2-p2-s1# show coop internal info ip-db
<snip>
-----
IP address : 10.7.81.100
Vrf : 3014656
Flags : 0x2
EP bd vnid : 15957973
EP mac : 00:50:56:88:AF:77
Publisher Id : 192.168.10.1
Record timestamp : 01 01 1970 00:00:00 0
Publish timestamp : 01 01 1970 00:00:00 0
Seq No: 0
Remote publish timestamp: 09 15 2016 12:35:54 723878748
URIB Tunnel Info
Num tunnels : 1
    Tunnel address : 10.111.0.34
    Tunnel ref count : 1
-----
<snip>
dp2-p2-s1#
```

Building dynamic tunnels

Figure 9 shows two virtual machines on two VMware ESXi hosts: one in each pod. Initially, each leaf switch knows nothing about the remote endpoints. This behavior is normal and expected. However, each spine switch in both pods knows about the endpoints through MP-iBGP EVPN and populates their COOP databases accordingly.

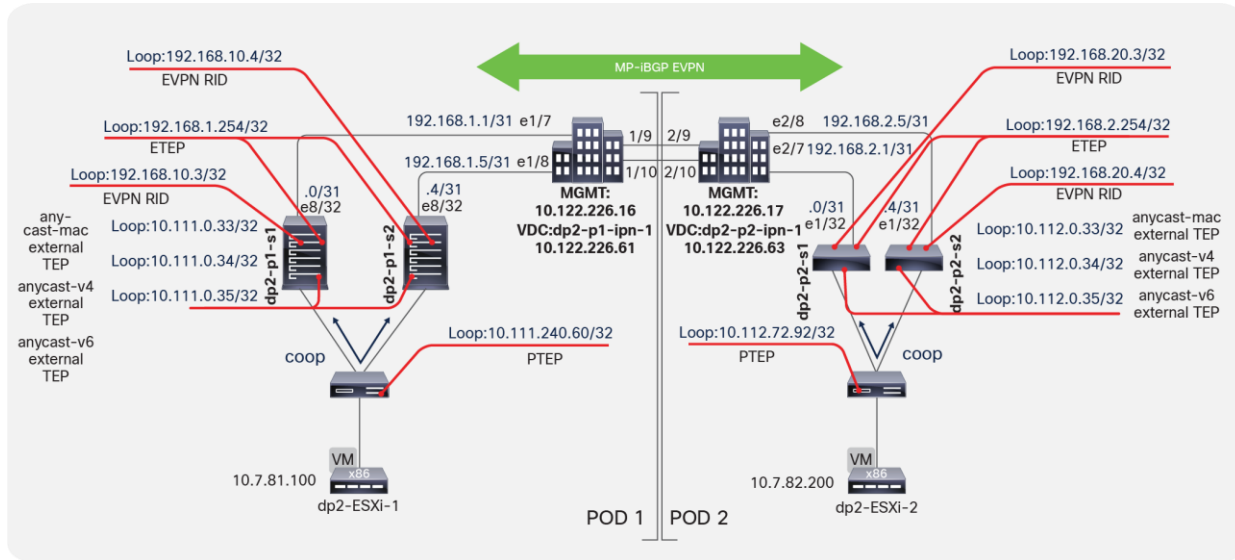


Figure 9.
Building Dynamic Tunnels

When the virtual machine in Pod1 starts a new communication with the virtual machine in Pod2, the leaf switch directs traffic to its local spine proxy switch. The local spine switch sees the remote endpoint learned by MP-iBGP EVPN in its COOP database. It then sets the DIPO to the anycast proxy address of the remote pod spine switch. The traffic is redirected to the IPN because the anycast TEP next hop will be known through the OSPF peering. Note that traffic is never sent from a spine proxy switch in one pod directly to a leaf switch in a different pod.

The remote spine switch receives traffic and determines whether the inner destination endpoint is local. It then sends the traffic to the appropriate leaf switch. During this process, the source endpoint and the source Physical TEP (PTEP) or leaf switch are learned from the traffic flow. With this information, a dynamic tunnel is created from the Pod2 leaf switch to the Pod1 leaf switch for reverse traffic to use. The reverse traffic will build a complete dynamic tunnel between the two VTEPs or leaf switches. From that point onward, the two endpoints' communication will be encapsulated leaf to leaf (VTEP to VTEP). The dynamic tunnels, as with normal tunnels in the fabric, are kept alive as long as there is communication between endpoints.

Dynamic tunnel: Same bridge domain and EPG

The listing for leaf endpoints before any traffic communication is shown here.

dp2-p1-l1:

```
dp2-p1-l1# show endpoint
```

Legend:

```
O - peer-attached      H - vtep              a - locally-aged     S - static
V - vpc-attached      p - peer-aged        L - local            M - span
s - static-arp        B - bounce
```

```
+-----+-----+-----+-----+
-----+
      VLAN/          Encap          MAC Address          MAC Info/
Interface          VLAN          IP Address           IP Info
-----+-----+-----+-----+
17                vlan-10      0078.88f0.e79b O
tunnel43
mgmt:inb          vlan-10      10.7.80.11 O
tunnel43
16                vlan-1068   0050.5688.af77 L
eth1/1
mtarking-T1:mtarking-VRF  vlan-1068   10.7.81.100 L
eth1/1
overlay-1                10.111.240.60 L
lo0
overlay-1                10.111.152.68 L
lo1
```

```
dp2-p1-l1#
```

dp2-p2-l1:

```
dp2-p2-l1# show endpoint
```

Legend:

```
O - peer-attached      H - vtep              a - locally-aged     S - static
V - vpc-attached      p - peer-aged        L - local            M - span
s - static-arp        B - bounce
```

```
+-----+-----+-----+-----+
-----+
      VLAN/          Encap          MAC Address          MAC Info/
Interface          VLAN          IP Address           IP Info
-----+-----+-----+-----+
-----+
```

```

13          vlan-1067    0050.5688.d6a6 L
eth1/1
mtarking-T1:mtarking-VRF          vlan-1067    10.7.82.200 L
eth1/1
15          vlan-1068    0050.5688.caa9 L
eth1/1
mtarking-T1:mtarking-VRF          vlan-1068    10.7.81.200 L
eth1/1
overlay-1          10.112.72.92 L
lo0

```

```
dp2-p2-11#
```

The dynamic tunnel created has the virtual machine in Pod1 (10.7.81.100) send a ping to the virtual machine in Pod2 (10.7.81.200).

dp2-p1-11:

```
dp2-p1-11# show endpoint
```

Legend:

```

O - peer-attached      H - vtep              a - locally-aged     S - static
V - vpc-attached      p - peer-aged        L - local            M - span
s - static-arp        B - bounce

```

```

+-----+-----+-----+-----+
-----+
      VLAN/          Encap          MAC Address          MAC Info/
Interface
      Domain          VLAN          IP Address          IP Info
+-----+-----+-----+-----+
-----+
17          vlan-10      0078.88f0.e79b O
tunnel43
mgmt:inb          vlan-10          10.7.80.11 O
tunnel43
mtarking-T1:mtarking-VRF          10.7.81.200
tunnel44
15/mtarking-T1:mtarking-VRF          vxlan-15957973    0050.5688.caa9
tunnel44
16          vlan-1068    0050.5688.af77 L
eth1/1
mtarking-T1:mtarking-VRF          vlan-1068    10.7.81.100 L
eth1/1
overlay-1          10.111.240.60 L
lo0
overlay-1          10.111.152.68 L
lo1

```

```

dp2-p1-l1#
dp2-p1-l1# show interface tunnel44
Tunnel44 is up
  MTU 9000 bytes, BW 0 Kbit
  Transport protocol is in VRF "overlay-1"
  Tunnel protocol/transport is ipvlan
  Tunnel source 10.111.240.60/32 (lo0)
  Tunnel destination 10.112.72.92
  Last clearing of "show interface" counters never
  Tx
  0 packets output, 1 minute output rate 0 packets/sec
  Rx
  0 packets input, 1 minute input rate 0 packets/sec

```

```
dp2-p1-l1#
```

dp2-p2-l1:

```
dp2-p2-l1# show endpoint
```

Legend:

```

O - peer-attached      H - vtep              a - locally-aged      S - static
V - vpc-attached      p - peer-aged        L - local             M - span
s - static-arp        B - bounce

```

VLAN/ Interface	Encap VLAN	MAC Address IP Address	MAC Info/ IP Info
mtarking-T1:mtarking-VRF tunnel21		10.7.81.100	
13 eth1/1	vlan-1067	0050.5688.d6a6	L
mtarking-T1:mtarking-VRF eth1/1	vlan-1067	10.7.82.200	L
14/mtarking-T1:mtarking-VRF tunnel21	vxlان-15957973	0050.5688.af77	
15 eth1/1	vlan-1068	0050.5688.caa9	L
mtarking-T1:mtarking-VRF eth1/1	vlan-1068	10.7.81.200	L
overlay-1 lo0		10.112.72.92	L

```

dp2-p2-11#
dp2-p2-11# show interface tunnel21
Tunnel21 is up
  MTU 9000 bytes, BW 0 Kbit
  Transport protocol is in VRF "overlay-1"
  Tunnel protocol/transport is ipvlan
  Tunnel source 10.112.72.92/32 (lo0)
  Tunnel destination 10.111.240.60
  Last clearing of "show interface" counters never
  Tx
    0 packets output, 1 minute output rate 0 packets/sec
  Rx
    0 packets input, 1 minute input rate 0 packets/sec

```

```
dp2-p2-11#
```

Figure 10 provides a visual representation of a packet capture performed between the IPN switches. You can see the use of the anycast external TEP addresses for the ping performed between the virtual machines and then the switchover to using the dynamically built tunnel directly between the VTEPs and leaf switches.

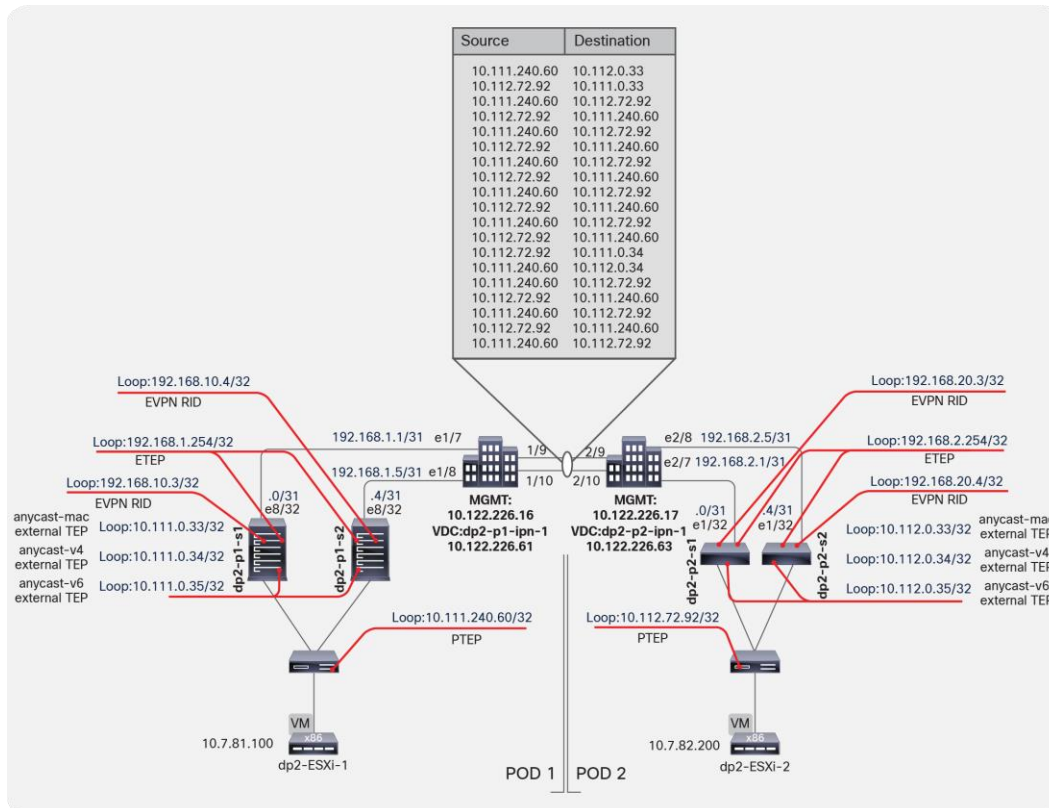


Figure 10.
Packet Capture between IPN switches

You can decode the packet capture between the two IPN switches to examine the iVXLAN header, as shown in Figure 11.

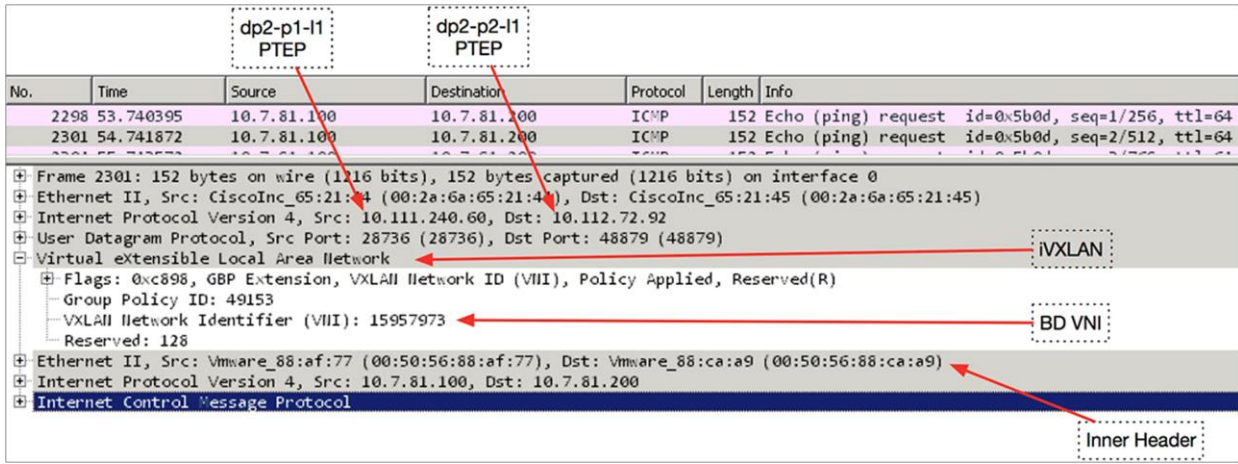


Figure 11.
Packet Capture to examine iVXLAN header

Dynamic tunnel: Different bridge domains and EPGs

The listing for leaf endpoints before any traffic communication is shown here.

dp2-p1-11:

```
dp2-p1-11# show endpoint
```

Legend:

```

O - peer-attached      H - vtep          a - locally-aged      S - static
V - vpc-attached      p - peer-aged     L - local             M - span
s - static-arp        B - bounce
  
```

VLAN/ Interface	Encap VLAN	MAC Address IP Address	MAC Info/ IP Info
17 tunnel43	vlan-10	0078.88f0.e79b O	
mgmt:inb tunnel43	vlan-10	10.7.80.11 O	
16 eth1/1	vlan-1068	0050.5688.af77 L	
mtarking-T1:mtarking-VRF eth1/1	vlan-1068	10.7.81.100 L	

```

overlay-1                               10.111.240.60 L
lo0
overlay-1                               10.111.152.68 L
lo1

```

```
dp2-p1-11#
```

dp2-p2-11:

```
dp2-p2-11# show endpoint
```

Legend:

```

O - peer-attached   H - vtep           a - locally-aged   S - static
V - vpc-attached   p - peer-aged     L - local          M - span
s - static-arp     B - bounce

```

```

+-----+-----+-----+-----+
-----+
      VLAN/
Interface
      Domain
+-----+-----+-----+-----+
-----+
13
eth1/1
mtarking-T1:mtarking-VRF
eth1/1
15
eth1/1
mtarking-T1:mtarking-VRF
eth1/1
overlay-1
lo0

```

VLAN/ Interface Domain	Encap VLAN	MAC Address IP Address	MAC Info/ IP Info
13 eth1/1	vlan-1067	0050.5688.d6a6	L
mtarking-T1:mtarking-VRF eth1/1	vlan-1067	10.7.82.200	L
15 eth1/1	vlan-1068	0050.5688.caa9	L
mtarking-T1:mtarking-VRF eth1/1	vlan-1068	10.7.81.200	L
overlay-1 lo0		10.112.72.92	L

```
dp2-p2-11#
```

The dynamic tunnel created has the virtual machine in Pod1 (10.7.81.100) send a ping to the virtual machine in Pod2 (10.7.82.200).

Note: Remember that these virtual machines are in different bridge domains and EPGs.

dp2-p1-l1:

dp2-p1-l1# show endpoint

Legend:

O - peer-attached H - vtep a - locally-aged S - static
V - vpc-attached p - peer-aged L - local M - span
s - static-arp B - bounce

```
+-----+-----+-----+-----+
-----+
      VLAN/          Encap          MAC Address          MAC Info/
Interface
      Domain          VLAN          IP Address          IP Info
+-----+-----+-----+-----+
-----+
17          vlan-10          0078.88f0.e79b O
tunnel43
mgmt:inb          vlan-10          10.7.80.11 O
tunnel43
mtarking-T1:mtarking-VRF          10.7.82.200
tunnel44
16          vlan-1068          0050.5688.af77 L          eth1/1
mtarking-T1:mtarking-VRF          vlan-1068          10.7.81.100 L          eth1/1
overlay-1          10.111.240.60 L          lo0
overlay-1          10.111.152.68 L          lo1
```

dp2-p1-l1#

dp2-p2-l1:

dp2-p2-l1# show endpoint

Legend:

O - peer-attached H - vtep a - locally-aged S - static
V - vpc-attached p - peer-aged L - local M - span
s - static-arp B - bounce

```
+-----+-----+-----+-----+
-----+
      VLAN/          Encap          MAC Address          MAC Info/          Interface
      Domain          VLAN          IP Address          IP Info
+-----+-----+-----+-----+
-----+
```

```

mtarking-T1:mtarking-VRF                               10.7.81.100          tunnel21
13                                                       vlan-1067           0050.5688.d6a6 L    eth1/1
mtarking-T1:mtarking-VRF                               10.7.82.200 L        eth1/1
15                                                       vlan-1068           0050.5688.caa9 L    eth1/1
mtarking-T1:mtarking-VRF                               10.7.81.200 L        eth1/1
overlay-1                                               10.112.72.92 L      lo0

```

```
dp2-p2-l1#
```

Figure 12 provides a visual representation of a packet capture performed between the IPN switches. You can see the use of the anycast ETEP addresses for the ping performed between the virtual machines and then the switchover to using the dynamically built tunnel directly between the VTEPs and leaf switches.

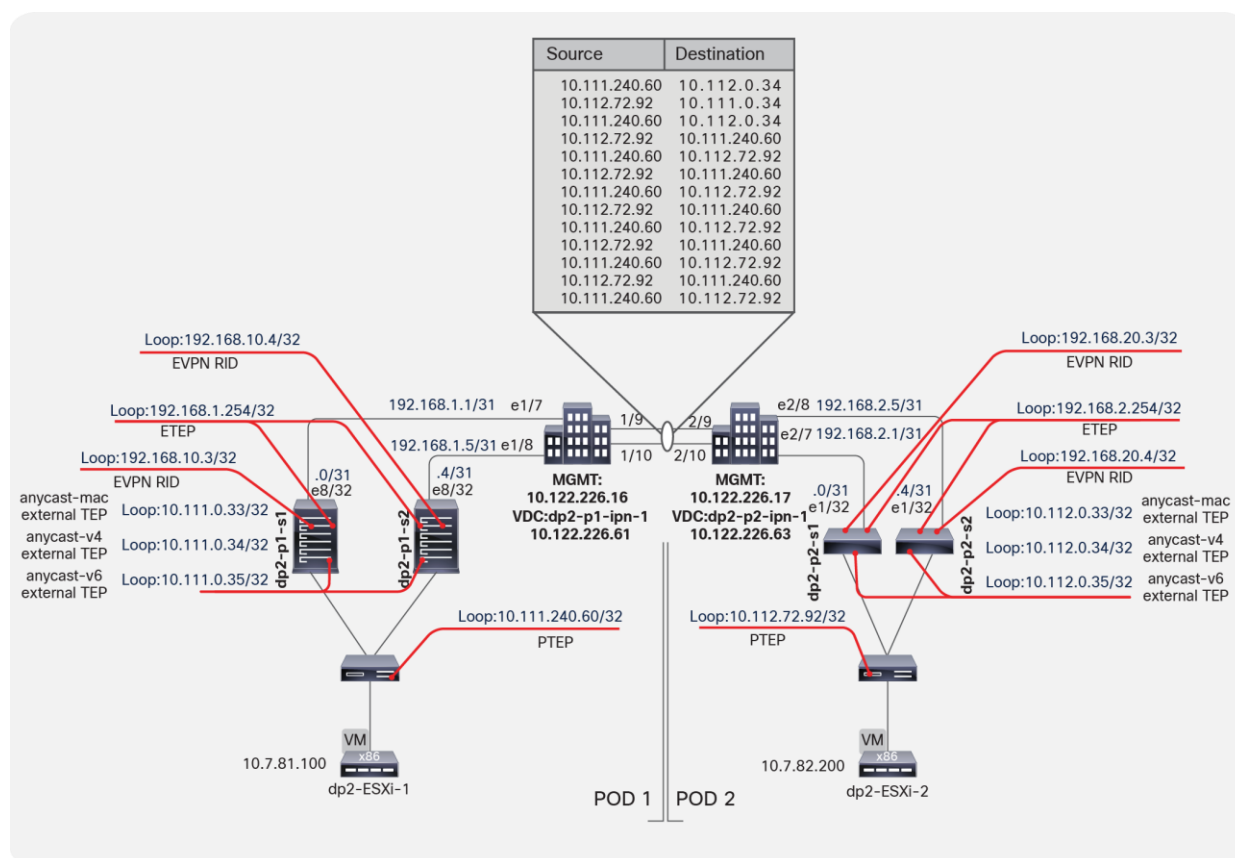


Figure 12.
Anycast ETEP addresses

You can decode the packet capture between the two IPN switches to examine the iVXLAN header, as shown in Figure 13.

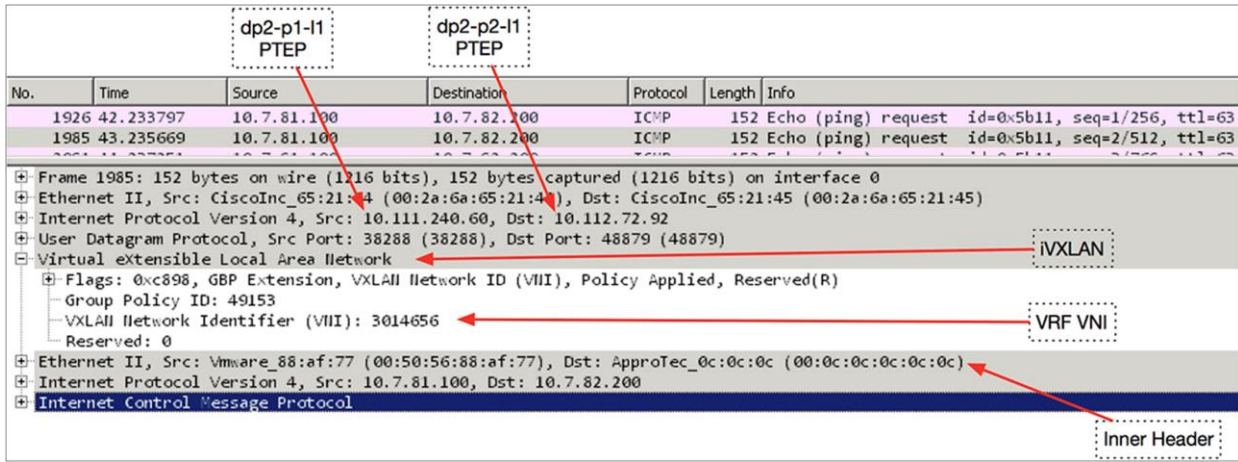



Figure 13.
Decoding the packet capture between two IPN switches

Appendix: Configuring the Multi-Pod setup manually

Unlike Layer 3 connections in previous configurations, a Multi-Pod setup uses the spine switch ports. For this reason, new access policies are built that are attached to specific spine policies. These policies didn't exist previous to Cisco ACI Release 2.0. The first step is to build these policies in the Cisco ACI fabric to enable these spine ports.

Setting up Pod1

Your initial Pod1 will look like the normal fabric membership view, similar to the example shown below.

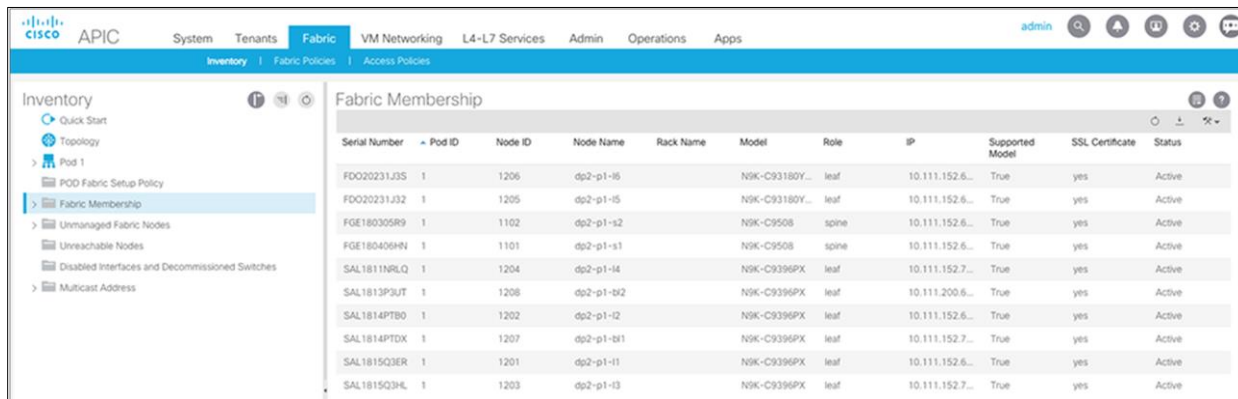

Defining Pod1 spine access policies

Just as for every port in the Cisco ACI fabric, you need to define access policies to define port behaviors. The policies for the spine ports are a little different from those defined in the past. The VLAN pool is specific to the spine switch and uses VLAN 4. This setting cannot be changed by the user. This policy will be attached to the Layer 3 domain.

Choose Fabric > Access Policies > Pools > VLANS and create a static VLAN pool that contains only VLAN 4.

Create Ranges

Specify the Encap Block Range

Type: VLAN

Range: VLAN - VLAN
Integer Value Integer Value

Allocation Mode: Dynamic Allocation Inherit allocMode from parent Static Allocation

Create VLAN Pool

Specify the Pool identity

Name:

Description:

Allocation Mode: Dynamic Allocation Static Allocation

Encap Blocks:

VLAN Range	Allocation Mode
[4]	Inherit allocMode from parent

Next, you need to create the AEP. Choose Fabric > Access Policies > Global Policies > AEP.

Create Attachable Access Entity Profile

STEP 1 > Profile

1. Profile 2. Association To Interfaces

Specify the name, domains and infrastructure encaps

Name: MultiPod-AEP

Description: optional

Enable Infrastructure VLAN:

Domains (VMM, Physical or External) To Be Associated To Interfaces:

Domain Profile	Encapsulation
----------------	---------------

EPG DEPLOYMENT (All Selected EPGs will be deployed on all the interfaces associated.)

Application EPGs	Encap	Primary Encap	Mode
------------------	-------	---------------	------

Previous Cancel Next

You can now build the Layer 3 domain that will associate the VLAN pool and AEP previously created and that will be associated with the interfaces of the spine switch.

Choose Fabric > Access Policies > Physical and External Domains > External Routed Domains.

Create Layer 3 Domain

Specify the Layer 3 Domain

Name:

Associated Attachable Entity Profile:

VLAN Pool:

Security Domains:

Select	Name	Description
--------	------	-------------

Starting with Cisco ACI Release 2.0, you can create the spine interface policies. To start, build a link-level interface policy. Choose Fabric > Access Policies > Interface Policies > Policies > Link Level. In the case here, use the configuration defaults.

Create Link Level Policy

Specify the Physical Interface Policy Identity

Name:

Description:

Alias:

Auto Negotiation:

Speed:

Link debounce interval (msec):

Forwarding Error Correction:

Next, create the spine policy group using the link-level policy and your previously created AEP. Choose Fabric > Access Policies > Interface Policies > Policy Group > Spine Policy Groups.

Create Spine Access Port Policy Group ? ×

Specify the Policy Group identity

Name:

Description:

Link Level Policy: ↕

CDP Policy: ↕

Attached Entity Profile: ↕

Cancel Submit

Next, create the spine interface profile definition. You can select multiple interfaces (a range) as needed. Choose Fabric > Access Policies > Interface Policies > Profiles > Spine Profiles. The setup here uses two 40-Gbps interfaces facing a Cisco Nexus 7000 Series Switch using ports 8/31 and 8/32.

Create Spine Interface Profile

Specify the profile Identity

Name:

Description:

Interface Selectors:

Name	Type
Pod1-Spine-Ints	range

Now you can create the spine switch profile. Choose Fabric > Access Policies > Switch Policies > Profiles.

Create Spine Profile

STEP 1 > Profile

1. Profile 2. Associations

Specify the profile Identity

Name: Pod1-Spine-Prof

Description: optional

Spine Selectors:

Name	Blocks	Policy Group
Pod1-Spine-1	1101	
Pod1-Spine-2	1102	

Previous Cancel Next

Create Spine Profile

STEP 2 > Associations

1. Profile 2. Associations

Select the interface/module selector profiles to associate

Interface Selector Profiles:

Select	Name	Description
<input checked="" type="checkbox"/>	Pod1-Spine-IntProf	
<input type="checkbox"/>	Pod2-Spine-IntProf	
<input type="checkbox"/>	default	

Previous Cancel Finish

Defining Pod2 spine access policies

In Pod2, if you use different interfaces from the spine switches to the IPN, whether because you are using different line-card slots or different spine-switch models in Pod1 and Pod2 (for example, the Cisco Nexus 9508 Switch in one pod and the Cisco Nexus 9336PQ ACI Spine Switch in the other pod), you must create the same access policies for the spine switches that have yet to be discovered in the fabric. If your spine interfaces differ, you still can reuse the policy groups because the properties will be the same. If your spine interfaces are the same, you can simply add your spine nodes to the switch profile later, as explained in this document.

Create Spine Interface Profile

Specify the profile Identity

Name: Pod2-Spine-IntProf

Description: optional

Interface Selectors:

Name	Type
Pod2-Spine-Ints	range

Cancel Submit

Create Spine Access Port Selector

Specify the selector identity

Name: Pod2-Spine-Ints

Description: optional

Interface IDs: 1/32
valid values: All or Ranges. For Example:
 1/13,1/15 or 1/22-1/24

Interface Policy Group: MultiPod-PolGrp

Cancel OK

Setting up multiple pods

For this topology, you will create two pods. The original pool 10.111.0.0/16 was defined in the APIC startup configuration, but you need to define the TEP pool for the second pod. In this case, the two pools are:

- Pod1 - 10.111.0.0/16
- Pod2 - 10.112.0.0/16

In the setup here, each side has a /16 subnet to assign addresses for the TEP in the fabric. Choose Fabric > Inventory > POD Fabric Setup Utility > Setup PODs.

Fabric Setup Policies

TEP Pool can not be changed once configured.
 Please make sure that the entered TEP pool subnet is correct.

POD ID	TEP Pool
2	10.112.0.0/16

Cancel Submit

After both TEP pools have been defined, you can start the process of defining the Multi-Pod setup.

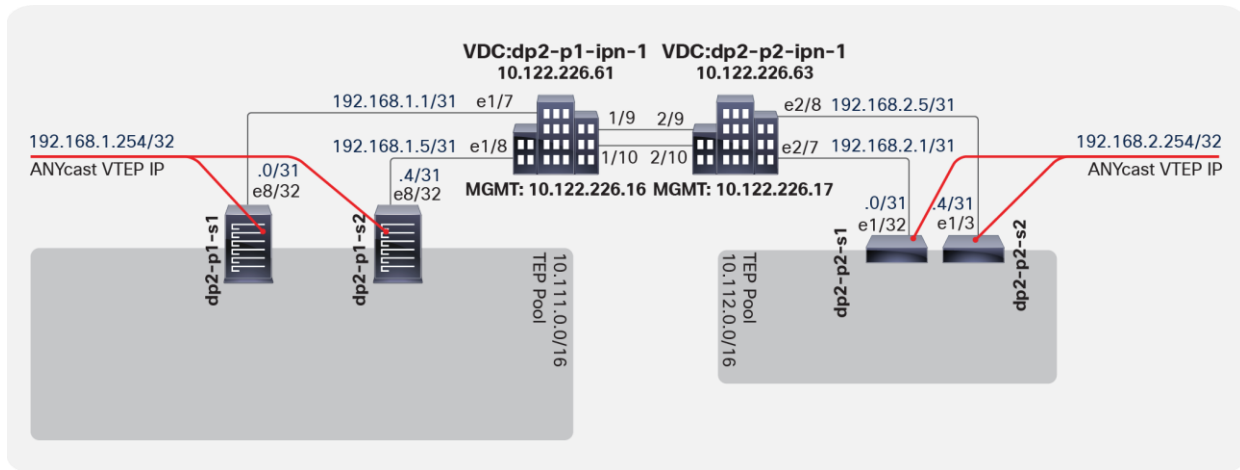


Figure 14.
Two sides of the IPN with a unique network structure

Each of the two sides of the IPN has a unique network structure. For this topology, two separate /24 subnets, 192.168.1.0/24 and 192.168.2.0/24, are used across the connections between the IPN and the fabric spine switches. Choose Fabric > Inventory > POD Fabric Setup Policy > Create Multi-Pod.

Create Multi-Pod

Create Multi-Pod

Community:
e.g. extended:as2-nn4:5:16

Enable Atomic Counters for Multi-Pod Mode:

Site/POD Peering Profile

Peering Type: Full Mesh Route Reflector

BGP Peer Password:

Confirm Password:

POD Connection Profile

POD ID	Dataplane TEP
1	192.168.1.254
2	192.168.2.254

Create Multi-Pod

Create Multi-Pod

Peering Type: Full Mesh Route Reflector

BGP Peer Password:

Confirm Password:

POD Connection Profile

POD ID	Dataplane TEP
1	192.168.1.254
2	192.168.2.254

Fabric External Routing Profile

Name	Subnet
FabExtRoutingProf	192.168.1.0/24,192.168.2.0/24

Cancel Submit

- In the Create Multi-Pod dialog box, you can copy the community string used in the example because any configured value will work for a Multi-Pod setup.
- Enable the atomic counters for the Multi-Pod setup so that atomic counters work from the leaf switches in one pod to those in the other pod.
- Choose Full Mesh or Route Reflector.
 - Full Mesh works with a small set of spine switches interconnected with the IPN.
 - Route Reflector provides a more robust mechanism for interconnecting a larger group of pods and spine switches. This document does not cover the configuration for the Route Reflector option.

For information on configuring route reflectors, see the "Route Distribution within the ACI Fabric" section about multiprotocol BGP (MP-BGP) MP-BGP in the following document:
https://www.cisco.com/c/en/us/solutions/collateral/data-center-virtualization/application-centric-infrastructure/white-paper-c07-732033.html#_Toc395143552.
- The pod connection profile defines a new VXLAN TEP (VTEP) address called the external TEP (ETEP) address. It is used as the anycast shared address across all spine switches in a pod and as the EVPN next-hop IP address for interpod data-plane traffic. This IP address should not be part of the TEP pool assigned to each pod. You should use an IP address that is part of the external prefixes already used to address the point-to-point Layer 3 links between the spine switches and the IPN devices (192.168.1.0/24 and 192.168.2.0/24).
- The routing profile defines the subnets that are used in the point-to-point connections between the two separate pods in the IPN interfaces. The screenshots show the relationships and configuration values.

Configuring the routed-outside interface for EVPN

To define the routed-outside interface, you need to create some loopback connections from each of the spine switches. Figure 15 provides more details about these loopback connections.

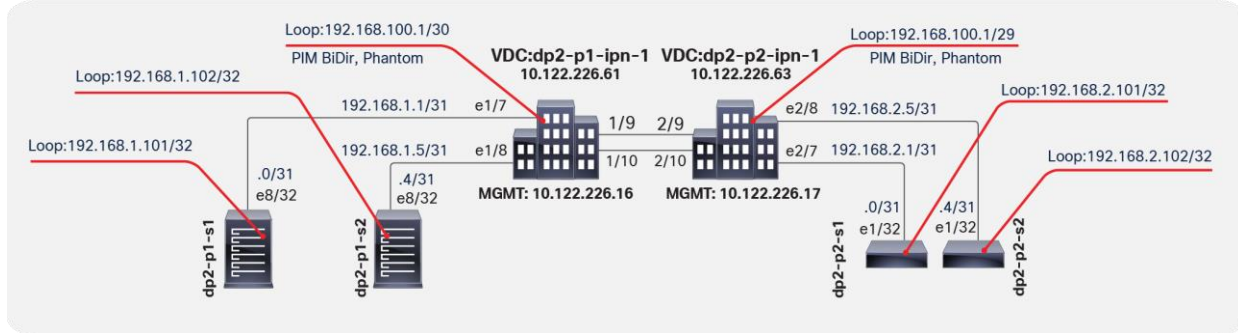


Figure 15.
Loopback functions

OSPF is currently the only routing protocol supported for this connection. Note that the loopback connections used here for the OSPF router ID will be used for Multiprotocol Interior BGP (MP-iBGP) EVPN peering between the spine switches in separate pods. This process is handled by the Cisco ACI fabric and is discussed later in this document.

To configure this connection for a Multi-Pod setup, choose Fabric > Inventory > POD Fabric Setup Policy > Create Routed Outside for Multi-Pod.

For this setup, use regular Area 0 for OSPF instead of using the Not-So-Stubby Area (NSSA). Then add the loopbacks you have defined and the interface definitions for the ports on the spine connections to the IPN switches. Using the wizard, also create your OSPF point-to-point protocol policy.

Create Routed Outside For Multipod

STEP 1 > Identity

1. Identity

2. Nodes And Interfaces Protocol Profiles

Define the Routed Outside

Description:

VRF: overlay-1

Route Target: automatic explicit

BGP

OSPF

OSPF Area ID:

OSPF Area Type: NSSA area Regular area Stub area

OSPF Area Cost:

Previous
Cancel
Next

Create Routed Outside For Multipod

STEP 2 > Nodes And Interfaces Protocol Profiles

1. Identity | 2. Nodes And Interfaces Protocol Profiles

Define the Routed Outside

BGP Timers:

Spines:

Node	Router ID	Router ID as Loopback Address	Loopback Addresses
Pod-1/Node-1101	192.168.1.101	True	192.168.1.101
Pod-1/Node-1102	192.168.1.102	True	192.168.1.102

Create Routed Outside For Multipod

STEP 2 > Nodes And Interfaces Protocol Profiles

1. Identity | 2. Nodes And Interfaces Protocol Profiles

Define the Routed Outside

OSPF Profile For Sub-Interfaces:

Routed Sub-Interfaces

Path	IPv4 Primary Address	MAC Address	MTU (bytes)
Pod-1/Node-1101/eth8/32	192.168.1.0/31	00:22:BD:F8:19:FF	inherit
Pod-1/Node-1102/eth8/32	192.168.1.4/31	00:22:BD:F8:19:FF	inherit

BGP/EVPN Infra Peer Connectivity Profiles

Peer IP Address	Time To Live
-----------------	--------------

Previous Cancel Finish

Create OSPF Interface Policy

Define OSPF Interface Policy

Name:

Description:

Network Type: Broadcast Point-to-point Unspecified

Priority:

Cost of Interface:

Interface Controls:

- Advertise subnet
- BFD
- MTU ignore
- Passive participation

Hello Interval (sec):

Dead Interval (sec):

Retransmit Interval (sec):

Transmit Delay (sec):

Pay attention to the Maximum Transmission Unit (MTU) value. Otherwise, you will need to configure OSPF to ignore the MTU. The best solution is to use 9150 as the MTU and set “inherit” to match the interface MTU. When these values match, the OSPF will be exchanged and match on both sides. You must set the MTU in the IPN interfaces to 9150 (to accommodate sizing for VXLAN across the IPN). For the rest of this document, the interface MTU is set in the IPN to 9150, and the profile is set to inherit on the Cisco ACI side. You cannot set the MTU for the OSPF policy to greater than 9000. If you do so, then you must select “MTU ignore” on the Cisco Nexus switch and change the protocol policy in Cisco ACI to ignore the MTU.

Updating the infrastructure interface: external routed

The next step is to associate the Multi-Pod domain with the external-routed infrastructure interface. Choose Tenants > Infra > Networking > External Routed Networks and select the L3Out interface named “Multi-Pod.”

L3 Outside - multipod

Policy Stats Faults History

Main Node Profiles Networks

Properties

Name: multipod

Alias:

Description: optional

Tags:

Global Alias:

Provider Label:

Target DSCP: Unspecified

Route Target: automatic explicit

Route Control Enforcement: Import Export

VRF: overlay-1

Resolved VRF: infra/overlay-1

External Routed Domain: MultiPod-L3-Dom

Route Profile for Interleak: select a value

Route Control For Dampening: Address Family Type Route Dampening Policy

No items have been found. Select Actions to create a new item.

Show Usage Reset Submit

Configuring fabric membership for Pod2 spine switches

After the OSPF adjacency has formed and the IPNs are performing proxy forwarding of the DHCP requests of the fabric, the two spine switches in Pod2 will appear in the Fabric Membership list. You can then configure the two spine switches and give them node IDs. At this point, the remote spine switches will not receive a TEP address until you revisit the Pod2 access policies and the IPN infrastructure L3Out interface.

Serial Number	Pod ID	Node ID	Node Name	Rack Name	Model	Role	IP	Supported Model	SSL Certificate	Status
FGE180406HN	1	1101	dp2-p1-s1		N9K-C9508	spine	10.111.152.6...	True	yes	Active
FGE180305R9	1	1102	dp2-p1-s2		N9K-C9508	spine	10.111.152.6...	True	yes	Active
SAL1815Q3ER	1	1201	dp2-p1-l1		N9K-C9396PX	leaf	10.111.152.6...	True	yes	Active
SAL1814PTB0	1	1202	dp2-p1-l2		N9K-C9396PX	leaf	10.111.152.6...	True	yes	Active
SAL1815Q3HL	1	1203	dp2-p1-l3		N9K-C9396PX	leaf	10.111.152.7...	True	yes	Active
SAL1811NRLQ	1	1204	dp2-p1-l4		N9K-C9396PX	leaf	10.111.152.7...	True	yes	Active
FDO20231J32	1	1205	dp2-p1-l5		N9K-C93180Y...	leaf	10.111.152.6...	True	yes	Active
FDO20231J3S	1	1206	dp2-p1-l6		N9K-C93180Y...	leaf	10.111.152.6...	True	yes	Active
SAL1814PTDX	1	1207	dp2-p1-bl1		N9K-C9396PX	leaf	10.111.152.7...	True	yes	Active
SAL1813P3UT	1	1208	dp2-p1-bl2		N9K-C9396PX	leaf	10.111.200.6...	True	yes	Active
SAL18516JSZ	2	2101	dp2-p2-s1		N9K-C9336PQ	spine	0.0.0.0	True	n/a	Discovering
SAL18516JW	2	2102	dp2-p2-s2		N9K-C9336PQ	spine	0.0.0.0	True	n/a	Discovering

Revisiting Pod2 spine access policies

The remote Pod2 spine switches have been added to the fabric with node IDs, so now you can create access policies associated with them. Return to the access policies and create a spine profile for the Pod2 spine switches and associate the interface policy that you previously created. For the example in this document, separate spine policies are created because different ports are used on the spine switches in the different pods. If the spine ports are the same in both pods, you can use the same policies you created for Pod1.

Create Spine Profile

STEP 1 > Profile

1. Profile 2. Associations

Specify the profile Identity


Name: Pod2-Spine-Prof

Description: optional

Spine Selectors:

Name	Blocks	Policy Group
Pod2-Spine-1	2101	
Pod2-Spine-2	2102	


Previous Cancel Next

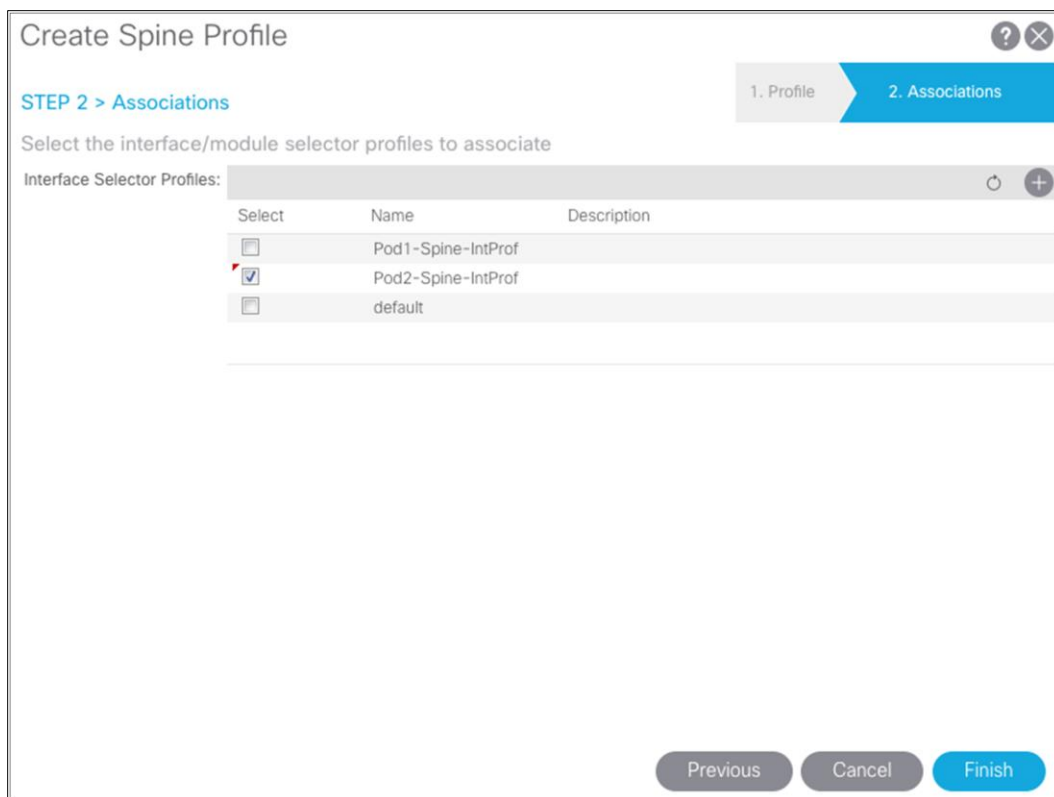

Creating the routed-outside interface for Pod2

Now define the connection between the spine switches of Pod2 and the Cisco Nexus 7000 Series Switch. You are configuring the interface IP addresses that need to be matched with the IPN switch. Configure the Pod2 L3Out logical nodes and paths using the Config Pod wizard.

Choose "Topology." Then click "Config Pod" in the pod dialog box to add the router ID and loopbacks for the remote spine switches peering to the IPN along with the peering paths and IP addresses used for peering to the IPN.

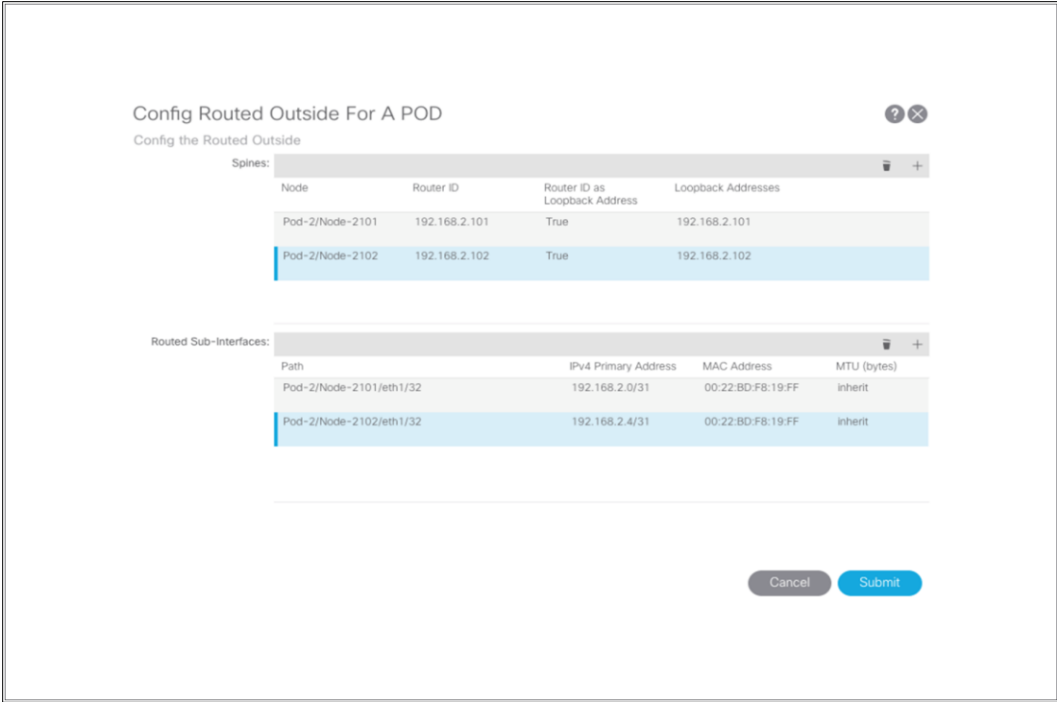

For more information

<https://www.cisco.com/c/en/us/products/collateral/switches/nexus-9000-series-switches/white-paper-c11-737201.html?dtid=ossdc000283>

Americas Headquarters
 Cisco Systems, Inc.
 San Jose, CA

Asia Pacific Headquarters
 Cisco Systems (USA) Pte. Ltd.
 Singapore

Europe Headquarters
 Cisco Systems International BV Amsterdam,
 The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at <https://www.cisco.com/go/offices>.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)