



Cisco Cyber Vision GUI Administration Guide, Release 4.1.2

First Published: 2022-08-02

Last Modified: 2022-08-02

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883



CONTENTS

PREFACE

- [About this documentation](#) **vii**
- [Document purpose](#) **vii**
- [Warnings and notices](#) **vii**

CHAPTER 1

- [System](#) **1**
 - [Center shutdown/reboot](#) **1**
 - [Upgrade with a combined update file](#) **2**
 - [Syslog configuration](#) **3**
 - [Import/Export](#) **4**
 - [Knowledge DB](#) **5**
 - [Certificate fingerprint](#) **6**
 - [Reset to factory defaults](#) **6**

CHAPTER 2

- [Data management](#) **9**
 - [Clear data](#) **9**
 - [Expiration settings](#) **10**
 - [Ingestion configuration](#) **11**

CHAPTER 3

- [Network organization](#) **13**
 - [Network organization](#) **13**
 - [Add a network](#) **14**

CHAPTER 4

- [Sensors](#) **17**
 - [Sensor Explorer](#) **17**
 - [Filter and sort the sensor list](#) **18**
 - [Sensors status](#) **20**

- Sensors features 21
- Install sensor 23
- Manage credentials 23
- Organize sensors 25
- Set a capture mode 29
- Management jobs 31
- PCAP Upload 33

CHAPTER 5 **Active Discovery** 35

- Active Discovery policies 35

CHAPTER 6 **Users** 37

- Management 37
- Role Management 39
 - Create roles 40
- Security settings 42

CHAPTER 7 **Event** 45

- Events 45

CHAPTER 8 **API** 47

- Token 47
- Documentation 48

CHAPTER 9 **License** 53

- License 53

CHAPTER 10 **External Authentication** 55

- LDAP 55
 - Configure LDAP 56
 - LDAP normal connection 57
 - LDAP secure connection 60

CHAPTER 11	Snort	65
	Snort	65
	Enable IDS on a sensor	67
	Import Snort custom rules	68
	Enable/disable a rule	69

CHAPTER 12	Risk score	73
	Risk score	73

CHAPTER 13	Integrations	75
	pxGrid	75
	FMC	76
	FTD	77
	SecureX	78
	SecureX configuration	78
	SecureX ribbon	83
	SecureX event integration	84
	SecureX component button	85
	External resources for SecureX integration	85

CHAPTER 14	Extensions	87
	Extensions	87

CHAPTER 15	Center certificate	89
	Center certificate	89

CHAPTER 16	SNMP	91
	Configure SNMP	92
	SNMP MIB	94



About this documentation

- [Document purpose, on page vii](#)
- [Warnings and notices, on page vii](#)

Document purpose

This user guide describes how to administrate and configure Cisco Cyber Vision.

It takes into consideration the GUI with the highest license level (Advantage) and involves the Admin and Product user roles.

This manual is applicable to **system version 4.1.2**.

Warnings and notices

This manual contains notices you have to observe to ensure your personal safety as well as to prevent damage to property.

The notices referring to your personal safety and to your property damage are highlighted in the manual by a safety alert symbol described below. These notices are graded according to the degree of danger.



Warning

Indicates risks that involve industrial network safety or production failure that could possibly result in personal injury or severe property damage if proper precautions are not taken.



Important

Indicates risks that could involve property or Cisco equipment damage and minor personal injury if proper precautions are not taken.



Note

Indicates important information on the product described in the documentation to which attention should be paid.




CHAPTER 1

System

- [Center shutdown/reboot, on page 1](#)
- [Upgrade with a combined update file, on page 2](#)
- [Syslog configuration, on page 3](#)
- [Import/Export, on page 4](#)
- [Knowledge DB, on page 5](#)
- [Certificate fingerprint, on page 6](#)
- [Reset to factory defaults, on page 6](#)


Center shutdown/reboot

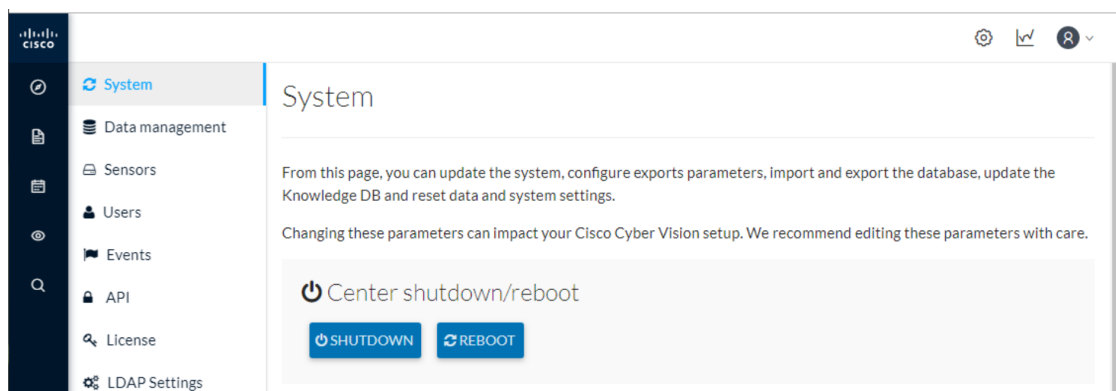

You can trigger a safe shutdown and reboot of the Center from the System administration page.

The reboot can be used in case of a minor bug. For example, in case of a system overload.

Upgrade with a combined update file

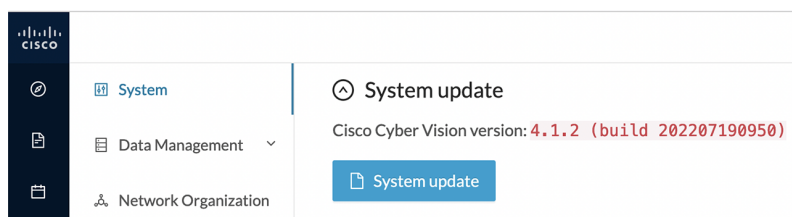

Version releases include a combined update file for the Center, the SENSOR3, SENSOR5, SENSOR7 and the Cisco IC3000 Industrial Compute Gateway. If operating conditions make it possible, you can update the Center and these sensors at once from the GUI.



Note Make sure that all your sensors are connected by accessing the Sensor Explorer page, and SSH is authorized between the Center and the sensors before proceeding to a combined update.



Important Rolling back to an older Cisco Cyber Vision version is not possible.

Requirements:

- A combined update to retrieve from cisco.com.

To verify that the file you just downloaded is healthy, it is recommended to use the SHA512 checksum provided by Cisco.

To do so (Windows users):

Step 1 Retrieve the Cisco Cyber Vision combined update from cisco.com.


Step 2 Open a shell prompt such as Windows Powershell and use the following command to retrieve the file checksum:

```
Get-FileHash .\CiscoCyberVision-<TYPE>-<VERSION>.<EXT> -Algorithm SHA512 | Format-List
```

```
PS C:\Users\<user> > Get-FileHash .\Downloads\CiscoCyberVision-center-3.2.3.ova -Algorithm SHA512 | Format-List
Algorithm : SHA512
Hash      : 13388FB1A17110AF80D751AE7B450F2B29CCB4CB54F550F38B8E6B4236865EC9EDF7773FD05D1055C7F1EF76E68C2B8A96CFE69AB
          : 1B622E4B0BB8EBB9E94DB16
Path      : C:\Users\<user>\Downloads\CiscoCyberVision-center-3.2.3.ova
```

Step 3 In cisco.com, mouse over the file and copy the SHA512 checksum.

Software Download

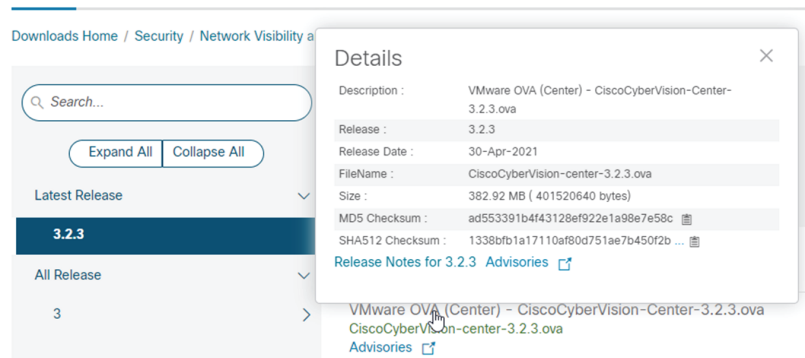

- Step 4** Compare both checksums.
- If both checksums are identical it means the file is healthy.
 - If the checksums do not match try to download the file again.
 - If, after downloading the file again the checksums still don't match, please contact the support.


To update the Center and all applicable sensors:

- Step 5** Access Cisco Cyber Vision's GUI.
- Step 6** Navigate to Admin > System and use the System update button.
- Step 7** Select the update file CiscoCyberVision-update-combined-<VERSION>.dat
- Step 8** Confirm the update.

As the Center and sensors updates proceed, you are redirected to a holding page. Once the update is finished the Center and the sensors need to reboot and you will be logged out from the user interface.


- Step 9** Log in again.
- If sensors were offline when the update occurred, the same procedure can be used as many times as necessary to update all sensors.

Syslog configuration

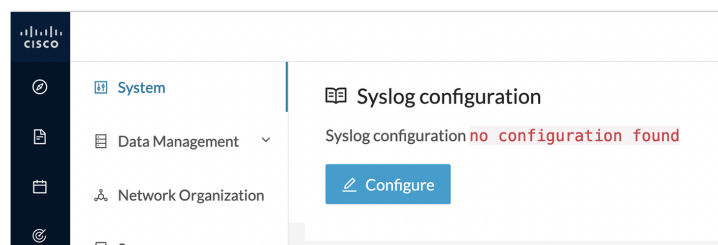

Cisco Cyber Vision provides syslog configuration so that events can be exported and used by a SIEM. To configure which machine syslogs will be sent to:

Step 1 Click Configure.

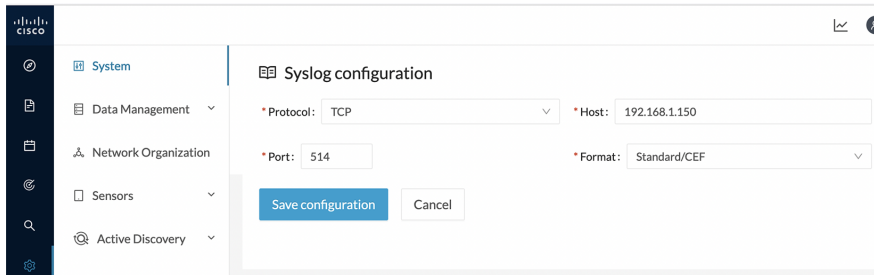

Step 2 Select a protocol.

If you select TCP + TLS connection an additional "set certificate" button is displayed to import a p12 file. This file is to be provided by the administrator of your SIEM solution to secure communications between the Center and the syslog collector.

Step 3 Enter the IP address of the SIEM reachable from the Administration network interface (i.e. eth0) of the Center.

Step 4 Enter the port on the SIEM that will receive syslogs.


Step 5 Select the variant of syslog format:

- Standard: event messages are sent in a format specific to Cisco Cyber Vision and with legacy timestamps (one-second precision).
- CEF: industry standard ("Common Event Format") which is understood by most SIEM solutions (no extra configuration is needed on the SIEM). This is the recommended option.
- RFC3164: extended syslog header format with microsecond precision for timestamps.

Import/Export

You can import and export the Cisco Cyber Vision database from the System administration page.

This can be used on a regular basis to back up the industrial network data on Cisco Cyber Vision or if you need to transfer the database to a different Center.

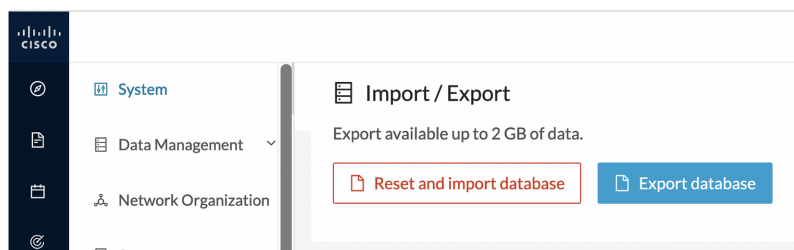

Exports are possible up to 2 GB of data to avoid side effects related to slow database exports. If the database is larger than 2 GB, you will get an error message. In this case, you must connect to the Center using SSH and perform a data dump using the command `sbs db dump`.

Network data, events, users will be kept as well as all customizations (e.g. groups, component names).

As for configurations, only those made in Cisco Cyber Vision's GUI will be kept. Thus, if you change Center you will have to perform a basic configuration of the Center and then configure Cisco Cyber Vision again (refer to the corresponding Center Installation Guide).



Note Import can last up to one hour for big databases. However, you can refresh the page from time to time to check that the import keeps going on normally (i.e. no error message).

Knowledge DB

Cisco Cyber Vision uses an internal database which contains the list of recognized vulnerabilities, icons, threats, etc.




Important It is important to update the Knowledge DB in Cisco Cyber Vision as soon as possible after notification of a new version to be protected against vulnerabilities.

To update the Knowledge DB:

Step 1 Download the latest.db file available from cisco.com.

Step 2 From the Cisco Cyber Vision system administration page click the **Import a knowledge DB** button to upload the file. Importing the new database will rematch your existing components against any new vulnerabilities and update network data.

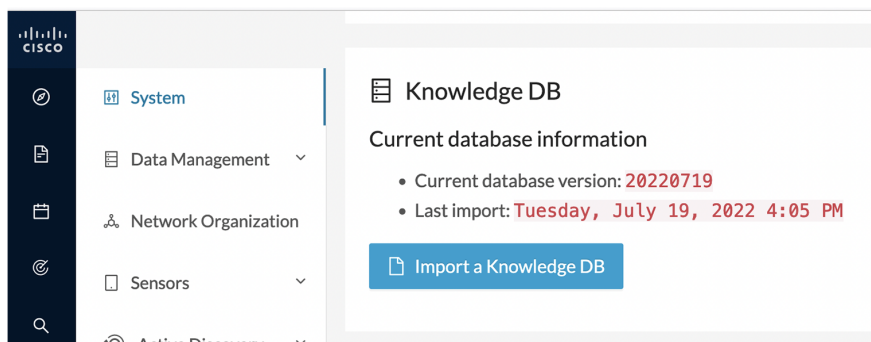

Certificate fingerprint

The certificate fingerprint is used to register a Global Center with its synchronized Centers and vice versa.

The Enroll button is used to enroll a Global Center with its synchronized Centers.

For more information, refer the Centers Installation Guides.

Reset to factory defaults

Resetting the system to factory defaults should be performed carefully with the help of Cisco product support and be used only as a last resort when all other troubleshooting attempts have failed. Please read below all implications of taking this action.

Reset to Factory Defaults is to be used as a last resort to clear all existing data from the Center.

Proceeding to a Reset to Factory Defaults will lead to the deletion of:

- Some Center configuration data elements.

- The GUI configuration (such as user accounts, the setup of event severities, etc.).
- Data collected by the sensors.
- The configuration of all known sensors (such as IP addresses, capture modes, etc.).

Root password, certificates and configurations from the Basic Center configuration will be kept.

Once a Reset to Factory Defaults has been performed, the GUI page refreshes with the Cisco Cyber Vision installation wizard (refer to the corresponding Center Installation Guides).



CHAPTER 2

Data management

From the system administration page, you can manage data stored on Cisco Cyber Vision by [Clear data](#) to optimize the Center performances, [Expiration settings](#), and [Ingestion configuration](#).

Cisco Cyber Vision update procedure will not purge any data automatically. The Center's 3.2.x database will be migrated to the new 4.0.0 schema. All components, activities, flows, events, etc. will be migrated. Since the migration process can take hours (from 1 to 24 hours), it is possible to proceed to a data purge in release 3.2.x to shorten the migration process. This purge can be launched either from the [Clear data](#) page in the Graphic User Interface (GUI), or from the Command Line Interface (CLI), using the following command where different options will be offered:

```
sbs-db --help
```

Once migrated, the database content will be managed with version 4.0.0 new data retention policies. Expiration settings will be applied, and the system will purge by default:

- Events after 6 months
- Flows after 6 months
- Variables after 2 years

The user will have 3 days once the migration from 3.2.x to 4.0.0 is done to set [Expiration settings](#) as needed before default settings are applied by the system.

- [Clear data, on page 9](#)
- [Expiration settings, on page 10](#)
- [Ingestion configuration, on page 11](#)


Clear data

From this page, you can clear data stored on Cisco Cyber Vision to optimize the Center's performances.

You can clear data partially or totally, like below:

- all data
- activities, flows and variables
- flows and variables
- variables

Clearing data should be performed carefully with the help of Cisco Cyber Vision product support and be used only as a last resort when all other troubleshooting attempts have failed. Clearing any data can impact monitoring of the network. Please read below all implications about all data clearance.

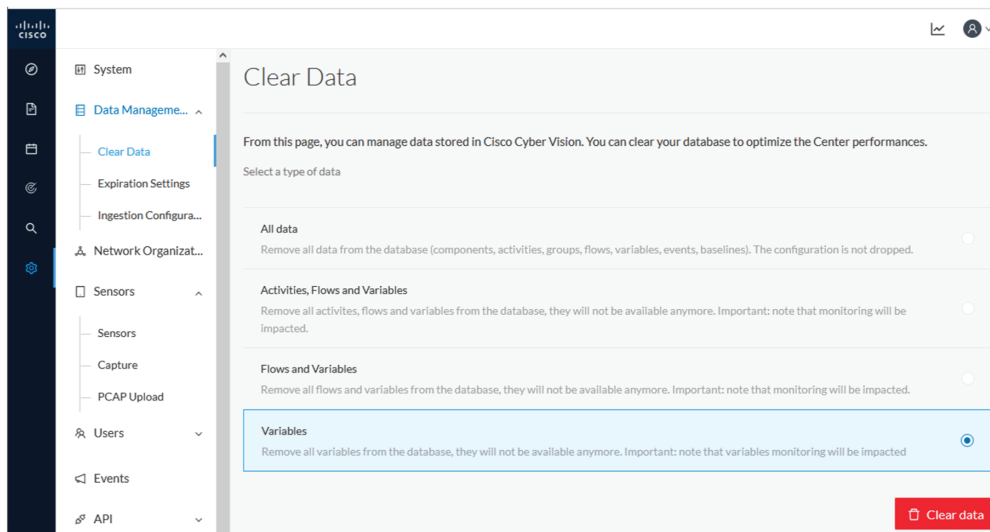

About all data clearance:


Clearing all data is to be used as a last resort in case of database overload issues.

This will result in the entire database content deletion. Network data such as components, flows, events and baselines will be deleted from Cisco Cyber Vision and the GUI will be emptied.

All configurations will be saved. Existing users and user data configuration (such as capture modes, events severity set up, syslog configuration) will remain unchanged.


Expiration settings

From this page, you can set data expiration time. Data is removed on a daily-basis once they expire. You can set an expiration time to events, flows and variables independently, and for a period of 7 days, 1 month, 3 months, 6 months or 1 year.

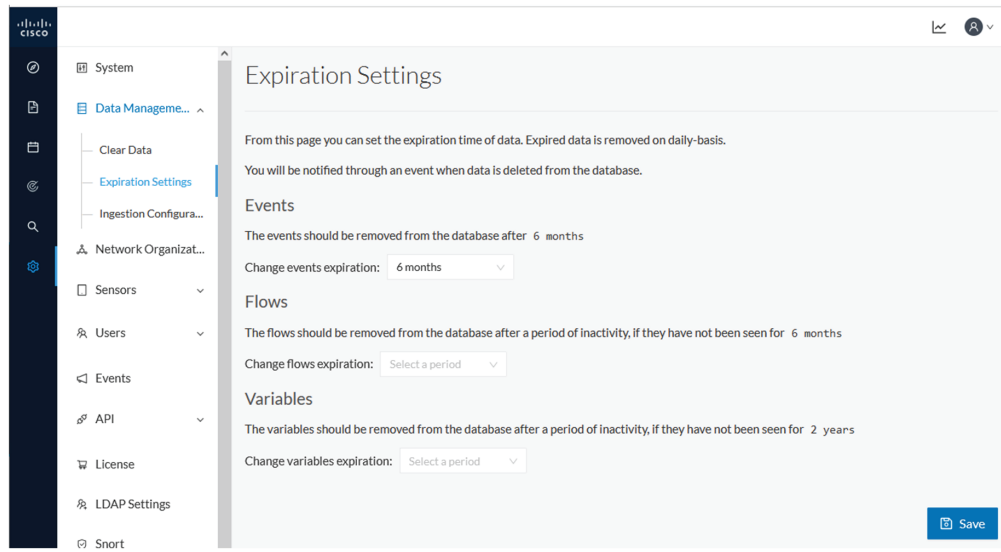

Ingestion configuration

The ingestion configuration page allows you to configure flow and variable traffic storage. You can choose whether to store flows and variables.

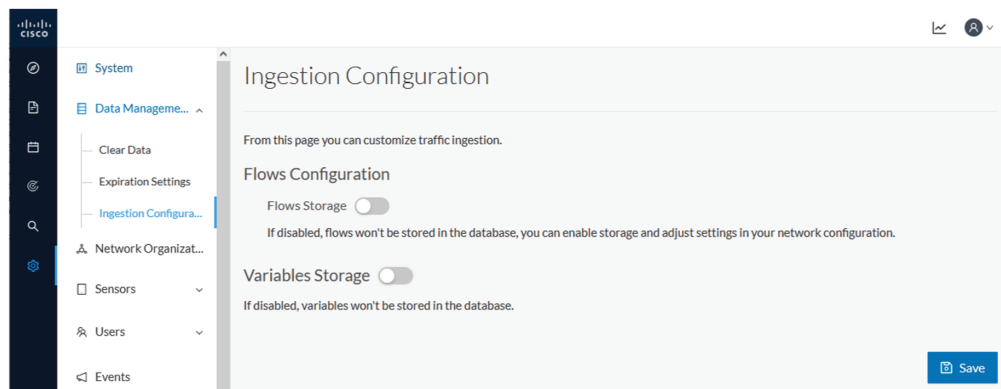

If flows storage is enabled, it is possible to choose from which subnetworks flows should be stored. These subnetworks can be set on the [Network organization](#) page. The option "others", that is, flows that are not part of the industrial private network, is disabled by default.

Flows Configuration

Flows Storage

If disabled, flows won't be stored in the database, you can enable storage and adjust settings in your network configuration.

Network Name	Flow Storage
Others	<input type="checkbox"/>
Endpoints without IP address	<input checked="" type="checkbox"/>
10/8 private network	<input checked="" type="checkbox"/>
172.16/12 private network	<input checked="" type="checkbox"/>
192.168/16 private network	<input checked="" type="checkbox"/>
FC00::/7 IPv6 local unicast	<input checked="" type="checkbox"/>

It is also possible to choose if enabling flows aggregation and port scan detection.

Flows Aggregation

Cisco Cyber Vision stores every individual network flow that has been seen by the sensors with full details (including the client/server ports for each flow).
For some TCP/UDP based protocols, the client port is dynamically generated by the client and thus Cisco Cyber Vision will store multiple similar copies of the flow for each spotted client port.
When enabling flow aggregation, Cisco Cyber Vision will instead discard the client port, thus limiting the number of flows in the database.

Only the following protocols are concerned by flow aggregation: DNS, NTP, SSH, SNMP, Syslog, RabbitMQ, HTTP(S), IEC104, EtherNet/IP.
Flows for other protocols are always stored with full details.

Port scan detection



CHAPTER 3

Network organization

- [Network organization, on page 13](#)

Network organization

This page allows you to define the subnetworks inside the industrial network by setting up IP address ranges and declaring whether networks are internal or external.

IP Address / subnet	VLAN ID	Network Name	Network Type	Action
10.0.0.0/8		10/8 private network	OT Internal	
172.16.0.0/12		172.16/12 private network	OT Internal	
192.168.0.0/16		192.168/16 private network	OT Internal	
fc00::/7		FC00::/7 IPv6 local unicast	OT Internal	

In Cisco Cyber Vision all IP addresses in private format are classified as OT internal by default. Declaring a subnetwork as OT internal is useful in case IP addresses in public format are used in a private network of an industrial site. Conversely, declaring a set of IP addresses as external because they are public will exclude their flows from the database, and exclude their devices from the license device count and the risk score.

Overall, defining subnetworks in Cisco Cyber Vision is useful for several reasons:

- It allows you to choose afterwards how related flows should be stored through the [Ingestion configuration](#). Excluding unnecessary flows will have positive impact on performances.
- It will impact devices' [risk scores](#), since a private network is considered as safer than an external one.

- Cisco Cyber Vision license will be more accurate, because devices from an external network will be excluded from the licensing device count.

By default, Cisco Cyber Vision groups identical IP addresses detected inside the industrial network into a single device, because in most cases these belong to several components of a device. However, it can happen that the same IP address is used by several devices. In this case, you can choose to select the option **Duplicate IP ranges deployed** option when declaring a subnetwork to prevent duplicate IP addresses from grouping within this subnetwork.

Add a network

To define a subnetwork:

Step 1 In Cisco Cyber Vision, navigate to Admin > Network organization.

Step 2 Click the **Add a network** button.

The Edit a network window pops up:

Step 3 Enter an IP address range and its subnet.

Step 4 If possible, add a VLAN ID.

Step 5 If required, tick the **Duplicate IP ranges deployed** option.

Note This option is useful in case several devices share the same IP address.

Step 6 Give the network a name.

Step 7 Set the network type as OT internal, IT internal or External.

Note Setting the network type can impact Cisco Cyber Vision's performances by setting flows storage, devices' risk score and the license's device count.

Step 8 Click **Save**.



CHAPTER 4

Sensors

- [Sensor Explorer, on page 17](#)
- [Management jobs, on page 31](#)
- [PCAP Upload, on page 33](#)

Sensor Explorer

The Sensor Explorer page allows you to install, manage, and obtain information about the sensors monitoring your industrial network.

Sensor Explorer

From this page, you can explore and manage sensors and sensors folders. Sensors can be remotely and securely rebooted, shut down, and erased. When a sensor connects for the first time, you must authorize it so the Center can receive its data.

[Install sensor](#) [Manage Cisco devices](#) [Organize](#)

Folders and sensors (5)

Filter 0 Selected Move selection to More Actions As of: Feb 15, 2022 10:41 AM

<input type="checkbox"/>	Label	IP Address	Version	Location	Health status	Processing status	Active Discovery	Uptime
<input type="checkbox"/>	FOLDER1			LYON				
<input type="checkbox"/>	FOLDER2			PARIS				
<input type="checkbox"/>	FCY014567	192.168.49.41			Disconnected	Disconnected	Disabled	0
<input type="checkbox"/>	FCH2309Y01Z	192.168.49.23	4.1.0+202202021832		Connected	Pending data	Disabled	6 days
<input type="checkbox"/>	FCW2445P6XS	192.168.49.21	4.1.0+202202021803		Connected	Pending data	Unavailable	6 days

First, you need to know that sensors can be used in two modes, and for different purposes:

- **Online mode:** A sensor in online mode is placed at a particular and strategic point of the industrial network and will continually capture traffic.

Applicable to: Cisco IE3400, IE3300 10G, Cisco IC3000, Catalyst 9300 and Cisco IR1101.

- **Offline mode:** A sensor in offline mode allows you to easily connect it at different points of the industrial network that may be isolated or difficult to access to occasionally make traffic captures. Traffic is captured on a USB drive. The file will then be imported in Cisco Cyber Vision.

Only applicable to Cisco IC3000.

On the Sensor Explorer page, you will see a list of your folders and sensors (when installed) and buttons that will allow you to perform several actions.

Installation modes, features, and information will be available depending on the sensor model and the mode in which it's being used.

Additional information and actions are available as you click a sensor in the list. A right side panel will appear allowing you to see this information such as the serial number, and buttons to perform other actions.






Filter and sort the sensor list

Filtering

Clicking the Filter button allows you to filter the folders and sensors in the list by label, IP address, version, location, health and processing status.

The folders and sensors list without filtering:

Folders and sensors (5)

<input type="checkbox"/>	Label [▲]	IP Address	Version	Location	Health status [ⓘ]	Processing status [ⓘ]
<input type="checkbox"/>	 FOLDER1			Lyon		
<input type="checkbox"/>	 FOLDER2			Paris		
<input type="checkbox"/>	 FCH2309Y01Z	192.168.49.23	4.1.0+202202151504		Connected	Pending data
<input type="checkbox"/>	 FCW2445P6X5	192.168.49.21	4.1.0+202202151440		Connected	Normally processing
<input type="checkbox"/>	 FCY014567	192.168.49.41			Disconnected	Disconnected

Type in the field or select from the drop down menu to reach the folder(s) or sensor(s) and click the Apply button:

Folders and sensors (5)

Filter 0 Selected Move selection to More Actions ▾

Label	IP Address	Version	Location	Health status ⓘ	Processing status ⓘ
FCH			Lyon		
			Paris		
		.1.0+202202151504		Connected	Pending data
		.1.0+202202151440		Connected	Pending data
				Disconnected	Disconnected

Cancel Apply

The folders and sensors list after filtering by label:

Folders and sensors (1)

Filter 0 Selected Move selection to More Actions ▾

Label is FCH ✕

<input type="checkbox"/>	Label ▲	IP Address	Version	Location	Health status ⓘ	Processing status ⓘ
<input type="checkbox"/>	FCH2309Y01Z	192.168.49.23	4.1.0+202202151504		Connected	Pending data

Sorting

Sort icons allow you to sort sensors by label, IP address, version, location, health and processing status by alphabetical or by ascending/descending order. Sort icons appear when applied or as you hover over them.

Folders and sensors (5)

Filter 0 Selected Move selection to More Actions ▾

<input type="checkbox"/>	Label ▾	IP Address ▾	Version	Location	Health status ⓘ	Processing status ⓘ
<input type="checkbox"/>	FOLDER2			Paris		
<input type="checkbox"/>	FOLDER1			Lyon		
<input type="checkbox"/>	FCY014567	192.168.49.41			Disconnected	Disconnected
<input type="checkbox"/>	FCW2445P6X5	192.168.49.21	4.1.0+202202151440		Connected	Pending data
<input type="checkbox"/>	FCH2309Y01Z	192.168.49.23	4.1.0+202202151504		Connected	Pending data

Sensors status

There are two types of sensor status:

- The health status, which indicates at which step of the enrollment process the sensor is.
- The processing status, which indicates the network connection state between the sensor and the Center.

<input type="checkbox"/>	Label	IP Address	Version	Location	Health status ⓘ	Processing status ⓘ	Active Discovery	Uptime
<input type="checkbox"/>	FCY014567	192.168.49.41			Disconnected	Disconnected	Disabled	N/A
<input type="checkbox"/>	FCH2309Y01Z	192.168.49.23	4.1.0+202202151504		Connected	Pending data	Enabled	3 days
<input type="checkbox"/>	FCW2445P6X5	192.168.49.21	4.1.0+202202151440		Connected	Pending data	Enabled	6 hours

Health status:

- **New**

This is the sensor's first status when it is detected by the Center. The sensor is asking the DHCP server for an IP address.

- **Request Pending**

The sensor has asked the Center for a certificate and is waiting for the authorization to be enrolled.

- **Authorized**

The sensor has just been authorized by the Admin or the Product user. The sensor remains as "Authorized" for only a few seconds before displaying as "Enrolled".

- **Enrolled**

The sensor has successfully connected with the Center. It has a certificate and a private key.

- **Disconnected**

The sensor is enrolled but isn't connected to the Center. The sensor may be shut down, encountering a problem, or there is a problem on the network.

Processing status:

- **Disconnected**

The sensor is enrolled but isn't connected to the Center. The sensor may be shut down, encountering a problem, or there is a problem on the network.

- **Not enrolled**

The sensor is not enrolled. The health status is New or Request Pending. The user must enroll the sensor for it to operate.

- **Normally processing**

The sensor is connected to the Center. Data are being sent and processed by the Center.

- **Waiting for data**

The sensor is connected to the Center. The Center has treated all data sent by the sensor and is waiting for more data.

- **Pending data**

The sensor is connected to the Center. The sensor is trying to send data to the Center but the Center is busy with other data treatment.

Sensors features

You will find in the Sensor Explorer page several features to manage and use your sensors. Some buttons are accessible from the Sensor Explorer page itself to manage one or more sensors. Other buttons are available when clicking a sensor in the list. A right side panel opens with additional sensor information and actions that are available or not depending on the sensor model, mode (online or offline) and the installation type performed.

FCH2309Y01Z

Label: FCH2309Y01Z [✎](#)
 Serial Number: FCH2309Y01Z
 IP address: 192.168.49.23
 Version: 4.1.0+202202151504
 System date: Feb 16, 2022 10:07:45 AM
 Deployment: Sensor Management Extension
 Active Discovery: Disabled
 Capture mode: All

System Health
 Status: Connected
 Processing status: Pending data
 Uptime: 7 minutes

[Go to statistics](#)

Start Recording

Last recording: Feb 10, 2022 3:36:54 PM
[Download \(49 bytes\)](#)

[Move to](#)

[Download package](#) [Capture mode](#)

[Redeploy](#) [Enable IDS](#)

[Reboot](#) [Shutdown](#)

[Uninstall](#)

- The **Start recording** button records a traffic capture on the sensor. Records can be used for traffic analysis and may be requested by Cisco support in case of malfunctions. You can download the recording clicking the link below.



Note This feature is targeted for short captures only. Performing long captures may cause the sensor overload and packets loss.

- The **Move to** button is to move the sensor through different folders. For more information, refer to [Organize sensors, on page 25](#).
- The **Download package** button provides a configuration file to be deployed on the sensor when installing the sensor manually (online mode). Only applicable to the Cisco IC3000. Refer to its Installation Guide.
- The **Capture Mode** button can be used to set a filter on a sensor sending data to the Center. Refer to the procedure for [Set a capture mode](#).
- The **Redeploy** button can be used to partly reconfigure the sensor, for example to change its parameters such as its IP address.

- The **Enable IDS** button can be used to enable the SNORT engine embedded in some sensors to analyze traffic by using SNORT rules. SNORT rules management is available on the SNORT administration page.
- The **Reboot** button can be used to reboot the sensor in case of a malfunction.
- The **Shutdown** button triggers a clean shutdown of the sensor from the GUI.



Note After performing a shutdown, you must switch the sensor ON directly and manually on the hardware.

- The **Uninstall** button can be used to remove an uninstalled sensor from the list or to fully uninstall a sensor. Diverse options are available according to the sensor model or deployment mode. In the case of a sensor deployed through the management extension, the IOx app can be removed from the device, whereas a reset to factory defaults can be performed in other cases. In any case, the sensor will be removed from the Center.

Install sensor


From the Sensor Explorer page, you can:

- Install a sensor manually.
- Install a sensor via the IOx extension. To use the Install via extension button you must first install the sensor management extension via the Extensions page.
- Capture traffic with an offline sensor (only applicable to Cisco IC3000).

For more information about how to install a sensor, refer to the corresponding Sensor Installation Guide.

Manage credentials

The Manage credentials button, which you can have access by clicking Manage Cisco devices in the Sensor Explorer page, is to register your global credentials if configured before in the Local Manager.

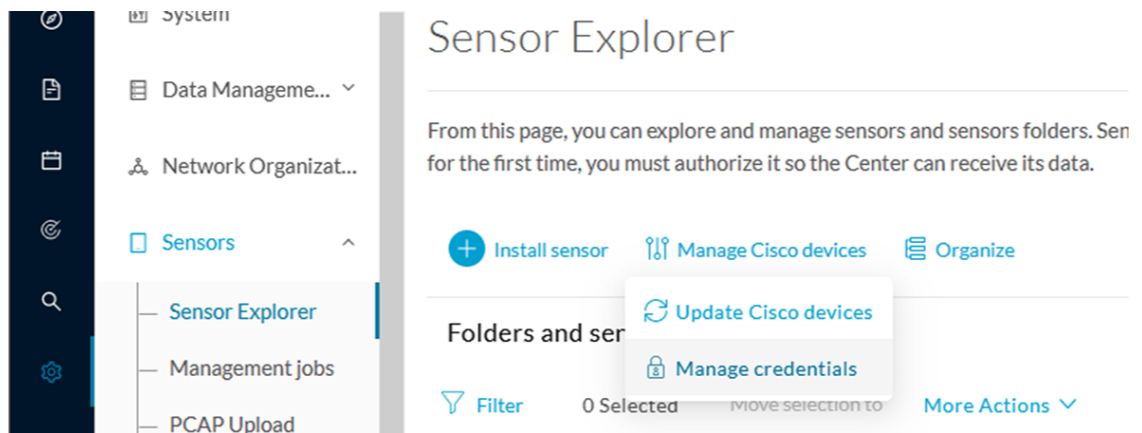

This feature can be used to register your global credentials in Cisco Cyber Vision. This will allow you to enter these credentials only once and they will be used when performing actions that require these credentials, that is installing and updating sensors via the IOx extension.

Only one set of global credentials can be used per Cisco Cyber Vision instance, which means that you cannot have several set of sensors accessible by different global credentials in a single instance. If there are several sensor administrators, they must use the same global credentials registered in Cisco Cyber Vision. However, you can have a set of sensors using a single global credentials and other sensors with their own single credentials.

Global credentials are stored in Cisco Cyber Vision but are set at the switch level in the Local Manager. Consequently, if you lose your global credentials, you must refer to the switch customer support and documentation.

The Manage credentials button can be used the first time you register your global credentials and each time global credentials are changed in the Local Manager. To do so, enter the login and password and click Save.

Once the global credentials are registered, the feature will be enabled in the Install via extension procedure. Select the Use global credentials option to use your global credentials.

Install via extension

Reach Cisco device

Please fill the fields below to enable Cisco Cyber Vision to reach your device.

IP address*

Port*

For example 443 or 8443

Center collection IP

leave blank to use current collection IP

Credentials

 Use global credentials

Capture mode

Optimal (default): analyze the most relevant flows

Organize sensors

You can create folders and move your sensors into the folders for more clarity. Folders can correspond to a location, a person in charge, a set of disconnected sensors, etc.

To create a folder and move a sensor in it:

1. Click the Organize button and click Create folder.

Sensor Explorer

From this page, you can explore and manage sensors and sensors folders. So for the first time, you must authorize it so the Center can receive its data.

[+ Install sensor](#) [Manage Cisco devices](#) [Organize](#)

[+ Create folder](#)

Folders and sensors (4)

[Filter](#) 0 Selected Move selection to [More Actions](#) ▼

<input type="checkbox"/>	Label	IP Address	Version
<input type="checkbox"/>	FOLDER1		

2. Write a folder name, and, if needed, a location and a description.

CREATE FOLDER

Folder name *

FOLDER2

Location

Paris

Description

Ok Cancel

The new folder is displayed in the sensor list.

Folders and sensors (5)

Filter 0 Selected Move selection to More Actions AS 1

<input type="checkbox"/>	Label	IP Address	Version	Location	Health status ⓘ	Processing status ⓘ
<input type="checkbox"/>	FOLDER1			Lyon		
<input type="checkbox"/>	FOLDER2			Paris		
<input type="checkbox"/>	FCY014567	192.168.49.41			Disconnected	Disconnected
<input type="checkbox"/>	FCH2309Y01Z	192.168.49.23	4.1.0+202202151504		Connected	Pending data
<input type="checkbox"/>	FCW2445P6X5	192.168.49.21	4.1.0+202202151440		Connected	Normally processing


- Select a sensor in the list and click the button Move selection to.

Folders and sensors (5)

Filter 1 Selected **Move selection to** More Actions AS

<input checked="" type="checkbox"/>	Label	IP Address	Version	Location	Health status ⓘ	Processing status ⓘ
<input type="checkbox"/>	FOLDER1			Lyon		
<input type="checkbox"/>	FOLDER2			Paris		
<input type="checkbox"/>	FCY014567	192.168.49.41			Disconnected	Disconnected
<input checked="" type="checkbox"/>	FCH2309Y01Z	192.168.49.23	4.1.0+202202151504		Connected	Pending data
<input type="checkbox"/>	FCW2445P6X5	192.168.49.21	4.1.0+202202151440		Connected	Normally processing

- Select the folder you want to place the sensor in or create a new folder. Root can be used to move sensors back into the primary list.

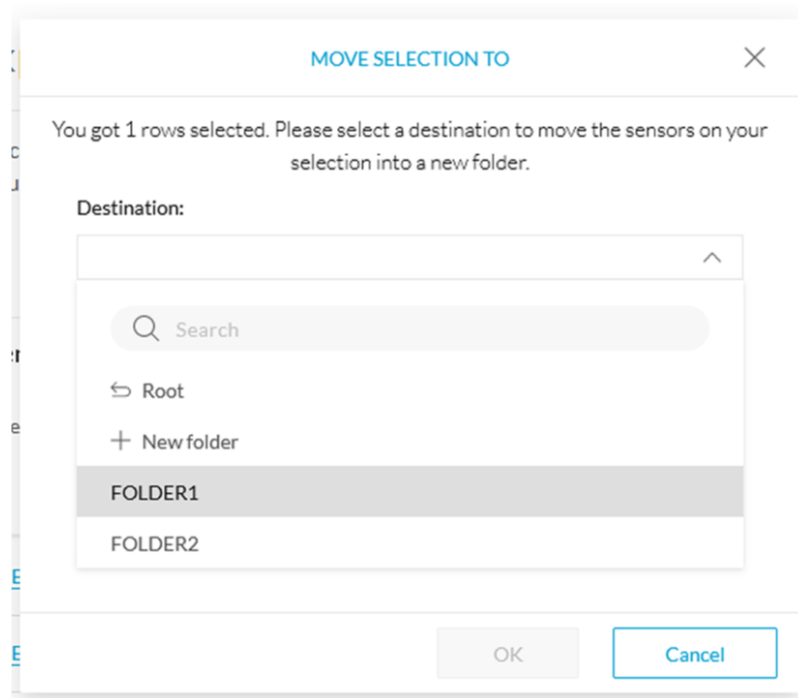

The sensor is moved into the folder. The sensor version, health status and processing status are displayed in the folder line.

Folders and sensors (4)

Filter 0 Selected Move selection to More Actions

<input type="checkbox"/>	Label	IP Address	Version	Location	Health status	Processing status
<input type="checkbox"/>	FOLDER1		4.1.0+202202151504	Lyon	Connected	Pending data
<input type="checkbox"/>	FOLDER2			Paris		
<input type="checkbox"/>	FCY014567	192.168.49.41			Disconnected	Disconnected
<input type="checkbox"/>	FCW2445P6X5	192.168.49.21	4.1.0+202202151440		Connected	Pending data

If you move a sensor in a disconnected state inside this same folder, then its information will be displayed in the folder line rather than the sensor in connected state. Less secure sensor status are showcased in priority to drag your attention.

Folders and sensors (3)

Filter 0 Selected Move selection to More Actions ▾

<input type="checkbox"/>	Label	IP Address	Version	Location	Health status ⓘ ▾	Processing status ⓘ
<input type="checkbox"/>	 FOLDER1		- 4.1.0	Lyon	Disconnected ⓘ	Disconnected
<input type="checkbox"/>	 FOLDER2			Paris		
<input type="checkbox"/>	 FCW2445P6X5	192.168.49.21	4.1.0+202202151440		Connected	Pending data

The sensors inside a folder:



FOLDER1

📍 Lyon

[Edit](#) [Delete](#)

Folders and sensors (2)

Filter 0 Selected Move selection to More Actions ▾

<input type="checkbox"/>	Label	IP Address	Version	Health status ⓘ ▾	Processing status ⓘ
<input type="checkbox"/>	 FCY014567	192.168.49.41		Disconnected ⓘ	Disconnected
<input type="checkbox"/>	 FCH2309Y01Z	192.168.49.23	4.1.0+202202151504	Connected	Pending data

Set a capture mode

The Capture mode feature lets you choose which network communications will be analyzed by the sensors. You can set it by clicking an online sensor in the sensors list of the Sensor Explorer page or during a sensor installation.

Setting the capture mode on a sensor from the right side panel:

Sensor Explorer

From this page, you can explore and manage sensors and sensors folders. Sensors can be remotely and connects for the first time, you must authorize it so the Center can receive its data.

[+ Install sensor](#) [Manage Cisco devices](#) [Organize](#)

Folders and sensors (5)

[Filter](#) 0 Selected [Move selection to](#) [More Actions](#) ▾

<input type="checkbox"/>	Label	IP Address	Version	Location	Health status
<input type="checkbox"/>	FOLDER1			Lyon	
<input type="checkbox"/>	FOLDER2			Paris	
<input type="checkbox"/>	FCY014567	192.168.49.41			Discon
<input type="checkbox"/>	FCH2309Y01Z	192.168.49.23	4.1.0+202202151504		Conne
<input type="checkbox"/>	FCW2445P6X5	192.168.49.21	4.1.0+202202151440		Conne

FCH2309Y01Z

Label: FCH2309Y01Z [✎](#)
 Serial Number: FCH2309Y01Z
 IP address: 192.168.49.23
 Version: 4.1.0+202202151504
 System date: Mar 9, 2022 11:46:58 AM
 Deployment: Sensor Management Extension
 Active Discovery: Enabled
 Capture mode: All

System Health
 Status: Connected
 Processing status: Pending data
 Uptime: 20 hours

[Go to statistics](#)

[Start Recording](#)

[Move to](#)

[Download package](#) **[Capture mode](#)**

[Redeploy](#) [Enable IDS](#)

[Reboot](#) [Shutdown](#)

[Uninstall](#) [Active Discovery](#)

Capture modes:

CAPTURE MODE

Please select an option to filter the flows analyzed by this sensor.

Capture mode:

- Optimal (default): analyze the most relevant flows**
- All: analyze all the flows**
- Industrial only: analyze industrial flows**
- Custom: you set your filter using a packet filter in tcpdump-compatible syntax**

[OK](#) [Cancel](#)

The aim is mainly to focus the monitoring on relevant traffic but also to reduce the load on the Center.

For example, a common filter in a firewall can consist of removing the network management flows (SNMP). This can be done by setting a filter like "not (port 161 and host 10.10.10.10)" where "10.10.10.10" is the network management platform.

Using Capture mode Cisco Cyber Vision performance can be improved on large networks.

Capture modes operate because of filters applied on each sensor. Filters are set to define which types of incoming packets are to be analyzed by the sensors. You can set a different filter on each sensor according to your needs.

You can set the capture mode in the installation wizard when enrolling the sensors during the Center installation. This option is recommended if you already know which filter to set. Otherwise, you can change it at any time through the Sensor Explorer page in the GUI (provided that the SSH connection is allowed from the Center to the sensors).



Note You can set a capture mode to offline sensors from a file containing the filter and registered on the USB drive. This will be then plugged on the Offline USB port of the device. For more information about setting a capture mode on an offline sensor contact the support.

The different capture modes are:

- **ALL:** No filter is applied. The sensor analyzes all incoming flows and they will all be stored inside the Center database.
- **OPTIMAL (Default):** The applied filter selects the most relevant flows according to Cisco expertise. Multicast flows are not recorded. This capture mode is recommended for long term capture and monitoring.
- **INDUSTRIAL ONLY:** The filter selects industrial protocols only like modbus, S7, EtherNet/IP, etc. This means that IT flows of the monitored network won't be analyzed by the sensor and won't appear in the GUI.
- **CUSTOM (advanced users):** Use this capture mode if you want to fully customize the filter to be applied. To do so you will need to use the tcpdump syntax to define the filtering rules.

Management jobs

As some deployment tasks on sensors can take several minutes, this page shows the jobs execution status and advancement for each sensor deployed with the sensor management extension.

This page is only visible when the sensor management extension is installed in Cisco Cyber Vision.

The screenshot shows the 'Management jobs' section in the Cisco GUI. The table displays the following data:

Jobs	Steps	Duration
Single redeployment (FCW2435P3KW)	✓ — ✓ — ✓ — ✓	1m 11s
Single redeployment (FCW23500HDC)	✓ — ✓ — ✗ —	41s
Single redeployment (FOC2337L0CW)	✓ — ✓ — ✓ — ✓	1m 33s
Single redeployment (FCW23500HDC)	✓ — ✓ — ✗ —	35s
Single redeployment (FCW23500HDC)	✓ — ✓ — ✗ —	39s
Single redeployment (FCW23500HDC)	✓ — ✓ — ✗ —	43s
Single redeployment (FOC2334V045)	✓ — ✓ — ✓ — ✓	6m 52s

You will find the following jobs:

- Single deployment

This job is launched when clicking the Deploy Cisco device button in the sensor administration page, that is when a new IOx sensor is deployed.

- Single redeployment

This job is launched when clicking the Reconfigure Redeploy button in the sensor administration page, that is when deploying on a sensor that has already been deployed. This option is used for example to change the sensor's parameters like enabling active discovery.

- Single removal

This job is launched when clicking the Remove button from the sensor administration page.

- Update all devices

This job is launched when clicking the Update Cisco devices button from the sensor administration page. A unique job is created for all managed sensors that are being updated.

If a job fails, you can click on the error icon to view detailed logs.

Jobs	Steps
Single redeployment (FCW23500HDC)	
Single redeployment (FCW2435P3KW)	
Single redeployment (FCW23500HDC)	
Single redeployment (FOC2337L0CW)	
Single redeployment (FCW23500HDC)	

Enroll

Error


```
Fatal error: cannot upload provisioning
package: UploadAppData failed: Fog
Director API Error Code 0:
{"message": "File upload failed. App
data upload is not allowed since this
app was installed with --rm option and
currently app container is cleaned
after stopping the app. Consider
starting the app and retry."}
```

PCAP Upload

This page allows you to upload pcaps to view their data in Cisco Cyber Vision.

When selecting a pcap, two options are available:

- You can choose to use the timestamp of the pcap or the current timestamp instead. Choosing the current timestamp can be useful if the pcap timestamp is old and searching for its data in Cisco Cyber Vision is thus easier.
- You can define a preset from the pcap. Once the pcap is uploaded you'll just have to click the pcap link to be redirected to its preset.

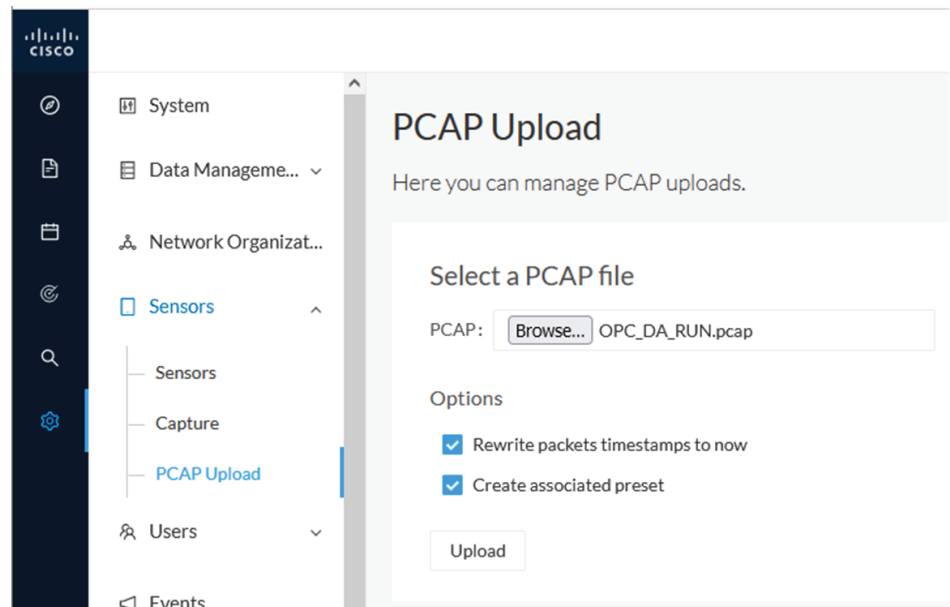

Note that during the upload that the status for the DPI and Snort are displayed.

Name	Size	Upload status	Processing status	Packets first timestamp
OPC_DA_RUN.pcap	7.3 MB	<div style="width: 100%;"><div style="width: 100%;"></div></div> ●	DPI: ● Snort: ●	Jul 5, 2021 5:42:20 PM
smb_putty_xfer.pcap	726.5 kB	<div style="width: 100%;"><div style="width: 100%;"></div></div> ●	DPI: ● Snort: ●	Jun 30, 2021 4:23:24 PM
MergedFile.pcapng	815 MB	<div style="width: 3%;"><div style="width: 3%;"></div></div> 3%	DPI: ○ Snort: ○	
DAN_Rockwell_With_Variables.pcap	1.5 MB	<div style="width: 100%;"><div style="width: 100%;"></div></div> ●	DPI: ● Snort: ●	Jun 30, 2021 11:28:37 AM

If uploading a large file, you have the possibility to pause it. To relaunch the upload, you just need to select the same pcap again with the browse button and click Resume.



Note pcap data cannot be erased individually from Cisco Cyber Vision. You will need to use the [Clear data](#) button and it will affect the whole database. Upload pcaps with caution.



CHAPTER 5

Active Discovery

- [Active Discovery policies, on page 35](#)

Active Discovery policies

Active Discovery is used to allow a sensor to send packets to the network to discover previously unseen devices and gather additional properties for known devices.

Active Discovery operates in Broadcast and Unicast, and responses received will be analyzed by Cisco Cyber Vision.

An Active Discovery policy is a list of settings which define protocols and their parameters that will be used to scan the industrial network. The policy will be used in a preset and be applied on a list of sensors and components.

The screenshot shows the Cisco Cyber Vision interface. On the left is a dark navigation sidebar with icons for Explore, Reports, Events, Monitor, Search, and Admin. The main content area is titled 'Active Discovery policies' and contains a table with the following data:

Name	Number of associated presets
snmp V2c public	4
Broadcast PN	2
Broadcast S7	0
Broadcast ICMPv6	1

For more information, refer to the [Cisco Cyber Vision Active Discovery Configuration Guide](#).




CHAPTER 6

Users

- [Management, on page 37](#)
- [Role Management, on page 39](#)
- [Security settings, on page 42](#)

Management

You can create, edit and delete users through the users administration page.

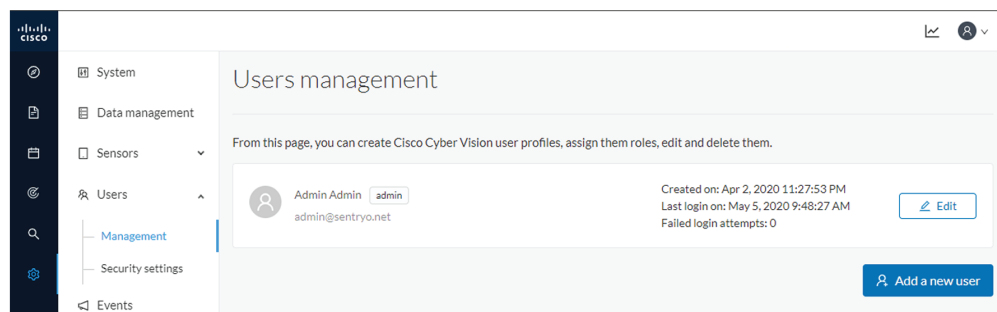

During their creation each user must be assigned with one of the following user roles (from full rights to read-only) or with a custom role (refer to [Role Management](#)).

- **Admin**

The Admin user has full rights on the Cisco Cyber Vision platform. Users who have this role assigned oversee all sensitive actions like user rights management, system updates, syslog configuration, reset and capture modes configuration on sensors.

- **Product**

The product user has access to several features of the system administration page (i.e. the system, sensors and events administration pages). This access level is for users who manage sensors from a remote location. In addition, they can manage the severity of events and, if enabled by the Admin user, can manage their export to syslog.

- **Operator**

This access level is for users who use the Monitor mode and manage groups but do not have to work with the platform administration. Thus, the Operator user has access to all pages, except the system administration page.

- **Auditor**

This access level provides read-only access to the Explore, Reports, Events and Search pages. Auditors can use sorting features (such as search bars and filters) that do not require persistent changes to the Cisco Cyber Vision data (unlike Autolayout), and generate reports.

You can create as many users as needed with any user rights. Thus, several administrators can use and administrate the whole platform.

CREATE A NEW USER

Firstname * : Lastname * :

Email * :

Password * : Confirm password * :

Great

Suggested password:
 AwsLWumtP}pzv4FrNGB: [9]

Role * :

[Learn more about users roles >](#)

Admin: has access to the Admin page and can set users roles.
 Product: has access to the sensor panel and the events panel in the Admin page.
 Operator: has access to the Monitor mode and can edit groups and acknowledge vulnerabilities.
 Auditor: has access to the Map and Events pages.

OK Cancel

However, each user must have their own account. That is:

- Accounts must be nominative.
- One email address for several accounts is not allowed (note that email will be requested for login access).

Passwords must contain at least 6 characters and comply with the rules below. Passwords:

- Must contain a lower case character: a-z.
- Must contain an upper case character: A-Z.
- Must contain a numeric character: 0-9.
- Cannot contain the user id.
- Must contain a special character: ~!"#\$%&'()*+,-./:;<=>?@[]^_{}.



Important Passwords should be changed regularly to ensure the platform and the industrial network security.

Passwords' lifetime is defined in the [Security settings](#).

You can create custom user roles in the [Role Management](#).

You can map Cisco Cyber Vision user roles with an external directory's user groups in the LDAP settings page.

Role Management

In addition to the four Cisco Cyber Vision default roles (i.e. Admin, Auditor, Operator and Product), customized roles can be created and modified from the Role management page.

Role management

From this page, you can create Cisco Cyber Vision user roles, edit and delete them.

ADMIN AUDITOR OPERATOR PRODUCT +

Admin

Admin Role

Administrative Rights ⓘ	read		write		
	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	
Active Discovery	<input type="checkbox"/>	<input checked="" type="checkbox"/>	API	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Center Certificate	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Data Management	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Events	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Events Settings	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Explore	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Extensions	<input type="checkbox"/>	<input checked="" type="checkbox"/>
External Authentication	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Integrations	<input type="checkbox"/>	<input checked="" type="checkbox"/>
License	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Monitor	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Network Organization	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Reports	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Risk Score	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Secure X	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Security Settings	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Sensors	<input type="checkbox"/>	<input checked="" type="checkbox"/>
SNMP	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Snort	<input type="checkbox"/>	<input checked="" type="checkbox"/>
System	<input type="checkbox"/>	<input checked="" type="checkbox"/>	User Admin	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Vulnerability Management	<input type="checkbox"/>	<input checked="" type="checkbox"/>			

These roles will help you defining specific privileges and accesses for each group of users.

Default roles cannot be edited or deleted.

You can map Cisco Cyber Vision custom roles with an external directory's user groups in the LDAP settings page.

Create roles


This section explains how to create customized user roles on Cisco Cyber Vision. These can be later mapped to groups in Active Directory.

Step 1 In Cisco Cyber Vision, navigate to Admin > Users > Role Management.

Step 2 Click the + button next to default user roles.

Role management

From this page, you can create Cisco Cyber Vision user roles, edit and delete them.




A new role tab appears.

Step 3 Type a role name and a description.

Role management

From this page, you can create Cisco Cyber Vision user roles, edit and delete them.




Role Name *

Role Description *


Search/Add existing permission:

[+ Add New Permissions](#)

Step 4 Select an existing role from the Search/Add existing permissions drop down menu, or click the Add New Permissions button to build the new user role from scratch.

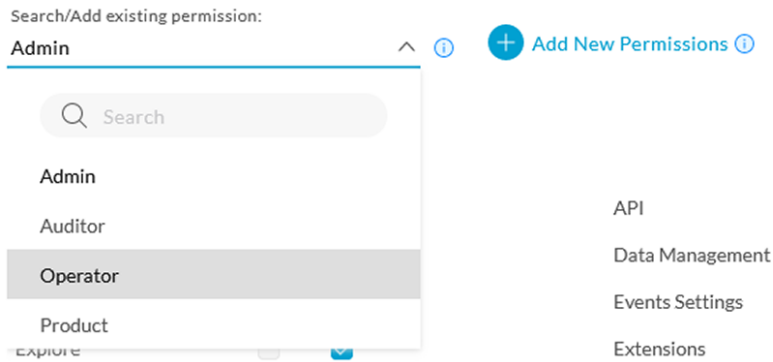

Step 5 Select/unselect permissions from the list as read or write

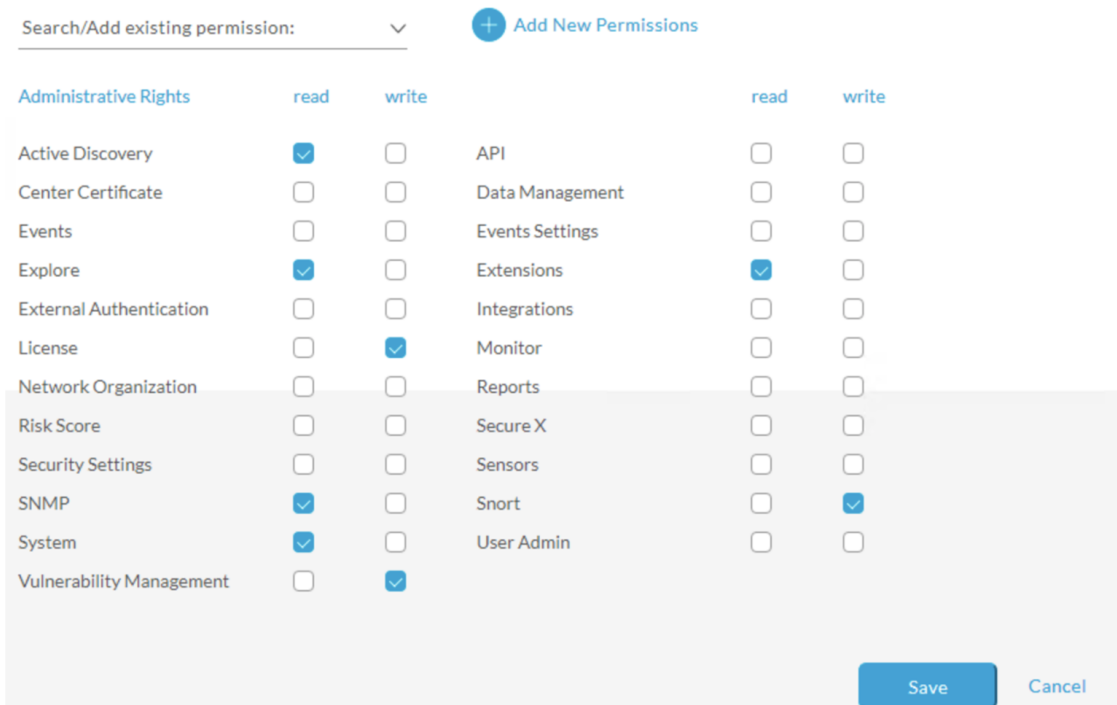

Step 6 Click save.

A message saying that the user role has been created successfully appears.

The new user role is displayed in the tab list.

TESTAD2019 ADMIN AUDITOR OPERATOR PRODUCT +

TestAD2019 [✎](#) [🗑️](#)

TestAD2019 [✎](#)

Administrative Rights ⓘ	read	write		read	write
Active Discovery	<input checked="" type="checkbox"/>	<input type="checkbox"/>	API	<input type="checkbox"/>	<input type="checkbox"/>
Center Certificate	<input type="checkbox"/>	<input type="checkbox"/>	Data Management	<input type="checkbox"/>	<input type="checkbox"/>
Events	<input type="checkbox"/>	<input type="checkbox"/>	Events Settings	<input type="checkbox"/>	<input type="checkbox"/>
Explore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Extensions	<input checked="" type="checkbox"/>	<input type="checkbox"/>
External Authentication	<input type="checkbox"/>	<input type="checkbox"/>	Integrations	<input type="checkbox"/>	<input type="checkbox"/>
License	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Monitor	<input type="checkbox"/>	<input type="checkbox"/>
Network Organization	<input type="checkbox"/>	<input type="checkbox"/>	Reports	<input type="checkbox"/>	<input type="checkbox"/>
Risk Score	<input type="checkbox"/>	<input type="checkbox"/>	Secure X	<input type="checkbox"/>	<input type="checkbox"/>
Security Settings	<input type="checkbox"/>	<input type="checkbox"/>	Sensors	<input type="checkbox"/>	<input type="checkbox"/>
SNMP	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Snort	<input type="checkbox"/>	<input checked="" type="checkbox"/>
System	<input checked="" type="checkbox"/>	<input type="checkbox"/>	User Admin	<input type="checkbox"/>	<input type="checkbox"/>
Vulnerability Management	<input type="checkbox"/>	<input checked="" type="checkbox"/>			

You can modify or delete directly in the tab.

What to do next

Custom roles created can be mapped with an external directory's user groups in the LDAP settings page.

Security settings

From this page you can configure the security settings of users' password such as its lifetime, the number of authorized login attempts, the number of days before a password can be reused, etc.

The screenshot displays the Cisco Cyber Vision GUI for configuring user security settings. The left sidebar contains a navigation menu with categories like System, Data Management, Network Organization, Sensors, Users, Events, API, License, LDAP Settings, Snort, Risk score, Integrations, and Extensions. The 'Users' category is expanded to show 'Management' and 'Security settings', with 'Security settings' selected. The main content area is titled 'Users security settings' and includes a descriptive paragraph: 'From this page, you can configure the Cisco Cyber Vision user passwords security settings: the lifetime, the numbers of authorized failed login attempts and the number of days before a password can be reused.' Below this, there are two main sections: 'Passwords settings' and 'Passwords lifetime'. The 'Passwords settings' section is divided into 'ADMINISTRATORS' and 'USERS'. For 'ADMINISTRATORS', the 'Password minimal length (recommended 16 characters)' is set to 8 and the 'Password maximal length (minimum 64 characters)' is set to 64. For 'USERS', the 'Password minimal length (recommended 8 characters)' is set to 8 and the 'Password maximal length (minimum 64 characters)' is set to 64. The 'Passwords lifetime' section is also divided into 'ADMINISTRATORS', with 'Lifetime password in days' set to 120 and 'Warning days before password expiration' set to 15. A blue 'Save' button is located in the top right corner of the configuration area.



CHAPTER 7

Event

- [Events, on page 45](#)

Events

The severity of events can be customized on the events administration page. By default, changes will be applied to future events only. However, you can apply new customized severities to past events by enabling Apply severity to existing events.



Important This action is irreversible and can take several minutes to complete.

You can reset the severity to default.

You can enable or disable the export of events to syslog and database storage. These two options are active by default. However, make sure [Syslog configuration](#) before the export.

Label	Severity	Syslog export	Database storage	Actions
Differences detected on a Baseline	<input checked="" type="radio"/> low <input type="radio"/> medium <input type="radio"/> high <input type="radio"/> critical	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Apply severity to existing events <input type="checkbox"/> Reset severity to default



CHAPTER 8

API

- [Token, on page 47](#)
- [Documentation, on page 48](#)


Token

Cisco provides a REST API. To use it you first need to create a token through the API administration page.

A token is a random password which authenticates a request to Cisco Cyber Vision to access or even modify the data in the Center through the REST API. For instance, you can request the latest 10 components detected on Cisco Cyber Vision or create new references. Requests can be used by external applications like a SOC solution.



Note Best practice: create one token per application so you can remove or expire accesses separately.

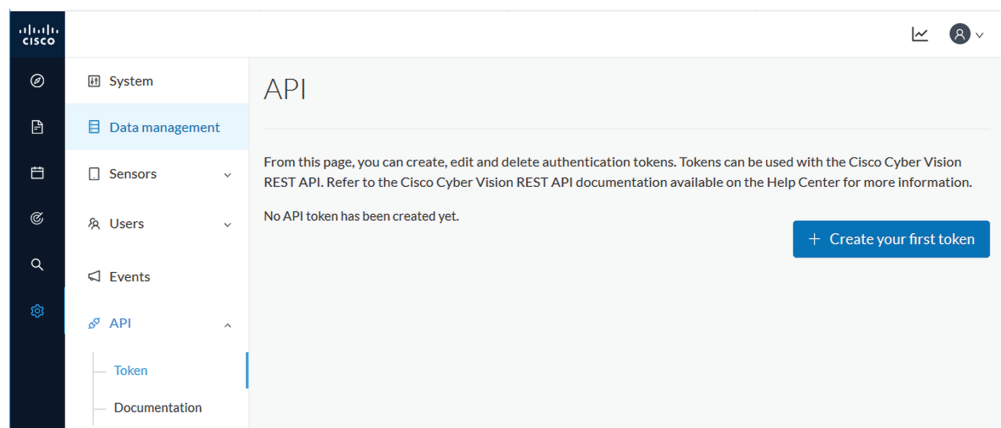

Create your first token and enter a name that will help you identifying the token. For security reasons you can also use the status toggle button to disable authorization to use the token (for example, if the token created is to be used later and you want to prevent access until then) and set an expiration time.

Once the token is created click show to see and copy the token to the clipboard.

Name	Token	Status	Creation Date	Expiration Date	Actions
Alert/SMS	1cs-806ad94c9d70d05a0483f2eb1edc842488f53bc4-4390bf0c8b56670ce142913a458380e18ec12abf Hide	Enabled	Oct 29, 2020	Oct 29, 2021	Edit Refresh Delete
Analyzer API	Hidden Show	Enabled	Oct 29, 2020	None	Edit Refresh Delete
IoC	Hidden Show	Disabled	Oct 29, 2020	None	Edit Refresh Delete

[+ New token](#)

For more information about the REST API refer to the REST API user documentation available on cisco.com.

Documentation

This page is a simplified API development feature. It contains an advanced API documentation with a list of all possible routes that can be used and, as you scroll down the page to Models, a list of possible data responses (data type, code values and meaning).

In addition to information research, this page allows you to perform basic tests and call the API by sending requests such as GET, DELETE and POST. You will get real results from the Center dataset. Specifications about routes are available such as the route's structure, and parameters and arguments that can be set. An URL is generated and curl can be used in a terminal as it is.

However, for an advanced use, you must create an application that will send requests to the API (refer to the REST API documentation).



Important All routes other than GET will modify data on the Center. As some actions cannot be reversed, use DELETE, PATCH, POST, PUT with caution.

Routes are classified by Cisco Cyber Vision's elements type (activities, baselines, components, flows, groups, etc.).

The category "Groups" containing all possible group routes:


Groups <small>Groups are a logical way to organize components.</small>		
GET	/groups	List groups.
POST	/groups	Create a group.
GET	/groups/{id}	Get details of one or many groups.
PUT	/groups/{id}	Update a group.
DELETE	/groups/{id}	Delete a group.
PATCH	/groups/{id}	Update one property of the given group. For the moment, add and remove on components are implemented.

To authorize API communications:

Step 1

Access the API Token menu to create and/or copy a [Token](#).

Access the API Documentation page and click the Authorize button.

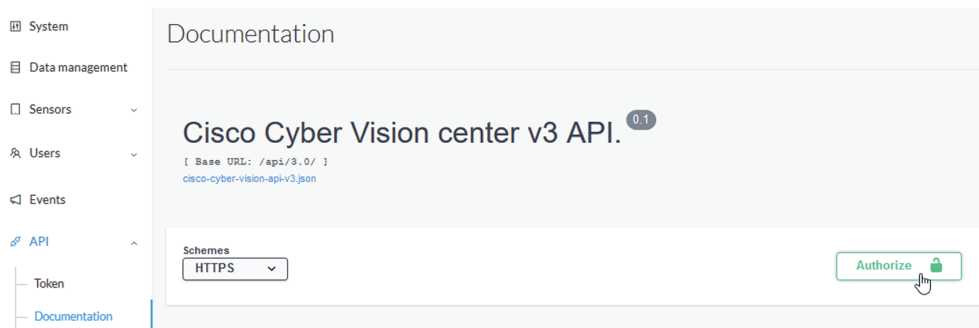


Step 2

Paste the token.


Step 3

Click Authorize.

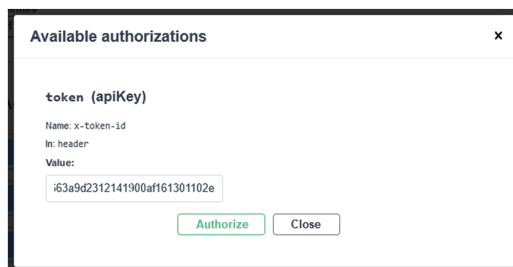

Step 4

Click Close.

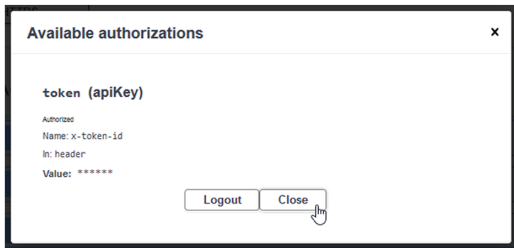


Closed lockers displays. They indicate that routes are secured and authorization to use them is up.


To use a route:

Step 5 Click a route to deploy it. In the example, we choose Get activity list.

Step 6 Click Try it out.

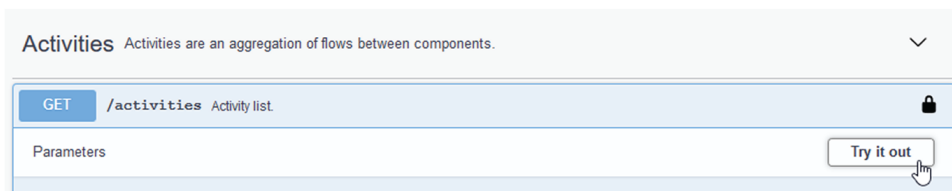

Step 7 You can set some parameters. In the example, we set page to 1 and size to 10.

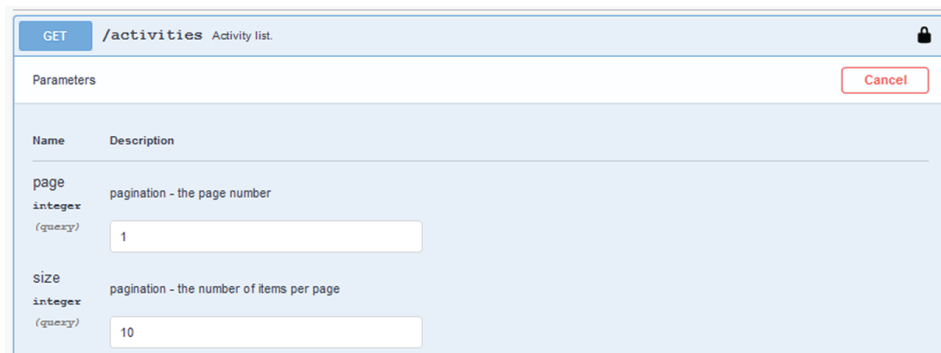

Step 8 Click Execute.

Note You can only execute one route at a time.

A loading icon appears for a few moments. Responses display with curl, Request URL and the server response that you can copy or even download.

Responses Response content type

Curl

```
curl -X GET "https://10.2.3.161/api/3.0/activities?page=1&size=10" -H "accept: application/json" -H "x-token-id: ics-dc5a3eae44b3b9dee3f8358df10fd940aa518396-e2647f7cb065663a9d2312141900af161301102e"
```

Request URL

```
https://10.2.3.161/api/3.0/activities?page=1&size=10
```

Server response

Code	Details
200	<p>Response body</p> <pre>[{ "id": "e1c04e78-ef17-501a-b18c-f37df3325de9_0e47c1b0-b320-5476-90da-b1f109c1abd", "firstActivity": 1603194464591, "lastActivity": 1603869088976, "tags": [{ "id": "CIP_IO", "label": "CIP-IO", "important": false, "category": { "id": "b.d.d1d-0e34-5afc-88e2-3fc3fdafiaz", "label": "Protocol" } }, { "id": "ENIP", "label": "EthernetIP", "important": false, "category": { "id": "b.d.d1d-0e34-5afc-88e2-3fc3fdafiaz", "label": "Protocol" } }] }]</pre> <p>Response headers</p> <pre>content-security-policy: default-src 'self'; frame-ancestors 'none'; style-src 'self' 'unsafe-inline'; img-src 'self' data: content-type: application/json date: Thu29 Oct 2020 11:20:48 GMT pagination_page_number: 1 pagination_page_size: 10</pre>

- Step 9** When you're finished, click the Authorize button.
- Step 10** Logout to clean the token variable, and click Close.



CHAPTER 9

License

- [License, on page 53](#)

License

You can install a license in Cisco Cyber Vision in the License administration panel.

Licensing is based on device count. For device count to be more accurate, it is advised to setup the subnetworks of the monitored industrial network through the [Network organization](#) page. By doing so, you will declare which subnetworks are internal, and which are external. Devices from external subnetworks will be excluded from the license count and related costs would be reduced.

Smart Software Licensing

54 days remaining Evaluation Mode

System

Data Manage...

Network Organization

Sensors

Users

Events

API

License

LDAP Settings

Snort

Risk score

Integrations

Extensions

ACTIONS -

You are currently running in Evaluation mode.

To register Cisco Cyber Vision with Cisco Smart Software Licensing:

- Ensure this product is set with the right Software Subscription Licensing (Essentials or Advantage). This might require you to [edit the Software Subscription Licensing](#).
- Ensure this product has access to the internet. This might require you to [edit the Smart Call Home Transport Settings](#).
- Log in to your Smart Account in [Smart Software Manager](#).
- Navigate to the Virtual Account containing the licenses to be used by this Product Instance.
- Generate a Product Instance Registration Token (this identifies your Smart Account) and copy or save it.

REGISTER

Smart Software Licensing Status

Software Subscription Licensing: Advantage [VIEW / EDIT](#)

License mode: Pre-paid Term Subscription

Registration Status: Unregistered

License Authorization Status: Evaluation Mode (Monday, April 26, 2021 10:18 AM) (54 days remaining)

Transport Settings: Direct [VIEW / EDIT](#)

For more information about how to install a license, refer to the Cisco Cyber Vision Smart Licensing User Guide available on [cisco.com](https://www.cisco.com).



CHAPTER 10


External Authentication

- [LDAP, on page 55](#)

LDAP

Cisco Cyber Vision can delegate user authentication to external services using LDAP (Lightweight Directory Access Protocol), and in particular to Microsoft Active Directory services.

You can enable LDAP authentication in the LDAP Settings administration page.

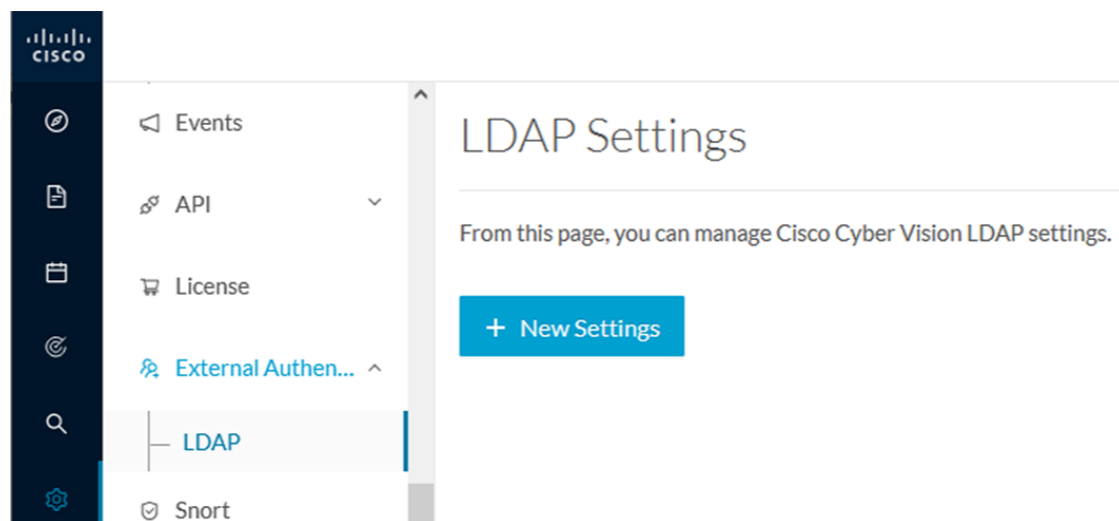

Configuring LDAP:

LDAP integration can be done through normal connection or securely by using certificates depending on the installation compatibility.

Mapping Cisco Cyber Vision roles with Microsoft Active Directory groups:

User groups available in the external directory can be mapped to Cisco Cyber Vision Product, Operator and Auditor user roles or custom roles. Refer to [Role Management](#) to create custom roles.

Because the Admin user role is exclusively reserved for Cisco Cyber Vision internal usage, it cannot be mapped to any external users and thus is not proposed in LDAP settings.

Testing LDAP connection:

After setting up LDAP, the connection between the Cisco Cyber Vision Center and the external directory is to be tested. On the LDAP test connection window, you will use a user login and a password set in the external directory. The Center will attempt to authenticate on the directory server with these credentials. In return, you will get either a successful authentication, or a failed one with an error message.

Login in Cisco Cyber Vision:


When logging into Cisco Cyber Vision, the login format used will determine the base (i.e. internal or external) to be queried:

- If you use an email, the Cisco Cyber Vision database is queried.
- If you use the Active Directory format <domain_name>\<user_name> (e.g. cisco\john_doe), then the external directory is used to authenticate users.

Configure LDAP

This section explains how to configure LDAP in Cisco Cyber Vision using a normal connection or a secure connection.

Step 1 In Cisco Cyber Vision, navigate to Admin > External Authentication > LDAP.

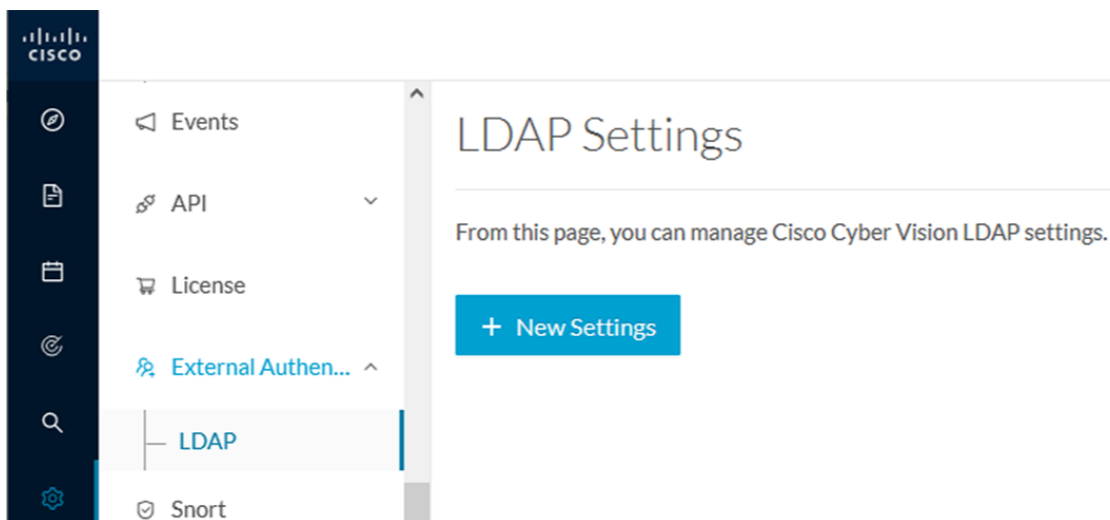

Step 2 Click New Settings.
The New LDAP Settings window pops up.

NEW LDAP SETTINGS

Settings Role Mapping

LDAP over TLS/SSL Use self signed certificate

* Primary Server Address * Primary Server Port

Secondary Server Address Secondary Server Port

* Base DN ⓘ

* Server Response Time ⓘ

OK Cancel

What to do next

Configure LDAP using a [LDAP normal connection](#) or a [LDAP secure connection](#).

LDAP normal connection

After clicking the New Settings button, the following New LDAP Settings window pops up.

Before you begin

Step 1 Fill in the LDAP settings.

NEW LDAP SETTINGS X

Settings

Role Mapping

LDAP over TLS/SSL Use self signed certificate

* Primary Server Address * Primary Server Port

dc01.2019lab.local

389

Secondary Server Address Secondary Server Port

dc01.2019lab.local

389

* Base DN ⓘ

DC=2019lab,DC=local

* Server Response Time ⓘ

10

OK

Cancel

Step 2 Click the Role Mapping tab.

Step 3 Fill in the following fields:

a) Map one or more Cisco Cyber Vision default roles with an Active Directory group.

Note At least one default role must be mapped.

Note Because the Admin user role is exclusively reserved for Cisco Cyber Vision internal usage, it cannot be mapped to any external users and thus is not proposed in LDAP settings.


b) Map Cisco Cyber Vision custom roles with Active Directory groups.

You must type the exact group names as configured into the remote directory so they can be retrieved and mapped to user roles.

The screenshot shows a dialog box titled "NEW LDAP SETTINGS" with a close button (X) in the top right corner. The dialog has two tabs: "Settings" and "Role Mapping", with "Role Mapping" selected. Under "Default roles", there are three rows, each with a dropdown menu and a text input field. The first row has "Product" in the dropdown and "Domain Users" in the input field. The second row has "Operator" in the dropdown and an empty input field. The third row has "Auditor" in the dropdown and an empty input field. Below this is a "Custom roles" section with a plus sign (+) button to its right. It contains one row with "TestAD2019" in the dropdown and "TestAD2019" in the input field, followed by a red trash icon. At the bottom of the dialog are "OK" and "Cancel" buttons.

Step 4 Click OK.

Step 5 Click the Test connection button.



The Test Connection window pops up.

Step 6 Enter a user credentials to test the connection between Cisco Cyber Vision and Active Directory.


Note The Username format is domain\user.

A message Successful LDPA bind should appear.

Step 7 Click OK.

Step 8 Test the connection by logging out of Cisco Cyber Vision and logging in with the mapped user credentials.

Menus are displayed according to the rights granted to the user.

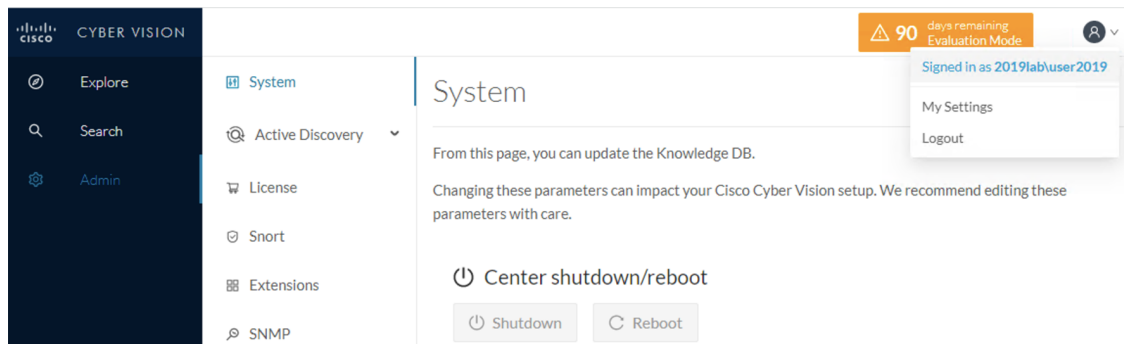

What to do next

LDAP secure connection

After clicking the New Settings button, the following New LDAP Settings window pops up.

Before you begin

Step 1 Fill in the following fields:

NEW LDAP SETTINGS X

Settings

Role Mapping

LDAP over TLS/SSL

Use self signed certificate

*** Primary Server Address**

*** Primary Server Port**


Secondary Server Address

Secondary Server Port

*** Base DN** ⓘ

*** Server Response Time** ⓘ

*** CA Trust Chain**




Choose a file or drag and drop to upload

Accepted files: .pem

- a) Tick LDAP over TLS/SLL.
- b) Fill in the LDAP settings.
- c) Upload a .pem root certificate or a chain certificate, or tick Use a self-signed certificate.

If you upload a certificate, a message indicating that the certificate has been uploaded successfully appears.



The certificate appears at the bottom of the New LDAP Settings window.

NEW LDAP SETTINGS X

Settings
Role Mapping

LDAP over TLS/SSL Use self signed certificate

* Primary Server Address * Primary Server Port

Secondary Server Address Secondary Server Port

* Base DN ⓘ

* Server Response Time ⓘ

* CA Trust Chain

Choose a file or drag and drop to upload

Accepted files: .pem

📎 2019lab-DC02-CA-1.pem

OK
Cancel

Step 2 Click OK.

Step 3 Click the Role Mapping tab.

Step 4 Fill in the following fields:

- a) Map one or more Cisco Cyber Vision default roles with an Active Directory group.

Note At least one default role must be mapped.

Note Because the Admin user role is exclusively reserved for Cisco Cyber Vision internal usage, it cannot be mapped to any external users and thus is not proposed in LDAP settings.

- b) Map Cisco Cyber Vision custom roles with Active Directory groups.

You must type the exact group names as configured into the remote directory so they can be retrieved and mapped to user roles.

NEW LDAP SETTINGS X

Settings ! Role Mapping

Default roles ⓘ

Product	▼	Domain Users
Operator	▼	
Auditor	▼	


Custom roles ⓘ +

TestAD2019	▼	TestAD2019	✖
------------	---	------------	------------------------------------

OK Cancel

Step 5 Click OK.

Step 6 Click the Test connection button.



The Test Connection window pops up.

TEST CONNECTION X

* Username
2019lab\user2019

* Password
.....

Successful LDAP bind

OK Cancel

Step 7 Enter a user credentials to test the connection between Cisco Cyber Vision and Active Directory.

Note The Username format is <domain_name>\<user_name> (e.g. cisco\john_doe).

A message Successful LDPA bind should appear.

Step 8 Click OK.

Step 9 Test the connection by logging out of Cisco Cyber Vision and logging in with the mapped user credentials.

Menus are displayed according to the rights granted to the user.

90 days remaining Evaluation Mode

Signed in as 2019lab\user2019

My Settings

Logout

System

From this page, you can update the Knowledge DB.

Changing these parameters can impact your Cisco Cyber Vision setup. We recommend editing these parameters with care.

Center shutdown/reboot

Shutdown Reboot



CHAPTER 11

Snort

- [Snort, on page 65](#)
- [Enable IDS on a sensor, on page 67](#)
- [Import Snort custom rules, on page 68](#)
- [Enable/disable a rule, on page 69](#)

Snort

Snort is a Network Intrusion Detection System (NIDS) software which detects malicious network behavior based on a rule matching engine and a set of rules characterizing malicious network activity. Cisco Cyber Vision can run the Snort engine on both the Center and some sensors. The Center stores the configuration rule files, pushes rules on compatible sensors, and intercepts Snort alerts to display them as events in the Cisco Cyber Vision's GUI.

Snort is not activated by default on sensors, so you must first [Enable IDS on a sensor](#).

It is available on the following sensor devices:

- The Cisco IC3000 Industrial Compute Gateway
- The Cisco Catalyst 9300 Series Switches
- The Cisco IR8340 Integrated Services Router Rugged

It is also available on the Center DPI, and is enabled by default.

Snort Community Rules is set by default in Cisco Cyber Vision. You can enable Snort Subscriber Rules using the corresponding toggle button (1). Note that this option requires the Advantage licensing and a specific IDS sensor license per enabled sensor.

Community ruleset

- The community ruleset is a Talos certified ruleset that is distributed freely. It includes rules that have been submitted by the open-source community or by Snort integrators. This ruleset is a subset of the full ruleset available to the subscriber users. It does not contain the latest Snort rules and does not ensure coverage of the latest threats.


Subscriber ruleset

- The subscriber ruleset includes all the rules released by the Talos Security Intelligence and Research Team. The ruleset ensures fast access to the latest rules and early coverage of exploits. Compared to the

Community ruleset, it contains more rules and remains in sync with the latest Talos research work on vulnerability detection.

In the Snort administration page, you can find Snort rules grouped into categories, and configure which set of rules to enable or not using the toggle status button (2).

You can download each category rule file using the corresponding button (3).

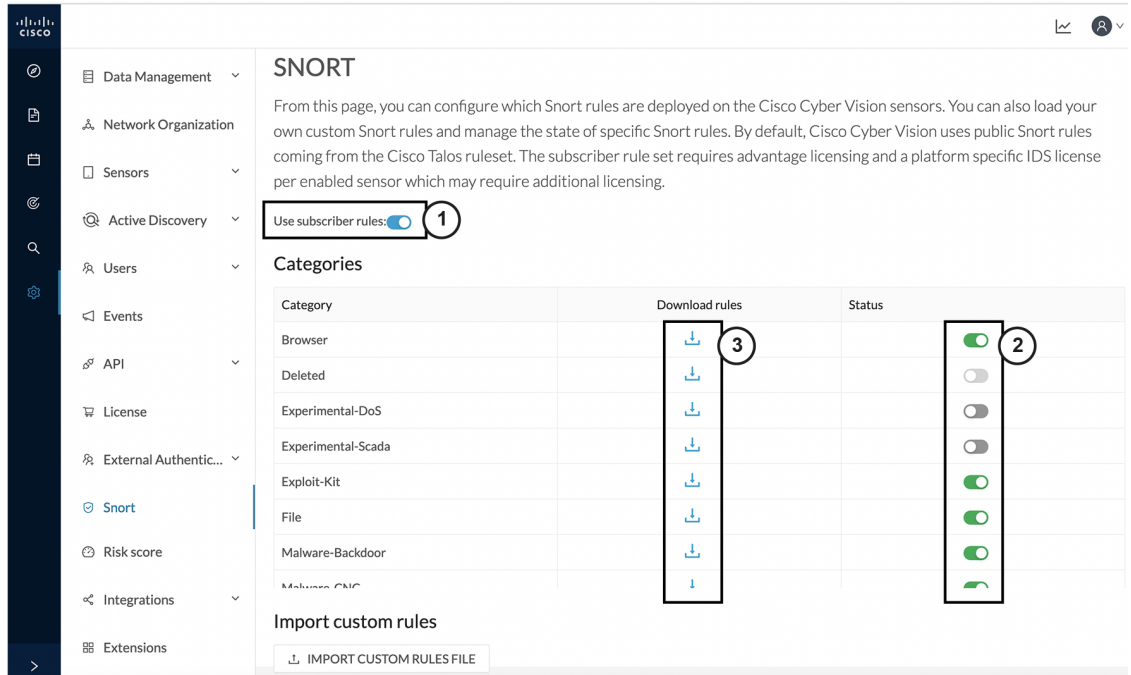

Note that some rules are **not** enabled inside these categories. So, using the toggle button on a category won't necessarily have an effect on their rules. The ones that are considered the most useful are enabled by default, others have been disabled to avoid performance issues. Consequently, if you want to enable these rules you need to use the [Enable/disable a rule](#).

It is also possible to enable/disable a specific rule from a custom rule file.

Snort rules categories:

- **Browser:**
Rules for vulnerabilities present in several browsers including, but not restricted to, Chrome, Firefox, Internet Explorer and Webkit. This category also covers vulnerabilities related to browser plugins such as Active-x.
- **Deleted:**
When a rule has been deprecated or replaced it is moved to this category.
- **Experimental-DoS:**
Rules developed by the Cisco CyberVision team for various kinds of DoS activities (TCP SYN flooding, DNS/HTTP flooding, LOIC, etc.).
- **Experimental-Scada:**
Rules developed by the Cisco CyberVision team for attacks against industrial control system assets.

- **Exploit-Kit:**
Rules that are specifically tailored to detect exploit kit activity.
- **File:**
Rules for vulnerabilities found in numerous types of files including, but not restricted to, executable files, Microsoft Office files, flash files, image files, Java files, multimedia files and pdf files.
- **Malware-Backdoor:**
Rules for the detection of traffic destined to known listening backdoor command channels.
- **Malware-CNC:**
Known malicious command and control activity for identified botnet traffic. This includes call home, downloading of dropped files, and ex-filtration of data.
- **Malware-Other:**
Rules that deal with tools that can be considered malicious in nature as well as other malware-related rules.
- **Misc:**
Rules that do not fit in any other categories such as indicator rules (compromise, scan, obfuscation, etc.), protocol-related rules, policy violation rules (spam, social media, etc.), and rules for the detection of potentially unwanted applications (p2p, toolbars, etc.).
- **OS-Other:**
Rules that are looking for vulnerabilities in various operating systems such as Linux based OSes, Mobile based OSes, Solaris based OSes and others.
- **OS-Windows**
Rules that are looking for vulnerabilities in Windows based OSes.
- **Server-Other:**
Rules dealing with vulnerabilities found in numerous types of servers including, but not restricted to, web servers (Apache, IIS), SQL servers (Microsoft SQL server, MySQL server, Oracle DB server), mail servers (Exchange, Courier) and Samba servers.
- **Server-Webapp:**
Rules pertaining to vulnerabilities in or attacks against web based applications on servers.

In case of mistake, or to revert to the default configuration, you can use the **Reset to default** button. Note that all categories status and specific rules status will be reset and any added custom rules file will be deleted.

In addition, this page allows you to import custom rules, to enable or disable rules, and reset Snort's parameters to default.

Enable IDS on a sensor

To enable the Snort engine on a sensor:

Before you begin

To use Snort you need to enable IDS on sensors.

Snort is only compatible with sensors embedded in:

- The Cisco IC3000 Industrial Compute Gateway
- The Cisco Catalyst 9300 Series Switches
- The Cisco IR8340 Integrated Services Router Rugged

Step 1 In Cisco Cyber Vision, navigate to Admin > Sensor Explorer.

Step 2 Click a compatible sensor in the list.

The sensor's right side panel opens.

Step 3 Click **Enable IDS**.

<input type="checkbox"/>	FOLDER1				Lyon
<input type="checkbox"/>	FOLDER2				Paris
<input type="checkbox"/>	IC3000	192.168.49.23	4.1.1+202205161124		Connected
<input type="checkbox"/>	IE3400	192.168.49.21	4.1.1+202205161205		Connected

4 Records

Buttons: Move to, Download package, Capture mode, **Enable IDS**, Redeploy, Reboot, Shutdown, Uninstall, Active Discovery

Import Snort custom rules

Custom rules are useful if you want to define and use your own rules in addition to the rules provided in the Cyber Vision rulesets. To do this, a file must be created containing syntactically well-formed Snort rules and imported into Cisco Cyber Vision. Refer to Snort documentation for more information about creating rules.

To import custom rules in the Center:

Step 1 Prepare your custom rules file.

Step 2 Click the **Import custom rules file** button.

Import custom rules


IMPORT CUSTOM RULES FILE

Specific rule

Rule sid: [dropdown] [DISABLE] [ENABLE]

[RESET TO DEFAULT] [SYNCHRONIZE RULES ON SENSORS]

Once a custom rules file is imported, it is stored in the Center, and a **Download** button appears to check its content.

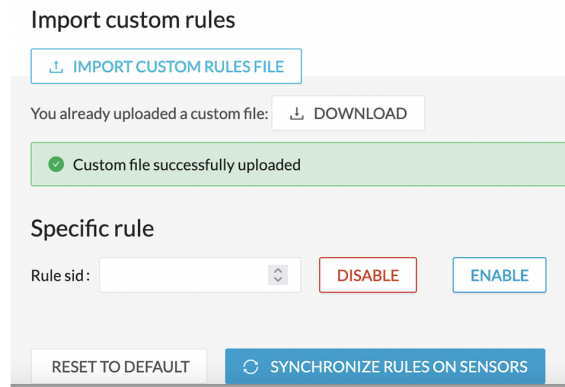

Import custom rules

↓ IMPORT CUSTOM RULES FILE

You already uploaded a custom file: ↓ DOWNLOAD

✔ Custom file successfully uploaded

Specific rule

Rule sid: ↓

DISABLE ENABLE

RESET TO DEFAULT SYNCHRONIZE RULES ON SENSORS

Step 3 Click **Synchronize rules on sensors**.

What to do next

You can [Enable/disable a rule](#).

Enable/disable a rule

You can manually enable and disable any specific rule, whether it is a default or a custom one. To do so you need the sid (i.e. signature id) that you will find in the rules file.

In the following procedure, we will disable Snort rule sid 50772 as example.

sid 50772: An unverified password change vulnerability (CVE-2018-7811) exists in the embedded web servers of Schneider Electric Quantum Modicon Ethernet modules. This vulnerability could allow an unauthenticated remote user to access the “change password” functionality of the web server. Snort rule with sid 50772 detects such attempts. It monitors and analyzes HTTP flows coming from the external network and raises an alert when the HTTP URI fields contain specific keywords (ex. “passwd=“,”cnfpasswd=“,”subhttpwd=“) that indicate a password change attempt targeting the web server.

Step 1 Click the **download icon** button.

Categories

Category	Download rules	Status
Malware-Datkuu00		
Malware-CNC		
Malware-Other		
Misc		
OS-Other		
OS-Windows		
Server-Other		
Server-Webapp		

Step 2 In the rule files, look for the rule you want to enable/disable.

```
Server-Webapp_rules.txt
#alert tcp $EXTERNAL_NET any -> $HOME_NET $HTTP_PORTS ( msg:"SERVER-WEBAPP Seowonintech
system_config.cgi local file include attempt"; flow:to_server,established; http_uri; content:"/cgi-
bin/system_config.cgi",fast_pattern,nocase; http_client_body; content:"file_name",nocase;
content:"Content-Disposition",nocase; pcre:"/name\s*=\s*[\x22\x27]?file_name(?:\^--).*?[\x2f\x5c]/
sim"; metadata:policy max-detect-ips drop; service:http; reference:cve,2016-10760;
reference:url,ethical-hacker.org/en/seowonintech-remote-root/; classtype:web-application-attack;
sid:50754; rev:1; )
alert tcp $EXTERNAL_NET any -> $HOME_NET $HTTP_PORTS ( msg:"SERVER-WEBAPP Schneider Electric quantum
modicon ethernet module unauthenticated password change attempt"; flow:to_server,established;
http_uri; content:"/unsecure/embedded/builtin",fast_pattern,nocase; content:"user=";
content:"passwd="; content:"cnfpasswd="; content:"subhttppwd="; metadata:policy balanced-ips
drop,policy max-detect-ips drop,policy security-ips drop; service:http; reference:cve,2018-7811;
classtype:attempted-admin; sid:50772; rev:1; )
#alert tcp $EXTERNAL_NET any -> $HOME_NET $HTTP_PORTS ( msg:"SERVER-WEBAPP Oracle-BI convert servlet
XML external entity injection attempt"; flow:to_server,established; http_uri; content:"/xmlpservlet/
convert",fast_pattern,nocase; content:"xml=",nocase; content:"ENTITY",nocase; pcre:"/(\x21&(25)?
21)ENTITY(?:\x3e&(25)?3e).)*?(SYSTEM|PUBLIC)/!"; metadata:policy max-detect-ips drop,policy
```

Step 3 Type the rule sid and click **Disable**.

Specific rule

Rule sid:


A message indicating the rule is disabled appears.

Specific rule

Rule sid:

Rule successfully disabled

If you download the rules file again you will find a "#" preceding the rule. This indicates the rule is disabled.



```

50772
#alert tcp $EXTERNAL_NET any -> $HOME_NET $HTTP_PORTS ( msg:"SERVER-WEBAPP Seowonintech
system_config.cgi local file include attempt"; flow:to_server,established; http_uri; content: "/cgi-
bin/system_config.cgi", fast_pattern, nocase; http_client_body; content: "file_name", nocase;
content: "Content-Disposition", nocase; pcre: "/name\s*=\s*[\x22\x27]?file_name(?:!~-.)*?[\x2f\x5c]/
sim"; metadata: policy max-detect-ips drop; service: http; reference: cve,2016-10760;
reference: url,ethical-hacker.org/en/seowonintech-remote-root/; classtype: web-application-attack;
sid:50754; rev:1; )
#alert tcp $EXTERNAL_NET any -> $HOME_NET $HTTP_PORTS ( msg:"SERVER-WEBAPP Schneider Electric quantum
modicon ethernet module unauthenticated password change attempt"; flow:to_server,established;
http_uri; content: "/unsecure/embedded/builtin", fast_pattern, nocase; content: "user=";
content: "passwd="; content: "cnfpasswd="; content: "subhtppwd="; metadata: policy balanced-ips
drop, policy max-detect-ips drop, policy security-ips drop; service: http; reference: cve,2018-7811;
classtype: attempted-admin; sid:50772; rev:1; )
#alert tcp $EXTERNAL_NET any -> $HOME_NET $HTTP_PORTS ( msg:"SERVER-WEBAPP Oracle-BI convert servlet
XML external entity injection attempt"; flow:to_server,established; http_uri; content: "/xmlserver/
convert", fast_pattern, nocase; content: "xml=", nocase; content: "ENTITY", nocase; pcre: "/(\x21|%(25)?
21)ENTITY(?:!~-.)*?(SYSTEM|PUBLIC)/i"; metadata: policy max-detect-ips drop, policy

```

Step 4 Click **Synchronize rules on sensors** to save and push changes on the sensors.



CHAPTER 12


Risk score

- [Risk score, on page 73](#)

Risk score

This page is meant to set up the time range used for risk score computation.

The computation is done every hour, but considers only the activities of the configured time period.

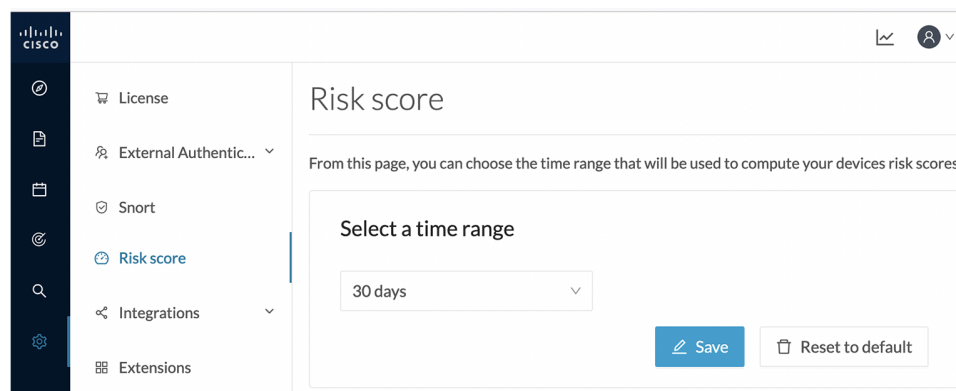

You can select a time range of 30 days (by default), 7 days, or set a custom one, with a minimum of one day.

For more information about risk scores, refer to the Concepts section of the User Guide..



CHAPTER 13

Integrations

- pxGrid, on page 75
- FMC, on page 76
- FTD, on page 77
- SecureX, on page 78

pxGrid

From this page, you can configure ISE pxGrid Cisco Cyber Vision integration.

Cisco Platform Exchange Grid (pxGrid) is an open, scalable data-sharing and threat control platform that allows seamless integration between multivendor identity, network, security and asset management systems.

The screenshot shows the Cisco ISE GUI configuration page for Platform Exchange Grid. The sidebar on the left lists various configuration areas, with 'Integrations' expanded to show 'pxGrid', 'CTR', and 'FMC'. The main content area is titled 'Platform Exchange Grid' and includes a descriptive paragraph. Below this, there are three main sections: 'Center Certificate Authority' with a 'Download certificate' button, 'ISE Server' with a 'No connection has been set up' message, and 'Register a new node' with input fields for 'Node Name' and 'Host Name'. A 'Client certificate' section shows 'No certificate imported' and an 'Import PxGrid certificate' button. A red error message box is visible at the bottom right, stating 'Error while fetching certificate configuration. (Unknown error)'.


For more information about how to perform this integration, refer to the manual "Integrating Cisco Cyber Vision with Cisco Identity Services Engine (ISE) via pxGrid".

FMC

FMC administration page permits to configure a link between Cisco Cyber Vision with your Firepower Management Center. This connection will permit to send regularly (every 10 seconds) the components discovered by Cisco Cyber Vision. Every 10 seconds a list of new discovered components will be sent with the following properties in Cisco Cyber Vision:


- Name
- Id
- Ip
- Mac
- And if they are available:
 - hw_version
 - model-ref
 - serial_number
 - fw_version
 - tags

The configuration of this connection consists of adding the IP address of FMC, then importing a certificate in Cisco Cyber Vision.

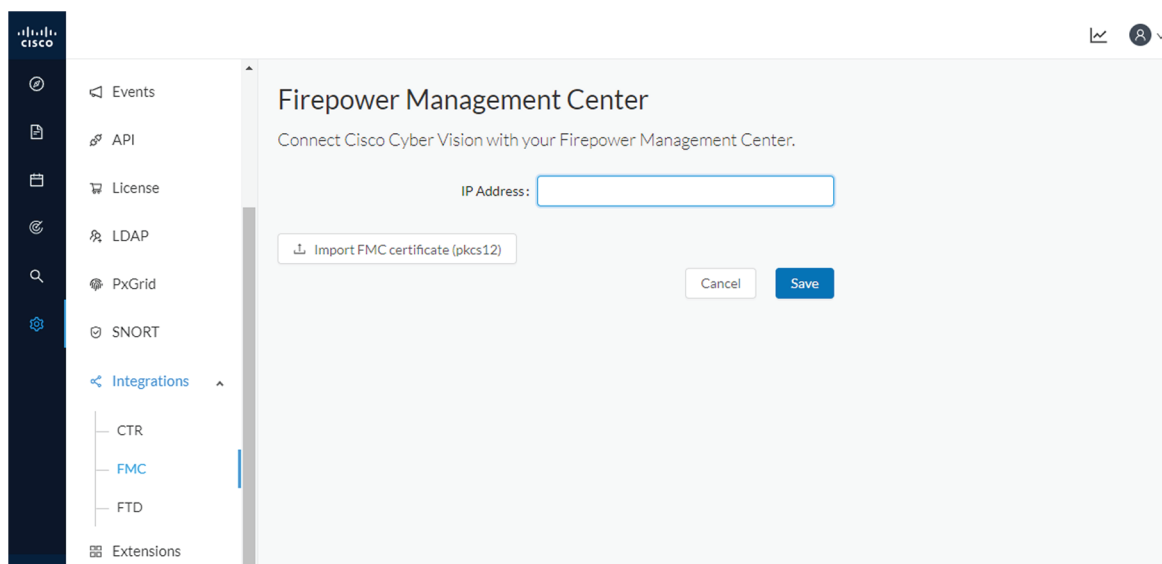

In FMC, to download the necessary certificate, please navigate to "System" then to "Integration" and open the "Host Input Client" tab. In the tab create a new Client with the button "Create Client". Add the Cisco Cyber Vision Center IP address as host name, then download the pkcs12 certificate.

Then, in FMC, menu "Policies", "Application Detectors" add a new Product Map with the button "Create Product Map Set". Please create the new product Map with the exact name and case as presented below:



Third-Party Product Maps


Product Map

CyberVision
Integration with [Cisco Cyber Vision](#)

Third-Party Vulnerability Maps

No vulnerability mapping sets currently defined.

The created hosts could be consulted in FMC, menu "Analysis", tab "Hosts – Network Map":

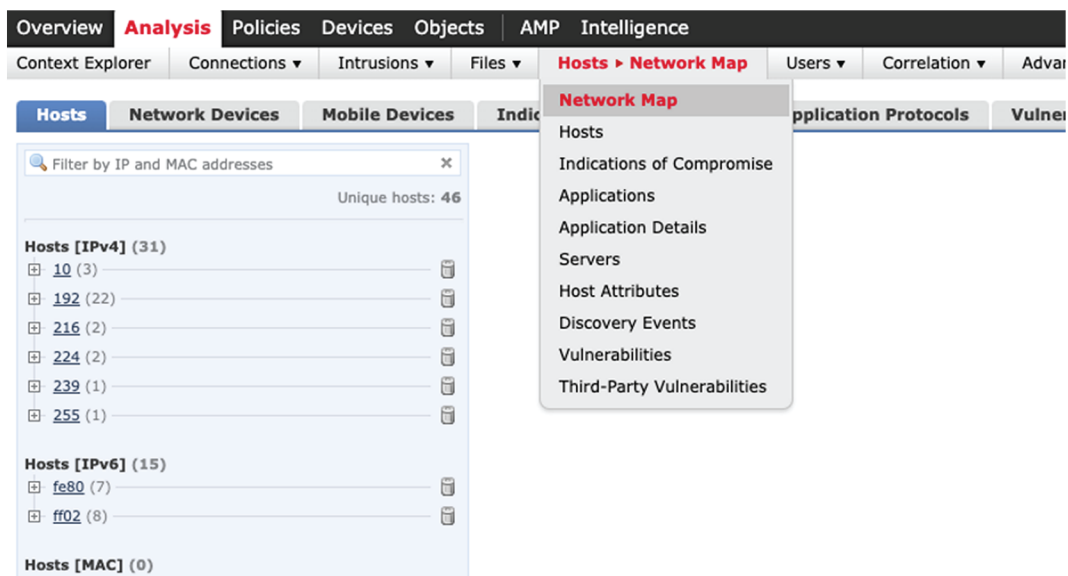

FTD

FTD administration page permits to connect Cisco Cyber Vision with your Firepower Threat Defense. It will allow to automatically kill anomalies detected by monitor mode and snort events. The corresponding session found in FTD will be killed.

Every 10 seconds Cisco Cyber Vision will browse the new monitor and SNORT events and send the corresponding action to the firewall. To enable that functionality, the user needs to add the following parameters in the FTD administration page:

- Ip address of the firewall

- Login: admin login, an ssh connection will be established between the center and the firewall
- Password: corresponding password
- Hostname: is the name of the device, by default "firepower"

Two options are available: kill session from monitor difference detection events and kill session from snort events.

The screenshot shows the 'Firepower Threat Defense' configuration page in the Cisco Cyber Vision GUI. The page has a dark sidebar on the left with navigation options: Events, API, License, LDAP, PxGrid, SNORT, Integrations (selected), CTR, FMC, FTD, and Extensions. The main content area is titled 'Firepower Threat Defense' and contains the following text: 'Connect Cisco Cyber Vision with your Firepower Threat Defense. It will allow us to automatically kill anomalies detected by monitor mode and snort events'. Below this text are four input fields: 'IP Address:', 'Login:', 'Password:', and 'Hostname:'. At the bottom of the form, there are two checkboxes: 'Kill session from monitor difference detection events:' and 'Kill session from snort events:'. A 'Cancel' button and a 'Save' button are located at the bottom right of the form.

SecureX

Cisco SecureX is an online platform that centralizes security events from different Cisco software equipments through an API. For example, events like Cisco Cyber Vision events or firewall events can be sent to Cisco SecureX and correlated to be presented through different dashboards.

SecureX integration enables three features in Cisco Cyber Vision:

- without SecureX SSO login, the button **Investigate in SecureX Threat Response** will appear in components' technical sheet.
- with SecureX SSO login, the button **Report to SecureX** will appear in some events of the event calendar page. This button is used to push the events to SecureX.
- with SecureX SSO login, a SecureX ribbon with several features can be activated in Cisco Cyber Vision.

This section describes how to configure SecureX in Cisco Cyber Vision and the different features authorized.

SecureX configuration

Before you begin


The Cisco SecureX configuration in Cisco Cyber Vision requests:

- An Admin access to Cisco Cyber Vision.

- A Cisco Cyber Vision Center with internet access.
- A SecureX account with an admin role.

Step 1 In Cisco Cyber Vision, navigate to **Admin > Integrations > SecureX**.

Step 2 Select a Region.

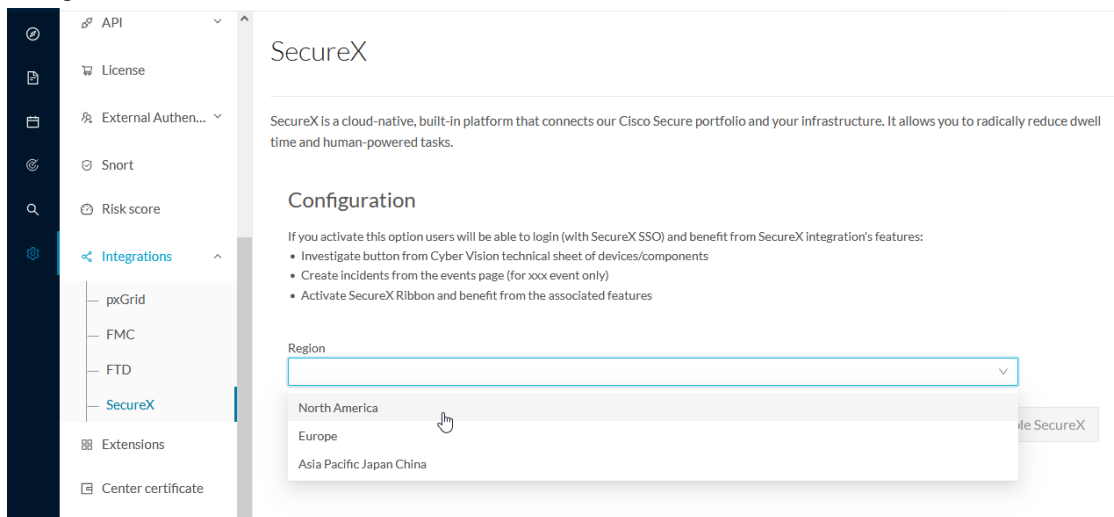


The button **Enable SecureX** appears.



Step 3 Click **Enable SecureX** to enable the link.


Once the link enabled, the button turns red to disable SecureX.



By completing the steps above, you are now able to use the button **Investigate in SecureX Threat Response** that will appear in the components' technical sheet. To install and use the SecureX ribbon and the Report to SecureX button, complete the steps herebelow.


Step 4 Navigate to the user menu on the top right corner of the GUI and click **My Settings**.

A new SecureX menu appears on the right.

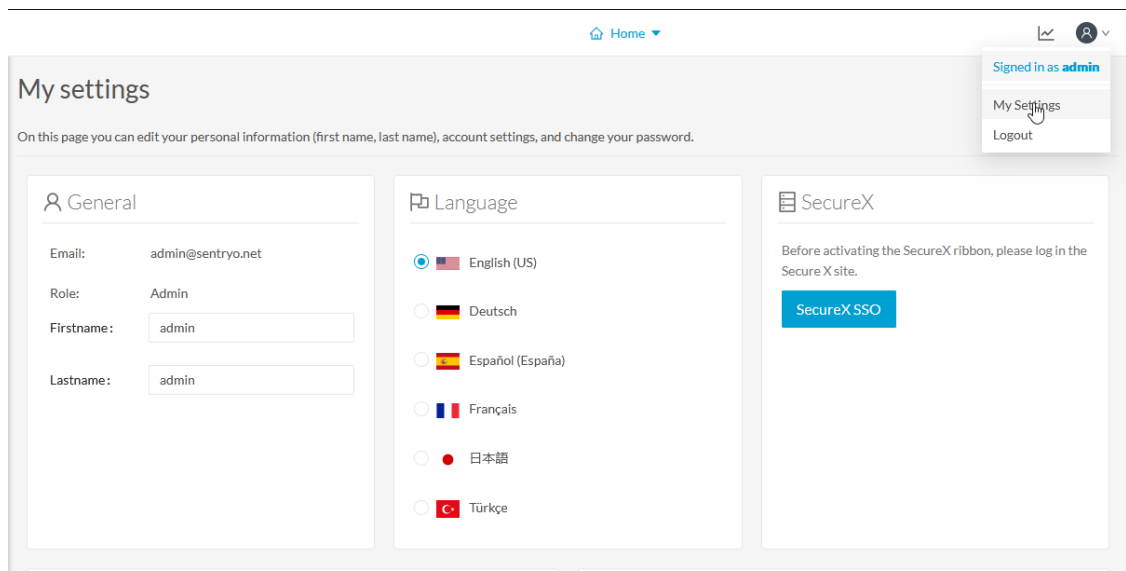


Step 5 Click the **SecureX SSO** button.

A popup appears with an authentication code.

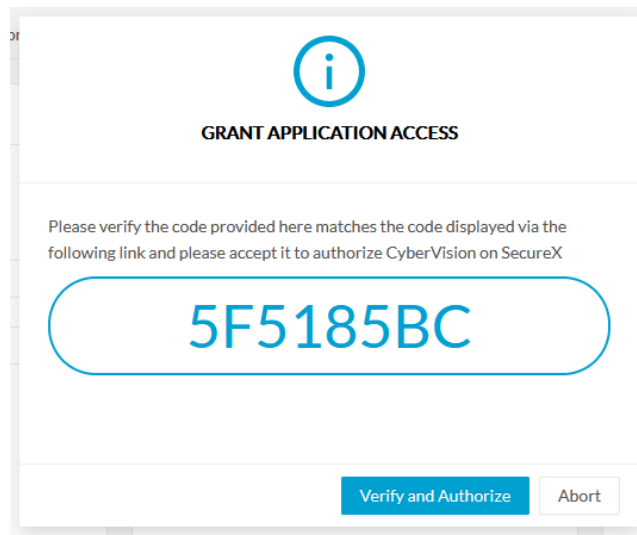


A page opens in the browser to grant Cisco Cyber Vision access to SecureX.

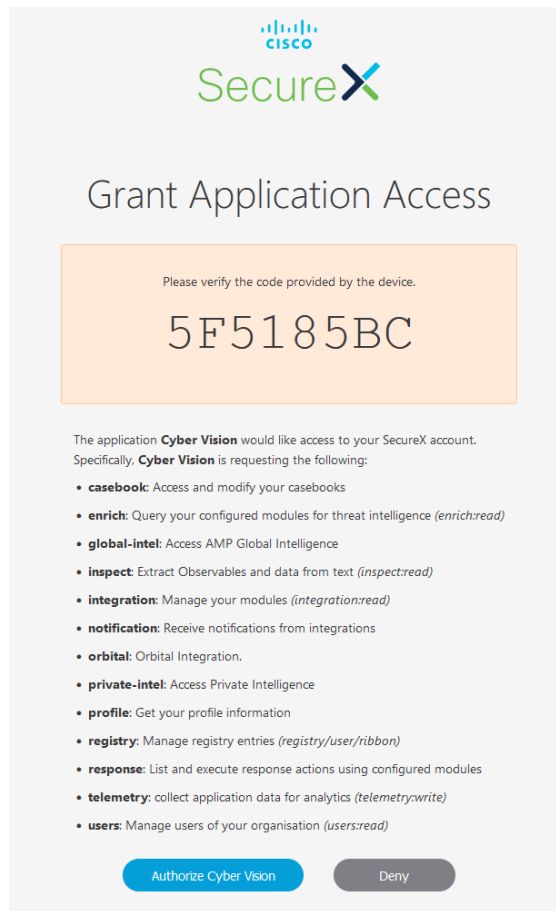


Step 6 Click **Authorize Cyber Vision**.

Step 7 A Client Access Granted popup appears.

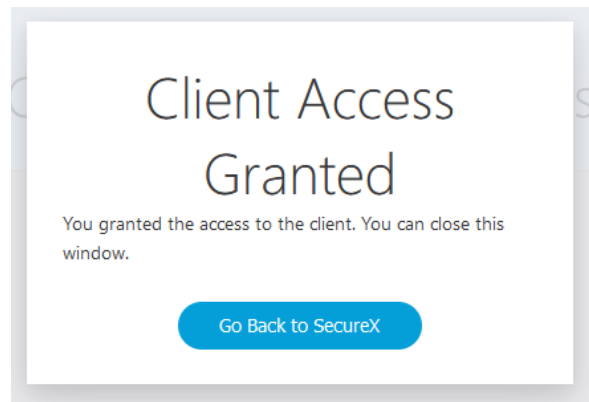


Step 8 In Cisco Cyber Vision > My Settings, the SecureX menu indicates that Cisco Cyber Vision is connected to SecureX. A toggle button to enable the SecureX ribbon and a button to logout of SecureX are displayed.

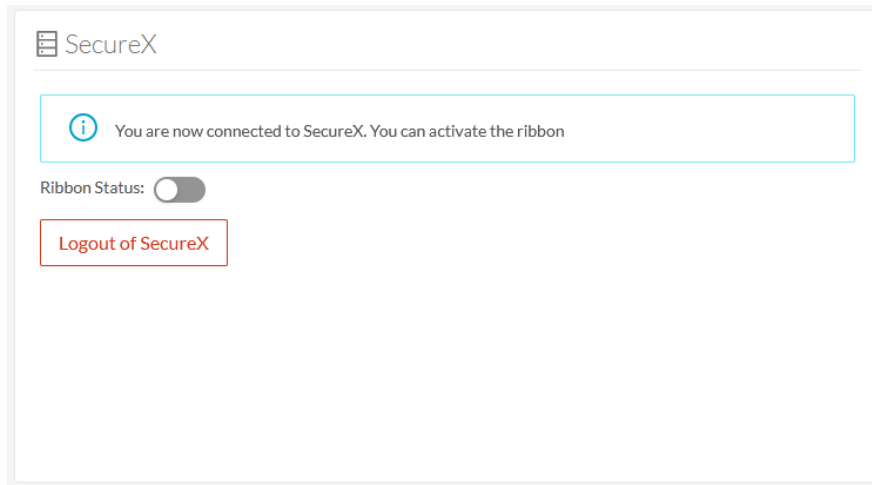


Step 9 Use the **Ribbon status** toggle button to enable the SecureX ribbon.

Step 10 Click **Save settings**.

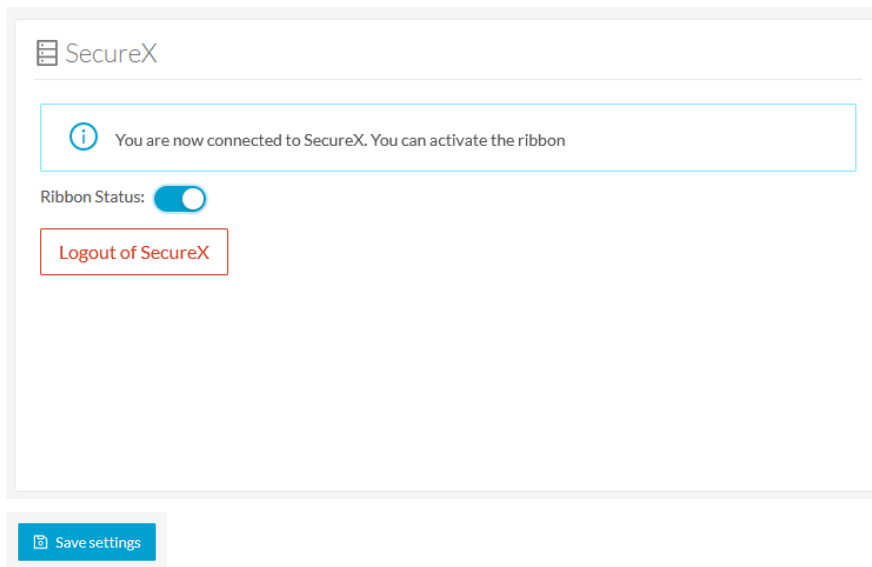

A message indicating that the SecureX ribbon is enabled appears.

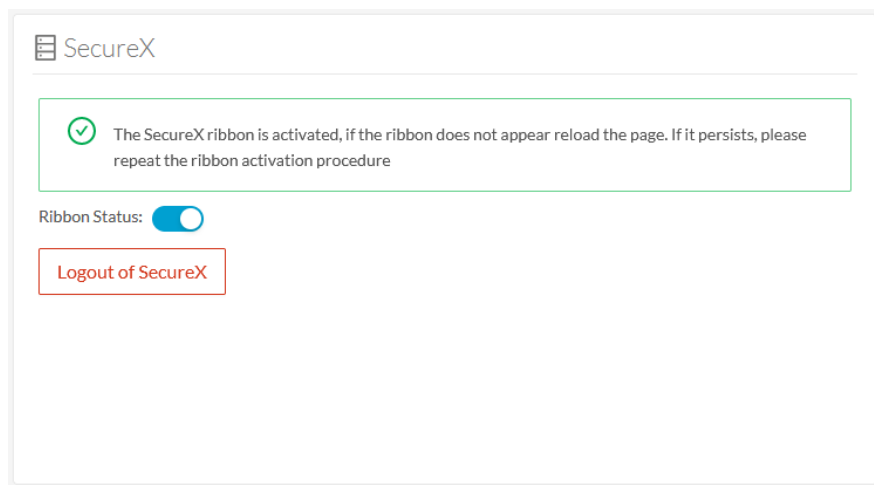

SecureX ribbon


Once configured and activated, the SecureX ribbon will appear at the bottom of the Cisco Cyber Vision GUI of the Explore menu.

The SecureX ribbon in the Device List view:

Device	Group	First activity	Last activity	IP	MAC	Risk so
Dell 192.168.105.70	-	Jan 26, 2022 10:49:56 AM	Jan 26, 2022 10:49:56 AM	192.168.105.70	00:11:43:6cf8:89 (+ 1 other)	
Yokogawa 192.168.1.124	-	Jan 26, 2022 10:49:56 AM	Jan 26, 2022 10:49:56 AM	192.168.1.124	00:00:64:8c6a:2c	
10.99.99.182	-	Jan 26, 2022 10:49:48 AM	Jan 26, 2022 10:49:48 AM	10.99.99.182	00:2ae3:cca2:2e	
10.99.99.8	-	Jan 26, 2022 10:49:48 AM	Jan 26, 2022 10:49:48 AM	10.99.99.8	00:2ae3:cca2:2e	
172.23.33.1	-	Jan 26, 2022 10:49:48 AM	Jan 26, 2022 10:49:48 AM	172.23.33.1	00:2ae3:cca2:2e	
Vmware 172.23.33.10	-	Jan 26, 2022 10:49:48 AM	Jan 26, 2022 10:49:48 AM	172.23.33.10	00:0c:29:9e:89:5f	

The [Cisco SecureX Getting Started Guide](#) explains how to use the SecureX ribbon.

For example, to find observables and investigate them in SecureX Threat Response, click the **Find Observables** icon like below:

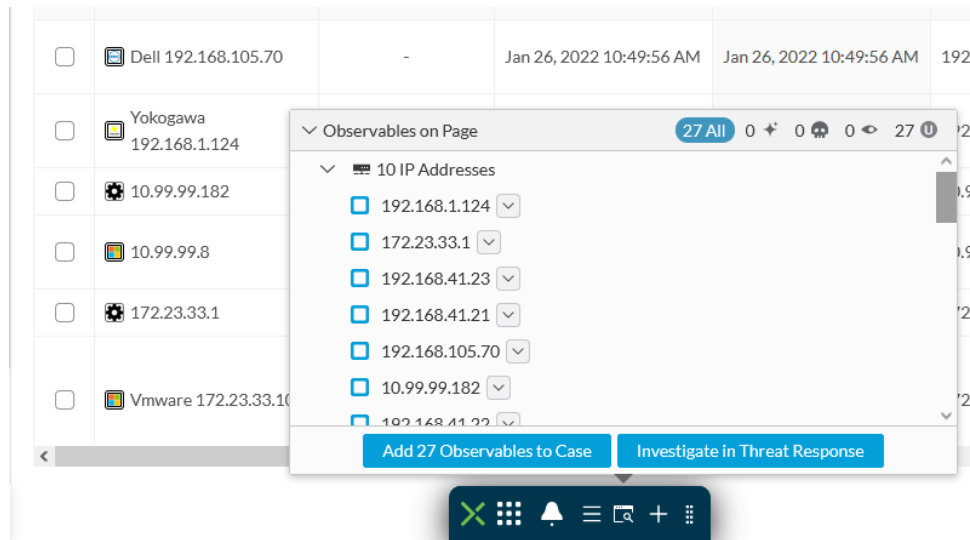


SecureX event integration

Once SecureX has been configured in Cisco Cyber Vision, a **Report to SecureX** button appears on some events of the event calendar page. Using this button will push the event to SecureX and create an incident.

The SecureX button appears on three categories of event:


- Anomaly Detection
- Control Systems Events
- Signature Based Detection

The Report to SecureX button on a Control Systems Events:

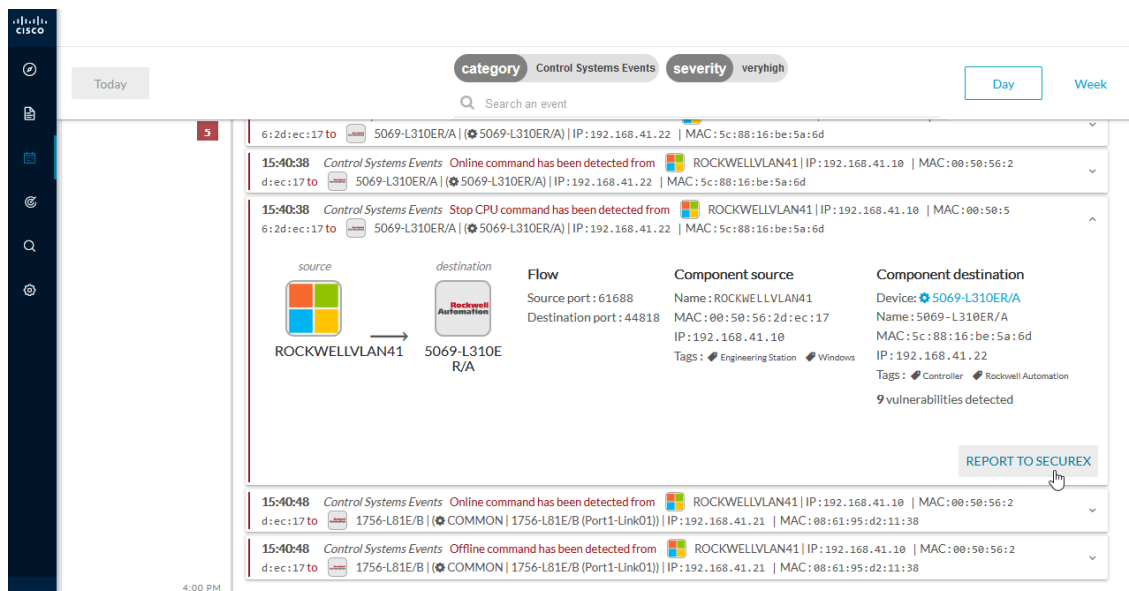

SecureX component button

Once SecureX has been configured in Cisco Cyber Vision, the button **Investigate in Cisco Threat Response** appears on the components' technical sheet. The component's IP and MAC addresses will be investigated in SecureX Threat Response if you use this button.

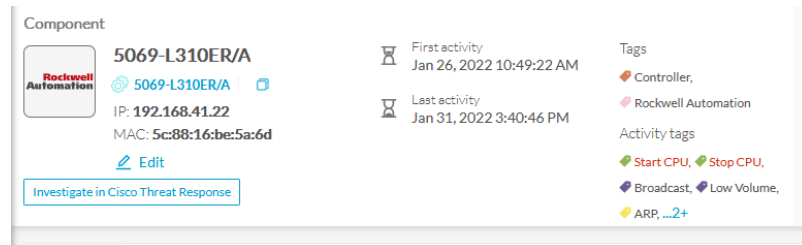

External resources for SecureX integration

Herebelow is the list of all URLs called by the Cisco Cyber Vision Center in case you need to authorize them, for example in a firewall.

Center:

- private.intel.eu.amp.cisco.com
- private.intel.apjc.amp.cisco.com
- private.intel.amp.cisco.com
- intel.amp.cisco.com
- visibility.eu.amp.cisco.com
- visibility.apjc.amp.cisco.com
- visibility.amp.cisco.com

Web client:

- securex.apjc.security.cisco.com
- securex.us.security.cisco.com



CHAPTER 14

Extensions

- [Extensions, on page 87](#)

Extensions

From this page, you can manage Cyber Vision Extensions. Extensions are optional add-ons to Cyber Vision Center which provide more features, such as the management of new device types, additional detection engines, or integrations with external services.

The screenshot shows the Cisco Cyber Vision GUI Administration interface. On the left is a dark sidebar with the Cisco logo and a list of navigation items: System, Data management, Sensors, Users, Events, API, License, LDAP, PxGrid, SNORT, Integrations, and Extensions (highlighted). The main content area is titled 'Extensions' and contains the following elements:

- A yellow notification box with a circular arrow icon and the text: 'Update UpdatingCyber Vision sensor management...'
- A section titled 'Installed extensions' containing a table with the following data:

Name	Version	Update this extension
Cyber Vision sensor management	1.0.0	[Update icon] [Refresh icon]

- A section titled 'Install a new extension' with a button labeled 'Import extension file'.



CHAPTER 15

Center certificate

- [Center certificate, on page 89](#)

Center certificate

The Center web server certificate page is to configure Cisco Cyber Vision user interface security with an enterprise certificate. You will have the option to upload a .p12 or to generate a CSR.

Center web server certificate

From this page, you can check your current web server certificate basic information and replace it with a new one. This certificate is also relevant for the API.

Fingerprint:	e4cd7a4a690c8a7f182dc3f521e2bc2926cf68f0ca63b42c8755bb591ab0c2fb
Issuer:	CN=Cisco Cyber Vision Center CA VMware-420f637e3da26755-98306b53c6
Subject Name:	Center162.local
Alternates Names:	Center162.local
Expires:	Tue Apr 09 2024 18:16:26 GMT+0200

Update with a new web server certificate:

Upload a .p12 Generate a CSR (RSA 2048)

Password of the certificate (optional)

Please import a PKCS#12 file

Choose a file or drag and drop to upload


For more information, refer to the corresponding Center Installation Guide.



CHAPTER 16

SNMP

SNMP Protocol in CyberVision is used for remote monitoring purposes.

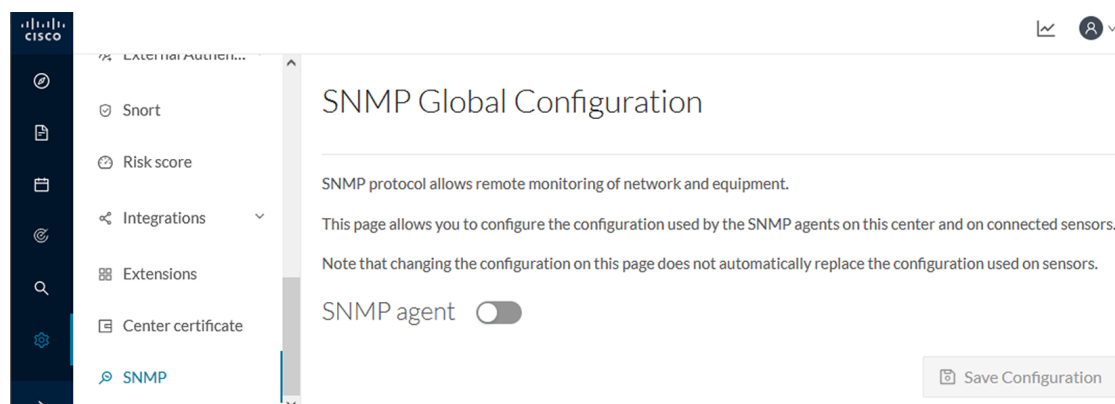

Supported versions are:

- SNMP V2C
- SNMP V3

Older versions are not supported.



Important It is highly recommended to use version 3 of the SNMP protocol. Version 2c is available due to a large number of infrastructures still using it. However, take into account that risks in terms of security are higher.

Snm information:

- CPU % per core
- Load 0 to 100 (combination of CPU and I/O loads)
- RAM kilobytes
- Swap kilobytes
- Traffic for all physical interfaces (nb bytes in and out/interface (since the snmp service startup))
- Data storage (% - 250G)

- Packets stats (packets/sec/int)
- [Configure SNMP, on page 92](#)
- [SNMP MIB, on page 94](#)

Configure SNMP

This section explains how to configure SNMP on a CyberVision Center.

Step 1 In Cisco Cyber Vision, navigate to Admin > SNMP.

Step 2 Toggle the SNMP agent button.

A configuration menu appears.

SNMP Global Configuration

SNMP protocol allows remote monitoring of network and equipment.

This page allows you to configure the configuration used by the SNMP agents on this center and on connected sensors.

Note that changing the configuration on this page does not automatically replace the configuration used on sensors.

SNMP agent

Configuration

Monitoring hosts (IPv4):

Version: 3 2c

Security type: ▾

Username:

Step 3 In the Monitoring hosts (IPv4) field, fill in the IP address of the Monitoring host.

Step 4 Select a version:

- Version 3
- Version 2c

Version: 3 2c

Security type: ▾

Username:

Note For security reasons, it is recommended to use SNMP version 3.

a) Version 3

Select a security type:

- NoAuth: Only a username is required. No authentication password required.

Security type: ▾


Username:

Add the username that will be used for the SNMP authentication. "ics" is used by default.

- Auth with NoPriv : A username and an encrypted password are required.

Security type: ▾ ▾

Username:

Authentication: ▾ 


Add the username that will be used for the SNMP authentication. "ics" is used by default.


Add the Hash algorithm needed and its password. It must be at least 8 characters long.

- Auth with Priv: Only the AES encryption is available. A username, an encrypted password, and an AES encryption are required.

Security type: ▾ ▾

Username:

Authentication: ▾ 

Privacy: ▾ 

Add the username that will be used for the SNMP authentication. "ics" is used by default.

Add the Hash algorithm needed and its password. It must be at least 8 characters long.

Add the AES password. It must be at least 8 characters long.

b) Version 2c

Add the community string for the Center to communicate with the monitoring host.

Version: 3 2c



For security reasons, we recommend using version 3 of the SNMP protocol

Community:

public

Step 5 Toggle the Trap button.

Trap

The following configuration menu appears:

Trap

Engine ID:

Type: CPU Rate: Threshold:

Type: RAM Rate: Threshold:

Step 6 Setup traps to be delivered.

Trap

Engine ID:

1234

Type: CPU

Rate:

Threshold:

Type: RAM

Rate:

Threshold:

- If SNMP v3 has been selected, the Engine ID field (i.e. the Center id) is displayed so you can customize it.
- Select and set the CPU and memory rate limit and threshold according to your needs.

Step 7 Click Save Configuration.

SNMP MIB

Table 1:

MIB	OID prefix	Description
MIB-2	.1.3.6.1.2.1.1	System

MIB	OID prefix	Description
IF-MIB	.1.3.6.1.2.1.2.2.1.1	All physical interfaces
IF-MIB	.1.3.6.1.2.1.31.1.1	All physical interfaces
HOST-RESOURCES-MIB	.1.3.6.1.2.1.25.1	System
HOST-RESOURCES-MIB	.1.3.6.1.2.1.25.2.3	Storage
HOST-RESOURCES-MIB	.1.3.6.1.2.1.25.3.3	CPU
HOST-RESOURCES-MIB	.1.3.6.1.2.1.25.3.6	Disk
UCD-SNMP-MIB	.1.3.6.1.4.1.2021.4	Memory
UCD-SNMP-MIB	.1.3.6.1.4.1.2021.9	Disk
UCD-SNMP-MIB	.1.3.6.1.4.1.2021.10	Load
UCD-SNMP-MIB	.1.3.6.1.4.1.2021.11	CPU
UCD-DISKIO-MIB	.1.3.6.1.4.1.2021.13.15.1	Disk IO

