



# Firepower Threat Defense Deployment with FMC



---

**Note** Firepower version 7.0 is the final supported version for the ASA 5508-X and 5516-X.

---

## Is This Chapter for You?

This chapter explains how to complete the initial configuration of your Firepower Threat Defense (FTD) and how to register the device to a Firepower Management Center (FMC). In a typical deployment on a large network, you install multiple managed devices on network segments. Each device controls, inspects, monitors, and analyzes traffic, and then reports to a managing FMC. The FMC provides a centralized management console with a web interface that you can use to perform administrative, management, analysis, and reporting tasks in service to securing your local network.

For networks that include only a single device or just a few, where you do not need to use a high-powered multiple-device manager like the FMC, you can use the integrated Firepower Device Manager (FDM). Use the FDM web-based device setup wizard to configure the basic features of the software that are most commonly used for small network deployments.



---

**Note** The Cisco ASA 5508-X and 5516-X can run either FTD software or ASA software. Switching between FTD and ASA requires you to reimage the device. See [Reimage the Cisco ASA or Firepower Threat Defense Device](#).

---



---

**Note** **Privacy Collection Statement**—The ASA 5508-X and 5516-X do not require or actively collect personally-identifiable information. However, you can use personally-identifiable information in the configuration, for example for usernames. In this case, an administrator might be able to see this information when working with the configuration or when using SNMP.

---

- [Before You Start, on page 2](#)
- [End-to-End Procedure, on page 2](#)
- [Review the Network Deployment, on page 3](#)
- [Cable the Device, on page 8](#)
- [Power on the Device, on page 12](#)
- [Complete the FTD Initial Configuration Using the CLI, on page 13](#)


- [Log Into the Firepower Management Center, on page 18](#)
- [Obtain Licenses for the FMC, on page 19](#)
- [Register the FTD with the FMC, on page 20](#)
- [Configure a Basic Security Policy, on page 23](#)
- [Access the Firepower Threat Defense CLI, on page 33](#)
- [Power Off the Device, on page 33](#)
- [What's Next?, on page 35](#)

## Before You Start

Deploy and perform initial configuration of the FMC. See the [FMC getting started guide](#).

## End-to-End Procedure

See the following tasks to deploy the FTD with FMC on your chassis.

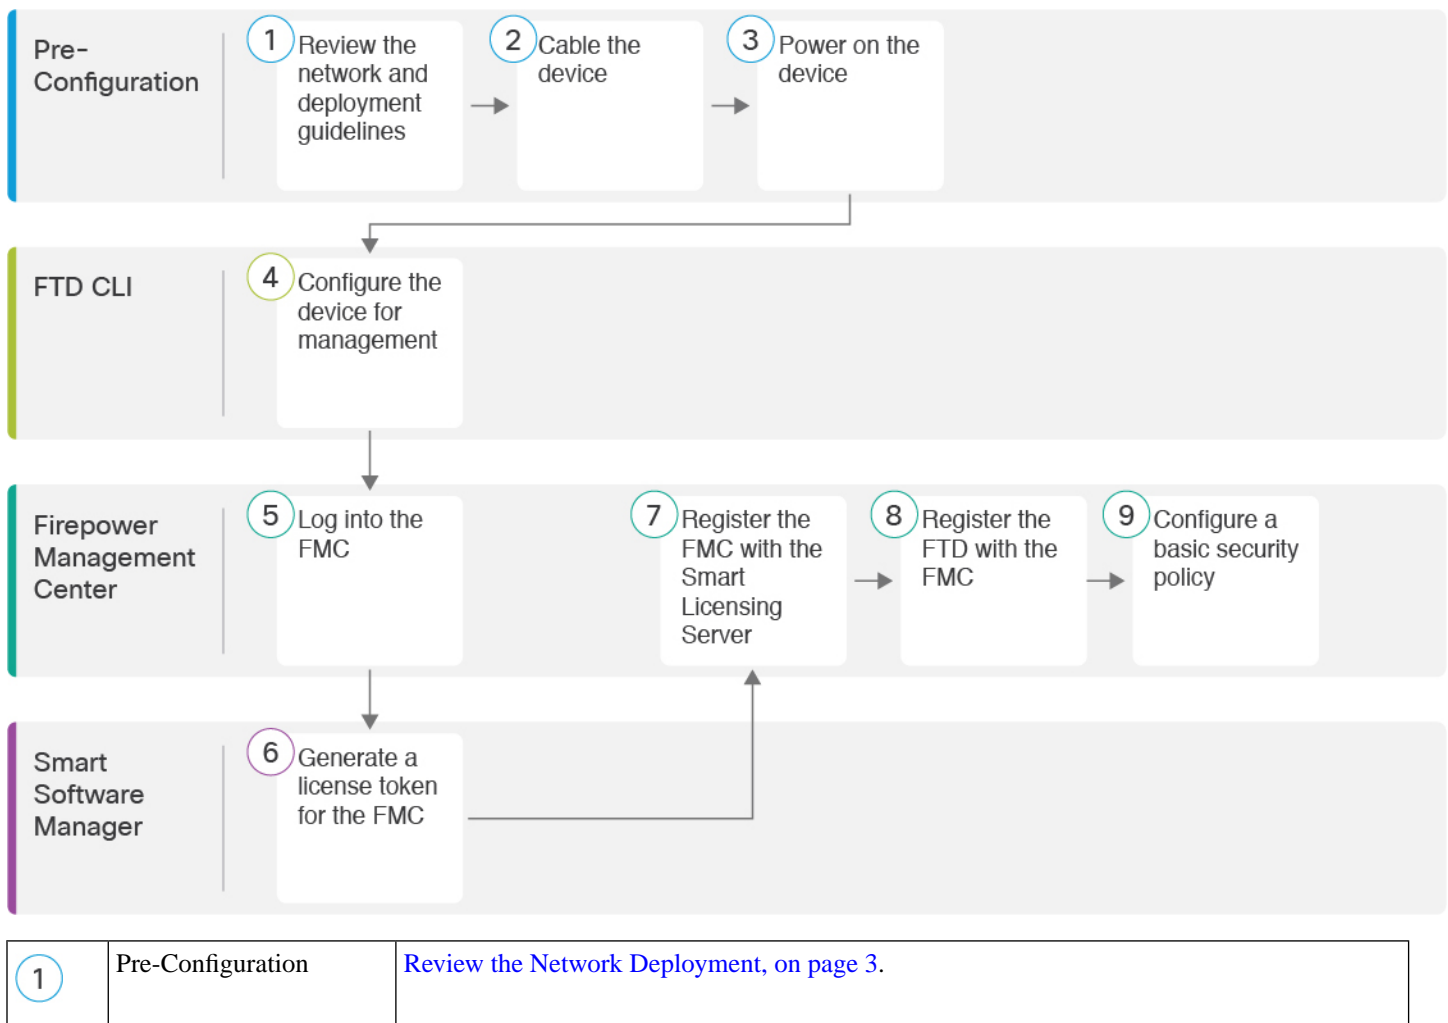

2	Pre-Configuration	<a href="#">Cable the Device, on page 8.</a>
3	Pre-Configuration	<a href="#">Power on the Device, on page 12.</a>
4	FTD CLI	<a href="#">Complete the FTD Initial Configuration Using the CLI, on page 13.</a>
5	Firepower Management Center	<a href="#">Log Into the Firepower Management Center, on page 18.</a>
6	Smart Software Manager	<a href="#">Obtain Licenses for the FMC, on page 19:</a> Generate a license token for the FMC.
7	Firepower Management Center	<a href="#">Obtain Licenses for the FMC, on page 19:</a> Register the FMC with the Smart Licensing server.
8	Firepower Management Center	<a href="#">Register the FTD with the FMC, on page 20.</a>
9	Firepower Management Center	<a href="#">Configure a Basic Security Policy, on page 23.</a>

## Review the Network Deployment

You can manage the FTD using FMC from the Management 1/1 interface, or in 6.7 and later, a data interface. By default, the Management 1/1 interface is enabled and configured as a DHCP client. You can configure the Management interface and an FMC access data interface during initial setup at the console port. You can configure other data interfaces after you connect the FTD to the FMC.



---

**Note** FMC access from a data interface has the following limitations:

- You can only enable FMC access on one physical, data interface. You cannot use a subinterface or EtherChannel.
- This interface cannot be management-only.
- Routed firewall mode only, using a routed interface.
- High Availability is not supported. You must use the Management interface in this case.
- PPPoE is not supported. If your ISP requires PPPoE, you will have to put a router with PPPoE support between the FTD and the WAN modem.
- The interface must be in the global VRF only.
- You cannot use separate management and event-only interfaces.
- SSH is not enabled by default for data interfaces, so you will have to enable SSH later using FMC. Because the Management interface gateway will be changed to be the data interfaces, you also cannot SSH to the Management interface from a remote network unless you add a static route for the Management interface using the **configure network static-routes** command.



---

**Note** In 6.5 and earlier, the Management interface is configured with an IP address (192.168.45.45).

---


See the following sample network deployments for ideas on how to place your FTD device in your network.

### Separate Management Network

Both the FMC and FTD require internet access from management for licensing and updates.

The following figure shows a possible network deployment for the ASA 5508-X or 5516-X where the FMC and management computer connect to the management network. The management network has a path to the internet for licensing and updates.

Figure 1: Separate Management Network

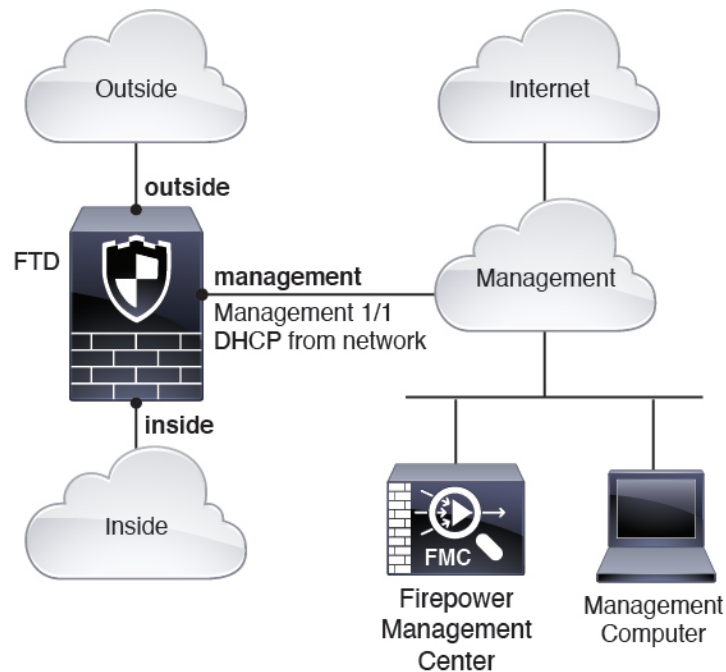

### 6.7 and Later Remote Management Deployment




**Note** For a remote branch setup, we recommend that you use the [standalone document](#) specific to that deployment.

The following figure shows the recommended network deployment for the ASA 5508-X or 5516-X using the outside interface for management. This scenario is ideal for managing branch offices from a central headquarters. You can perform initial setup of the FTD at headquarters and then send a pre-configured device to a branch location.


Either the FTD or FMC needs a public IP address or hostname. If the FTD receives a public IP address using DHCP, then you can optionally configure Dynamic DNS (DDNS) for the outside interface. DDNS ensures the FMC can reach the FTD at its Fully-Qualified Domain Name (FQDN) if the FTD's IP address changes. If the FTD receives a private IP address, then the FMC needs to have a public IP address or hostname.

Figure 2: Remote Management Deployment

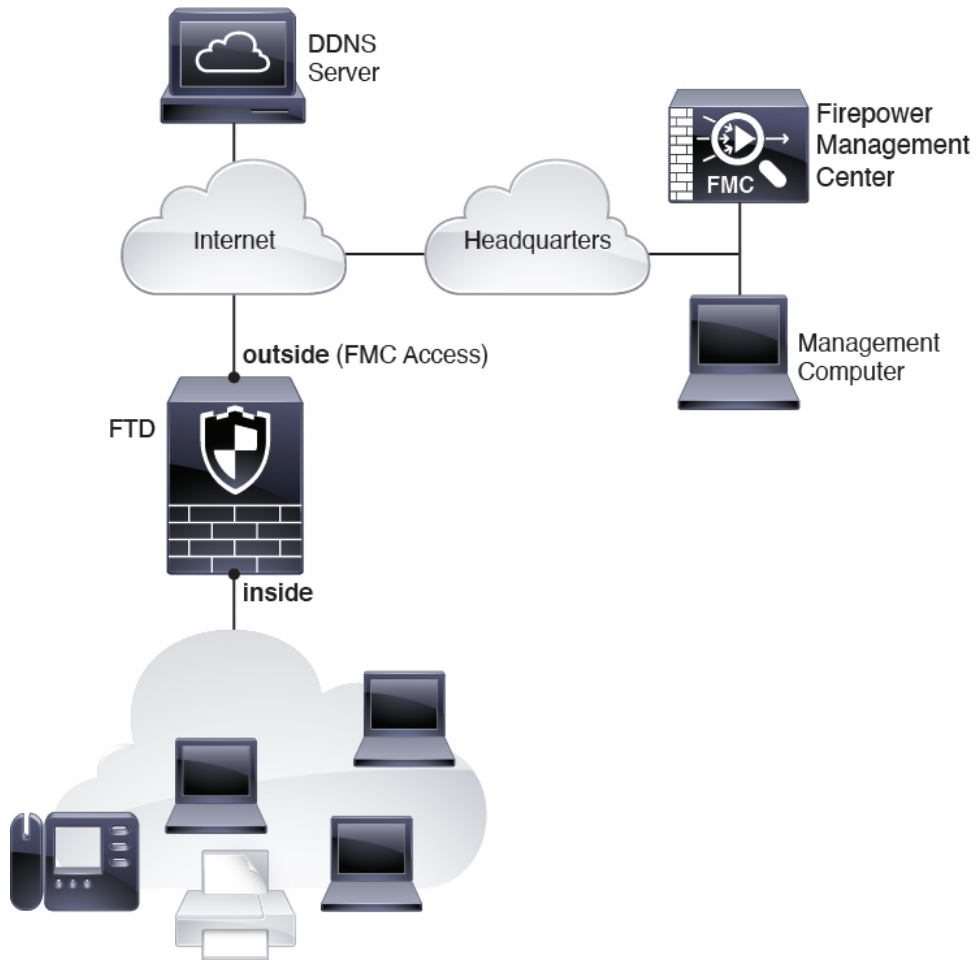

### 6.7 and Later Inside Management Deployment

The following figure shows the recommended network deployment for the ASA 5508-X or 5516-X using the inside interface for management.

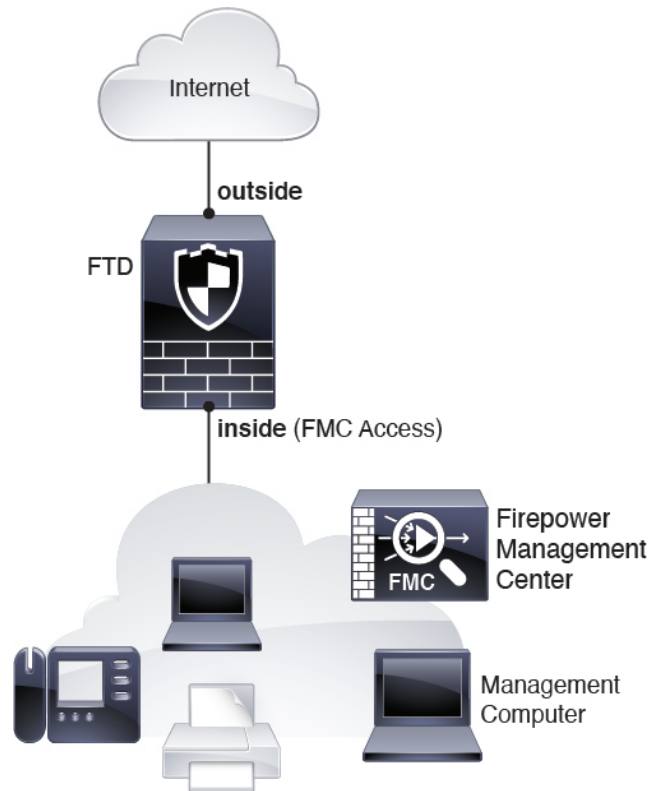**Figure 3: Inside Management Deployment**


### 6.6 and Earlier Edge Network Deployment

The FMC can only communicate with the FTD on the management interface in 6.6 and earlier. Moreover, both the FMC and FTD require internet access from management for licensing and updates.

The following figure shows a possible network deployment for the ASA 5508-X or 5516-X where the ASA acts as the internet gateway for the FMC and FTD management. You can also use this scenario in 6.7 and later for a High Availability deployment, for example.

In the following diagram, the ASA 5508-X or 5516-X acts as the internet gateway for the management interface and the FMC by connecting Management 1/1 to an inside interface through a Layer 2 switch, and by connecting the FMC and management computer to the switch. (This direct connection is allowed because the management interface is separate from the other interfaces on the FTD.)

Figure 4: Edge Network Deployment

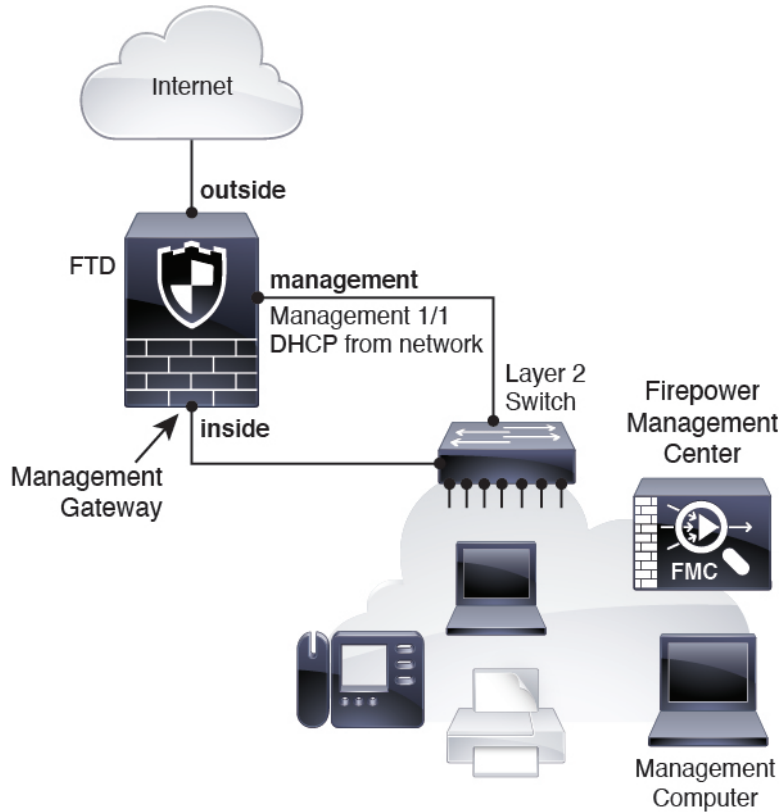

## Cable the Device

To cable one of the above scenarios on the ASA 5508-X or 5516-X, see the following steps.




**Note** Other topologies can be used, and your deployment will vary depending on your basic logical network connectivity, ports, addressing, and configuration requirements.

### Procedure

**Step 1** Cable for a separate management network.



Figure 5: Cabling a Separate Management Network

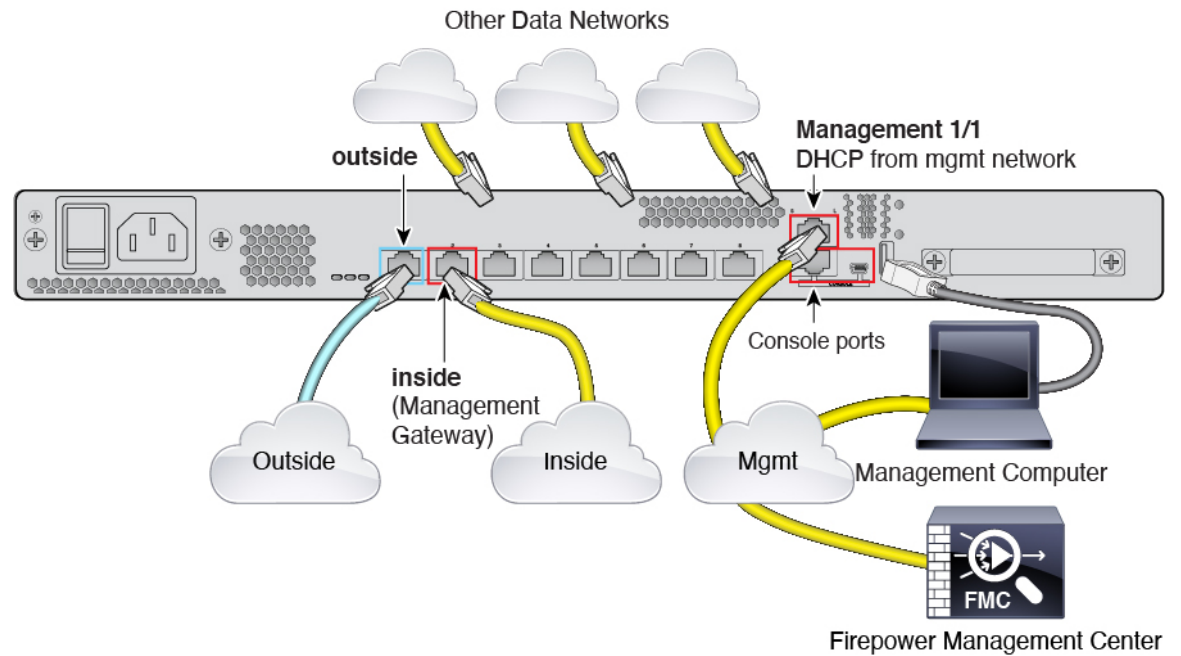


**Note** For version 6.5 and earlier, the Management 1/1 default IP address is 192.168.45.45.

- a) Cable the following to your management network:
  - Management 1/1 interface
  - Firepower Management Center
  - Management computer
- b) Connect the management computer to the console port. You need to use the console port to access the CLI for initial setup if you do not use SSH to the Management interface.
- c) Connect the inside interface (for example, GigabitEthernet 1/2) to your inside router.
- d) Connect the outside interface (for example, GigabitEthernet 1/1) to your outside router.
- e) Connect other networks to the remaining interfaces.

**Step 2** (6.7 and later) Cable for a remote management deployment:

Figure 6: Cabling a Remote Management Deployment

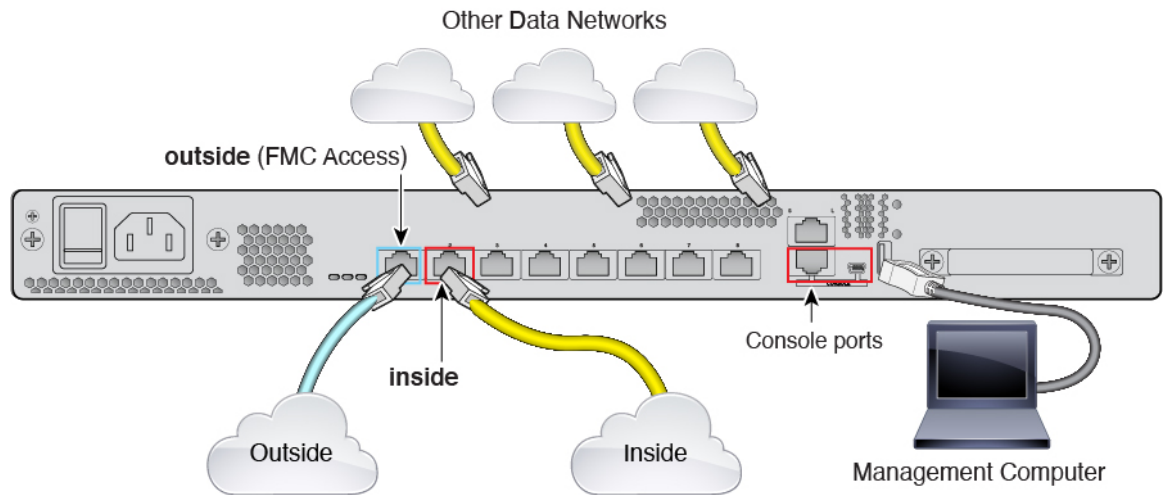

The FMC and your management computer reside at a remote headquarters, and can reach the FTD over the internet.


- a) Connect the management computer to the console port. You need to use the console port to access the CLI for initial setup.

You can perform initial CLI setup at headquarters, and then send the FTD to the remote branch office. At the branch office, the console connection is not required for everyday use; it may be required for troubleshooting purposes.

- b) Cable your inside network (for example, GigabitEthernet 1/2).
- c) Connect the outside interface (for example, GigabitEthernet 1/1) to your outside router.
- d) Connect other networks to the remaining interfaces.

**Step 3** (6.7 and later) Cable for an inside management deployment:

Figure 7: Cabling an Inside Management Deployment

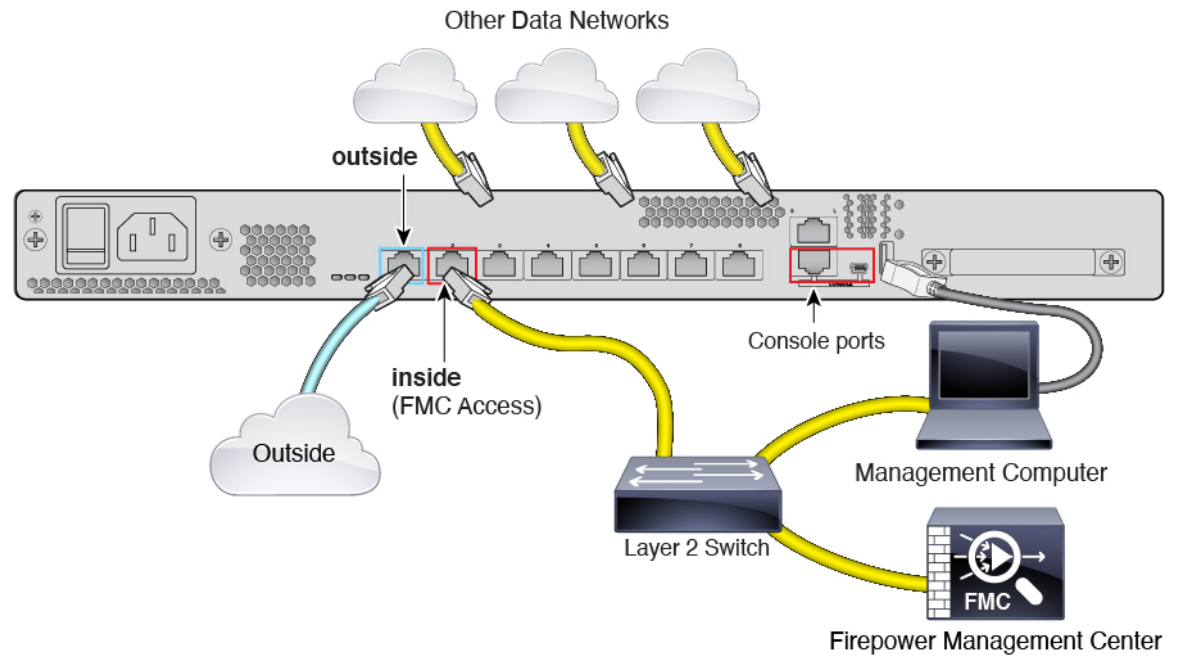


The FMC and your management computer reside on the inside network with your other inside end points.

- a) Connect the management computer to the console port. You need to use the console port to access the CLI for initial setup.
- b) Cable the following to the inside network (for example, GigabitEthernet 1/2):
  - Firepower Management Center
  - Management computer
- c) Connect the outside interface (for example, GigabitEthernet 1/1) to your outside router.
- d) Connect other networks to the remaining interfaces.

**Step 4** (6.6 and earlier) Cable for an edge deployment.

Figure 8: Cabling an Edge Deployment

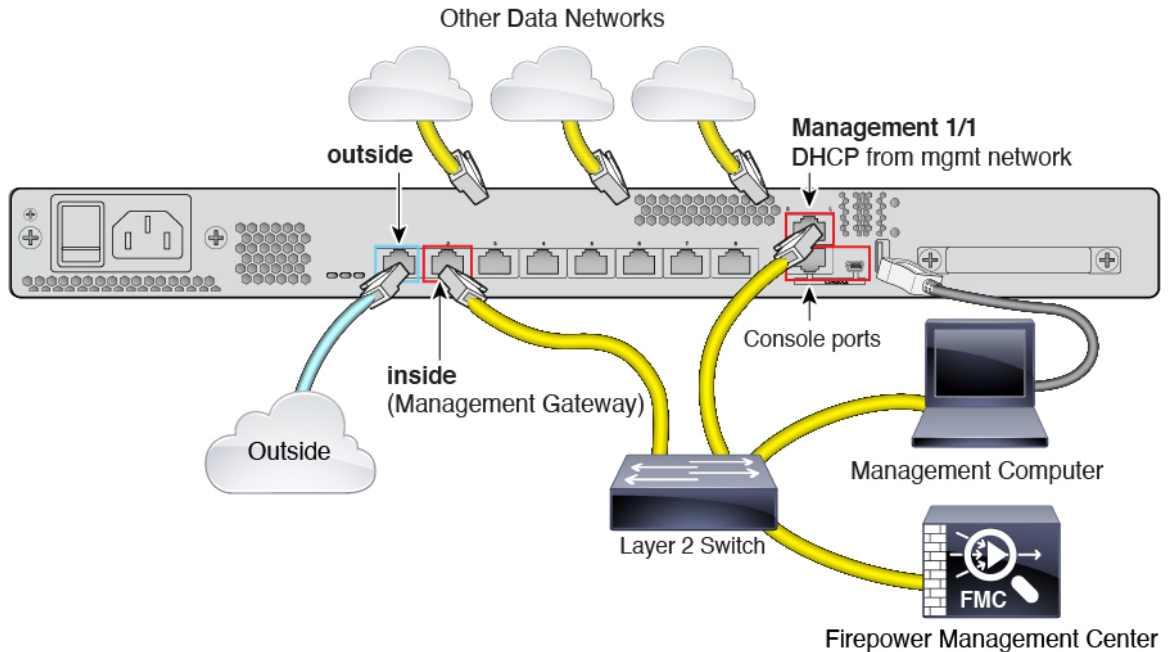

**Note** For version 6.5 and earlier, the Management 1/1 default IP address is 192.168.45.45.

- a) Cable the following to a Layer 2 Ethernet switch:
  - Inside interface (for example, GigabitEthernet 1/2)
  - Management 1/1 interface
  - Firepower Management Center
  - Management computer
- b) Connect the management computer to the console port. You need to use the console port to access the CLI for initial setup if you do not use SSH to the Management interface.
- c) Connect the outside interface (for example, GigabitEthernet 1/1) to your outside router.
- d) Connect other networks to the remaining interfaces.

## Power on the Device

System power is controlled by a rocker power switch located on the rear of the device.


### Before you begin

It's important that you provide reliable power for your device (for example, using an uninterruptible power supply (UPS)). Loss of power without first shutting down can cause serious file system damage. There are many processes running in the background all the time, and losing power does not allow the graceful shutdown of your system.


## Procedure

- 
- Step 1** Attach the power cord to the device, and connect it to an electrical outlet.
- Step 2** Turn the power on using the standard rocker-type power on/off switch located on the rear of the chassis, adjacent to the power cord.
- Step 3** Check the Power LED on the front or rear of the device; if it is solid green, the device is powered on.

*Figure 9: Rear Panel*

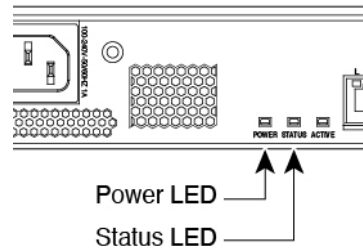

*Figure 10: Front Panel*

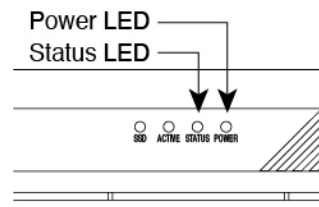

- Step 4** Check the Status LED on the front or rear of the device; after it is solid green, the system has passed power-on diagnostics.
- 

## Complete the FTD Initial Configuration Using the CLI

Connect to the FTD CLI to perform initial setup, including setting the Management IP address, gateway, and other basic networking settings using the setup wizard. The dedicated Management interface is a special interface with its own network settings. In 6.7 and later: If you do not want to use the Management interface for FMC access, you can use the CLI to configure a data interface instead. You will also configure FMC communication settings.

## Procedure

- 
- Step 1** Connect to the FTD CLI, either from the console port or using SSH to the Management interface, which obtains an IP address from a DHCP server by default. If you intend to change the network settings, we recommend using the console port so you do not get disconnected.
- Step 2** Log in with the username **admin** and the password **Admin123**.

**Note** If the password was already changed, and you do not know it, you must reimage the device to reset the password to the default. See the [reimage guide](#) for instructions.

### Step 3

The first time you log in to FTD, you are prompted to accept the End User License Agreement (EULA) and to change the admin password. You are then presented with the CLI setup script.

**Note** You cannot repeat the CLI setup wizard unless you clear the configuration; for example, by reimaging. However, all of these settings can be changed later at the CLI using **configure network** commands. See the [FTD command reference](#).

Defaults or previously entered values appear in brackets. To accept previously entered values, press **Enter**.

**Note** In 6.7 and later: The Management interface settings are used even when you enable FMC access on a data interface. For example, the management traffic that is routed over the backplane through the data interface will resolve FQDNs using the Management interface DNS servers, and not the data interface DNS servers.

See the following guidelines:

- **Configure IPv4 via DHCP or manually?**—In 6.7 and later: If you want to use a data interface for FMC access instead of the management interface, choose **manual**. Although you do not plan to use the Management interface, you must set an IP address, for example, a private address. You cannot configure a data interface for management if the management interface is set to DHCP, because the default route, which must be **data-interfaces** (see the next bullet), might be overwritten with one received from the DHCP server.
- **Enter the IPv4 default gateway for the management interface**—In 6.7 and later: If you want to use a data interface for FMC access instead of the management interface, set the gateway to be **data-interfaces**. This setting forwards management traffic over the backplane so it can be routed through the FMC access data interface. If you want to use the Management interface for FMC access, you should set a gateway IP address on the Management 1/1 network.
- **If your networking information has changed, you will need to reconnect**—If you are connected with SSH but you change the IP address at initial setup, you will be disconnected. Reconnect with the new IP address and password. Console connections are not affected.
- **Manage the device locally?**—Enter **no** to use FMC. A **yes** answer means you will use Firepower Device Manager instead.
- **Configure firewall mode?**—We recommend that you set the firewall mode at initial configuration. Changing the firewall mode after initial setup erases your running configuration. Note that data interface FMC access is only supported in routed firewall mode.

#### Example:

```
You must accept the EULA to continue.
Press <ENTER> to display the EULA:
End User License Agreement
[...]

Please enter 'YES' or press <ENTER> to AGREE to the EULA:

System initialization in progress. Please stand by.
You must change the password for 'admin' to continue.
Enter new password: *****
Confirm new password: *****
```

```

You must configure the network to continue.
You must configure at least one of IPv4 or IPv6.
Do you want to configure IPv4? (y/n) [y]:
Do you want to configure IPv6? (y/n) [n]:
Configure IPv4 via DHCP or manually? (dhcp/manual) [manual]:
Enter an IPv4 address for the management interface [192.168.45.45]: 10.10.10.15
Enter an IPv4 netmask for the management interface [255.255.255.0]: 255.255.255.192
Enter the IPv4 default gateway for the management interface [data-interfaces]: 10.10.10.1
Enter a fully qualified hostname for this system [firepower]: ftd-1.cisco.com
Enter a comma-separated list of DNS servers or 'none' [208.67.222.222,208.67.220.220]:
Enter a comma-separated list of search domains or 'none' []:
If your networking information has changed, you will need to reconnect.
For HTTP Proxy configuration, run 'configure network http-proxy'

Manage the device locally? (yes/no) [yes]: no
Configure firewall mode? (routed/transparent) [routed]:
Configuring firewall mode ...

Update policy deployment information
- add device configuration
- add network discovery
- add system policy

You can register the sensor to a Firepower Management Center and use the
Firepower Management Center to manage it. Note that registering the sensor
to a Firepower Management Center disables on-sensor Firepower Services
management capabilities.

When registering the sensor to a Firepower Management Center, a unique
alphanumeric registration key is always required. In most cases, to register
a sensor to a Firepower Management Center, you must provide the hostname or
the IP address along with the registration key.
'configure manager add [hostname | ip address ] [registration key ]'

However, if the sensor and the Firepower Management Center are separated by a
NAT device, you must enter a unique NAT ID, along with the unique registration
key.
'configure manager add DONTRESOLVE [registration key ] [ NAT ID ]'

Later, using the web interface on the Firepower Management Center, you must
use the same registration key and, if necessary, the same NAT ID when you add
this sensor to the Firepower Management Center.
>

```

#### Step 4 Identify the FMC that will manage this FTD.

```
configure manager add {hostname | IPv4_address | IPv6_address | DONTRESOLVE} reg_key [nat_id]
```

- {hostname | IPv4\_address | IPv6\_address | **DONTRESOLVE**}—Specifies either the FQDN or IP address of the FMC. If the FMC is not directly addressable, use **DONTRESOLVE** and also specify the *nat\_id*. At least one of the devices, either the FMC or the FTD, must have a reachable IP address to establish the two-way, SSL-encrypted communication channel between the two devices. If you specify **DONTRESOLVE** in this command, then the FTD must have a reachable IP address or hostname.
- *reg\_key*—Specifies a one-time registration key of your choice that you will also specify on the FMC when you register the FTD. The registration key must not exceed 37 characters. Valid characters include alphanumerical characters (A–Z, a–z, 0–9) and the hyphen (-).
- *nat\_id*—Specifies a unique, one-time string of your choice that you will also specify on the FMC when you register the FTD when one side does not specify a reachable IP address or hostname. It is required if you set the FMC to **DONTRESOLVE**. The NAT ID must not exceed 37 characters. Valid characters

include alphanumeric characters (A–Z, a–z, 0–9) and the hyphen (-). This ID cannot be used for any other devices registering to the FMC.

**Note** If you use a data interface for management, then you must specify the NAT ID on both the FTD and FMC for registration.

**Example:**

```
> configure manager add MC.example.com 123456
Manager successfully configured.
```

If the FMC is behind a NAT device, enter a unique NAT ID along with the registration key, and specify DONTRESOLVE instead of the hostname, for example:

**Example:**

```
> configure manager add DONTRESOLVE regk3y78 natid90
Manager successfully configured.
```

If the FTD is behind a NAT device, enter a unique NAT ID along with the FMC IP address or hostname, for example:

**Example:**

```
> configure manager add 10.70.45.5 regk3y78 natid56
Manager successfully configured.
```

**Step 5** (Optional) (6.7 and Later) Configure a data interface for FMC access.

**configure network management-data-interface**

You are then prompted to configure basic network settings for the data interface.

**Note** You should use the console port when using this command. If you use SSH to the Management interface, you might get disconnected and have to reconnect to the console port. See below for more information about SSH usage.

See the following details for using this command:

- The original Management interface cannot use DHCP if you want to use a data interface for management. If you did not set the IP address manually during initial setup, you can set it now using the **configure network {ipv4 | ipv6} manual** command. If you did not already set the Management interface gateway to **data-interfaces**, this command will set it now.
- FMC access from a data interface has the following limitations:
  - You can only enable FMC access on one physical, data interface. You cannot use a subinterface or EtherChannel.
  - This interface cannot be management-only.
  - Routed firewall mode only, using a routed interface.
  - High Availability is not supported. You must use the Management interface in this case.
  - PPPoE is not supported. If your ISP requires PPPoE, you will have to put a router with PPPoE support between the FTD and the WAN modem.
  - The interface must be in the global VRF only.



- You cannot use separate management and event-only interfaces.
- SSH is not enabled by default for data interfaces, so you will have to enable SSH later using FMC. Because the Management interface gateway will be changed to be the data interfaces, you also cannot SSH to the Management interface from a remote network unless you add a static route for the Management interface using the **configure network static-routes** command.
- When you add the FTD to the FMC, the FMC discovers and maintains the interface configuration, including the following settings: interface name and IP address, static route to the gateway, DNS servers, and DDNS server. For more information about the DNS server configuration, see below. In FMC, you can later make changes to the FMC access interface configuration, but make sure you don't make changes that can prevent the FTD or FMC from re-establishing the management connection. If the management connection is disrupted, the FTD includes the **configure policy rollback** command to restore the previous deployment.
- If you configure a DDNS server update URL, the FTD automatically adds certificates for all of the major CAs from the Cisco Trusted Root CA bundle so that the FTD can validate the DDNS server certificate for the HTTPS connection. The FTD supports any DDNS server that uses the DynDNS Remote API specification (<https://help.dyn.com/remote-access-api/>).
- This command sets the *data* interface DNS server. The Management DNS server that you set with the setup script (or using the **configure network dns servers** command) is used for management traffic. The data DNS server is used for DDNS (if configured) or for security policies applied to this interface.

On the FMC, the data interface DNS servers are configured in the Platform Settings policy that you assign to this FTD. When you add the FTD to the FMC, the local setting is maintained, and the DNS servers are *not* added to a Platform Settings policy. However, if you later assign a Platform Settings policy to the FTD that includes a DNS configuration, then that configuration will overwrite the local setting. We suggest that you actively configure the DNS Platform Settings to match this setting to bring the FMC and the FTD into sync.

Also, local DNS servers are only retained by FMC if the DNS servers were discovered at initial registration. For example, if you registered the device using the Management interface, but then later configure a data interface using the **configure network management-data-interface** command, then you must manually configure all of these settings in FMC, including the DNS servers, to match the FTD configuration.

- You can change the management interface after you register the FTD to the FMC, to either the Management interface or another data interface.
- The FQDN that you set in the setup wizard will be used for this interface.
- You can clear the entire device configuration as part of the command; you might use this option in a recovery scenario, but we do not suggest you use it for initial setup or normal operation.
- To disable data management, enter the **configure network management-data-interface disable** command.

### Example:

```
> configure network management-data-interface
Data interface to use for management: ethernet1/1
Specify a name for the interface [outside]:
IP address (manual / dhcp) [dhcp]:
DDNS server update URL [none]:
https://jcrichon:pa$$w0rd17@domains.example.com/nic/update?hostname=<h>&myip=<a>
```

Do you wish to clear all the device configuration before applying ? (y/n) [n]:

Configuration done with option to allow FMC access from any network, if you wish to change the FMC access network use the 'client' option in the command 'configure network management-data-interface'.

Setting IPv4 network configuration.  
Network settings changed.

>

### Example:

```
> configure network management-data-interface
Data interface to use for management: ethernet1/1
Specify a name for the interface [outside]: internet
IP address (manual / dhcp) [dhcp]: manual
IPv4/IPv6 address: 10.10.6.7
Netmask/IPv6 Prefix: 255.255.255.0
Default Gateway: 10.10.6.1
Comma-separated list of DNS servers [none]: 208.67.222.222,208.67.220.220
DDNS server update URL [none]:
Do you wish to clear all the device configuration before applying ? (y/n) [n]:
```

Configuration done with option to allow FMC access from any network, if you wish to change the FMC access network use the 'client' option in the command 'configure network management-data-interface'.

Setting IPv4 network configuration.  
Network settings changed.

>

**Step 6** (Optional) (6.7 and Later) Limit data interface access to an FMC on a specific network.

**configure network management-data-interface client** *ip\_address netmask*

By default, all networks are allowed.

---

### What to do next

Register your device to a FMC.

## Log Into the Firepower Management Center

Use the FMC to configure and monitor the FTD.

### Before you begin

For information on supported browsers, refer to the release notes for the version you are using (see <https://www.cisco.com/go/firepower-notes>).

### Procedure

---

**Step 1** Using a supported browser, enter the following URL.

`https://fmc_ip_address`

- Step 2** Enter your username and password.
- Step 3** Click **Log In**.
- 

## Obtain Licenses for the FMC

All licenses are supplied to the FTD by the FMC. You can purchase the following licenses:

- **Threat**—Security Intelligence and Next-Generation IPS
- **Malware**—Malware
- **URL**—URL Filtering
- **RA VPN**—AnyConnect Plus, AnyConnect Apex, or AnyConnect VPN Only

For a more detailed overview on Cisco Licensing, go to [cisco.com/go/licensingguide](https://cisco.com/go/licensingguide)

### Before you begin

- Have a master account on the [Smart Software Manager](#).

If you do not yet have an account, click the link to [set up a new account](#). The Smart Software Manager lets you create a master account for your organization.

- Your Smart Software Licensing account must qualify for the Strong Encryption (3DES/AES) license to use some features (enabled using the export-compliance flag).


### Procedure

---

- Step 1** Make sure your Smart Licensing account contains the available licenses you need.

When you bought your device from Cisco or a reseller, your licenses should have been linked to your Smart Software License account. However, if you need to add licenses yourself, use the **Find Products and Solutions** search field on the [Cisco Commerce Workspace](#). Search for the following license PIDs:

**Figure 11: License Search**

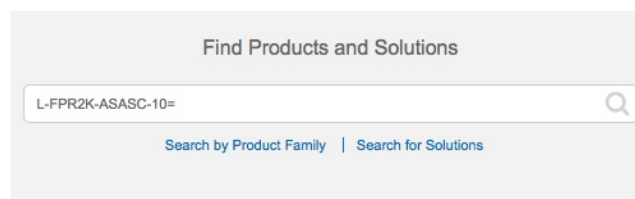

**Note** If a PID is not found, you can add the PID manually to your order.

- Threat, Malware, and URL license combination:
  - L-ASA5508T-TMC=

- L-ASA5516T-TMC=

When you add one of the above PIDs to your order, you can then choose a term-based subscription corresponding with one of the following PIDs:

- L-ASA5508T-TMC-1Y
  - L-ASA5508T-TMC-3Y
  - L-ASA5508T-TMC-5Y
  - L-ASA5516T-TMC-1Y
  - L-ASA5516T-TMC-3Y
  - L-ASA5516T-TMC-5Y
- RA VPN—See the [Cisco AnyConnect Ordering Guide](#).

**Step 2** If you have not already done so, register the FMC with the Smart Licensing server.

Registering requires you to generate a registration token in the Smart Software Manager. See the [FMC configuration guide](#) for detailed instructions.

---

## Register the FTD with the FMC

Register the FTD to the FMC.

### Before you begin

- Gather the following information that you set in the FTD initial configuration:
  - The FTD management IP address or hostname, and NAT ID
  - The FMC registration key

### Procedure

---

**Step 1** In the FMC, choose **Devices > Device Management**.

**Step 2** From the **Add** drop-down list, choose **Add Device**.

### Add Device ?

Host:†

Display Name:

Registration Key:†

Group:

Access Control Policy:†

Smart Licensing

- Malware
- Threat
- URL Filtering

Advanced

Unique NAT ID:†

- Transfer Packets

Set the following parameters:

- **Host**—Enter the IP address or hostname of the FTD you want to add. You can leave this field blank if you specified both the FMC IP address and a NAT ID in the FTD initial configuration.
- **Display Name**—Enter the name for the FTD as you want it to display in the FMC.
- **Registration Key**—Enter the same registration key that you specified in the FTD initial configuration.
- **Domain**—Assign the device to a leaf domain if you have a multidomain environment.
- **Group**—Assign it to a device group if you are using groups.
- **Access Control Policy**—Choose an initial policy. Unless you already have a customized policy you know you need to use, choose **Create new policy**, and choose **Block all traffic**. You can change this later to allow traffic; see [Allow Traffic from Inside to Outside, on page 31](#).

Figure 12: New Policy

- **Smart Licensing**—Assign the Smart Licenses you need for the features you want to deploy: **Malware** (if you intend to use malware inspection), **Threat** (if you intend to use intrusion prevention), and **URL** (if you intend to implement category-based URL filtering). **Note:** You can apply an AnyConnect remote access VPN license after you add the device, from the **System > Licenses > Smart Licenses** page.
- **Unique NAT ID**—Specify the NAT ID that you specified in the FTD initial configuration.
- **Transfer Packets**—Allow the device to transfer packets to the FMC. When events like IPS or Snort are triggered with this option enabled, the device sends event metadata information and packet data to the FMC for inspection. If you disable it, only event information will be sent to the FMC, but packet data is not sent.

**Step 3** Click **Register**, and confirm a successful registration.

If the registration succeeds, the device is added to the list. If it fails, you will see an error message. If the FTD fails to register, check the following items:

- **Ping**—Access the FTD CLI, and ping the FMC IP address using the following command:

```
ping system ip_address
```

If the ping is not successful, check your network settings using the **show network** command. If you need to change the FTD Management IP address, use the **configure network {ipv4 | ipv6} manual** command. If you configured a data interface for FMC access, use the **configure network management-data-interface** command.

- **Registration key, NAT ID, and FMC IP address**—Make sure you are using the same registration key, and if used, NAT ID, on both devices. You can set the registration key and NAT ID on the FMC using the **configure manager add** command.

For more troubleshooting information, see <https://cisco.com/go/fmc-reg-error>.

## Configure a Basic Security Policy

This section describes how to configure a basic security policy with the following settings:

- Inside and outside interfaces—Assign a static IP address to the inside interface, and use DHCP for the outside interface.
- DHCP server—Use a DHCP server on the inside interface for clients.
- Default route—Add a default route through the outside interface.
- NAT—Use interface PAT on the outside interface.
- Access control—Allow traffic from inside to outside.

To configure a basic security policy, complete the following tasks.

1	<a href="#">Configure Interfaces, on page 23.</a>
2	<a href="#">Configure the DHCP Server, on page 26.</a>
3	<a href="#">Add the Default Route, on page 27.</a>
4	<a href="#">Configure NAT, on page 29.</a>
5	<a href="#">Allow Traffic from Inside to Outside, on page 31.</a>
6	<a href="#">Deploy the Configuration, on page 32.</a>

## Configure Interfaces

Enable FTD interfaces, assign them to security zones, and set the IP addresses. Typically, you must configure at least a minimum of two interfaces to have a system that passes meaningful traffic. Normally, you would have an outside interface that faces the upstream router or internet, and one or more inside interfaces for your organization's networks. Some of these interfaces might be "demilitarized zones" (DMZs), where you place publically-accessible assets such as your web server.

A typical edge-routing situation is to obtain the outside interface address through DHCP from your ISP, while you define static addresses on the inside interfaces.

The following example configures a routed mode inside interface with a static address and a routed mode outside interface using DHCP.

## Procedure

**Step 1** Choose **Devices > Device Management**, and click the **Edit** (✎) for the firewall.

**Step 2** Click **Interfaces**.

Interface	Logical Name	Type	Security Zones	MAC Address (Active/Standby)	IP Address
Ethernet1/2		Physical			
Ethernet1/3.1		Subinterface			
Ethernet1/4	diagnostic	Physical			
Ethernet1/5		Physical			

**Step 3** Click **Edit** (✎) for the interface that you want to use for *inside*.

The **General** tab appears.

**Edit Physical Interface**

**General** | IPv4 | IPv6 | Advanced | Hardware Configuration

Name:   Enabled  Management Only

Description:

Mode:  ▼

Security Zone:  ▼

Interface ID:

MTU:  (64 - 9000)

- Enter a **Name** up to 48 characters in length.  
For example, name the interface **inside**.
- Check the **Enabled** check box.
- Leave the **Mode** set to **None**.
- From the **Security Zone** drop-down list, choose an existing inside security zone or add a new one by clicking **New**.



For example, add a zone called **inside\_zone**. Each interface must be assigned to a security zone and/or interface group. An interface can belong to only one security zone, but can also belong to multiple interface groups. You apply your security policy based on zones or groups. For example, you can assign the inside interface to the inside zone; and the outside interface to the outside zone. Then you can configure your access control policy to enable traffic to go from inside to outside, but not from outside to inside. Most policies only support security zones; you can use zones or interface groups in NAT policies, prefilter policies, and QoS policies.

e) Click the **IPv4** and/or **IPv6** tab.

- **IPv4**—Choose **Use Static IP** from the drop-down list, and enter an IP address and subnet mask in slash notation.

For example, enter **192.168.1.1/24**

**Edit Physical Interface**

General **IPv4** IPv6 Advanced Hardware Configuration

IP Type: Use Static IP

IP Address: 192.168.1.1/24 eg. 192.0.2.1/255.255.255.128 or 192.0.2.1/25

- **IPv6**—Check the **Autoconfiguration** check box for stateless autoconfiguration.

f) Click **OK**.

**Step 4** Click the **Edit** (✎) for the interface that you want to use for *outside*.  
The **General** tab appears.

**Edit Physical Interface** ? x

General **IPv4** IPv6 Advanced Hardware Configuration

Name: outside  Enabled  Management Only

Description:

Mode: None

Security Zone: outside\_zone

Interface ID: GigabitEthernet0/0

MTU: 1500 (64 - 9000)

OK Cancel

**Note** If you pre-configured this interface for FMC access management, then the interface will already be named, enabled, and addressed. You should not alter any of these basic settings because doing so will disrupt the FMC management connection. You can still configure the Security Zone on this screen for through traffic policies.

a) Enter a **Name** up to 48 characters in length.

For example, name the interface **outside**.

b) Check the **Enabled** check box.

c) Leave the **Mode** set to **None**.

d) From the **Security Zone** drop-down list, choose an existing outside security zone or add a new one by clicking **New**.

For example, add a zone called **outside\_zone**.

e) Click the **IPv4** and/or **IPv6** tab.

- **IPv4**—Choose **Use DHCP**, and configure the following optional parameters:

- **Obtain default route using DHCP**—Obtains the default route from the DHCP server.

- **DHCP route metric**—Assigns an administrative distance to the learned route, between 1 and 255. The default administrative distance for the learned routes is 1.

The screenshot shows the 'Edit Physical Interface' configuration window with the 'IPv4' tab selected. The 'IP Type' dropdown is set to 'Use DHCP'. Below it, the 'Obtain default route using DHCP' checkbox is checked. The 'DHCP route metric' is set to '1', with a range of '(1 - 255)' shown to the right.

- **IPv6**—Check the **Autoconfiguration** check box for stateless autoconfiguration.

f) Click **OK**.

**Step 5** Click **Save**.

## Configure the DHCP Server


Enable the DHCP server if you want clients to use DHCP to obtain IP addresses from the FTD.

### Procedure

**Step 1** Choose **Devices > Device Management**, and click the **Edit** (✎) for the device.

**Step 2** Choose **DHCP > DHCP Server**.

**Step 3** On the **Server** page, click **Add**, and configure the following options:

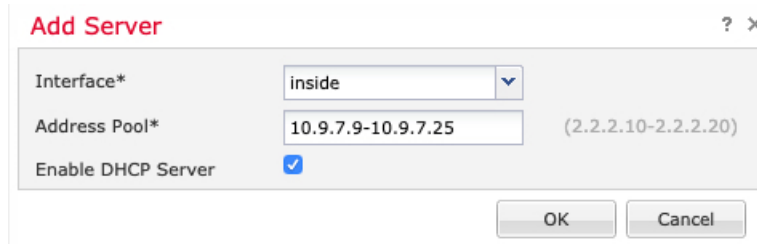

- **Interface**—Choose the interface from the drop-down list.
- **Address Pool**—Set the range of IP addresses from lowest to highest that are used by the DHCP server. The range of IP addresses must be on the same subnet as the selected interface and cannot include the IP address of the interface itself.
- **Enable DHCP Server**—Enable the DHCP server on the selected interface.

**Step 4** Click **OK**.

**Step 5** Click **Save**.

---

## Add the Default Route

The default route normally points to the upstream router reachable from the outside interface. If you use DHCP for the outside interface, your device might have already received a default route. If you need to manually add the route, complete this procedure. If you received a default route from the DHCP server, it will show in the **IPv4 Routes** or **IPv6 Routes** table on the **Devices > Device Management > Routing > Static Route** page.

### Procedure

---

**Step 1** Choose **Devices > Device Management**, and click the **Edit** (✎) for the device.

**Step 2** Choose **Routing > Static Route**, click **Add Route**, and set the following:

## Add the Default Route

- **Type**—Click the **IPv4** or **IPv6** radio button depending on the type of static route that you are adding.
- **Interface**—Choose the egress interface; typically the outside interface.
- **Available Network**—Choose **any-ipv4** for an IPv4 default route, or **any-ipv6** for an IPv6 default route and click **Add** to move it to the **Selected Network** list.
- **Gateway** or **IPv6 Gateway**—Enter or choose the gateway router that is the next hop for this route. You can provide an IP address or a Networks/Hosts object.
- **Metric**—Enter the number of hops to the destination network. Valid values range from 1 to 255; the default value is 1.

**Step 3** Click **OK**.

The route is added to the static route table.

Network	Interface	Gateway	Tunneled	Metric	Tracked
<b>IPv4 Routes</b>					
any-ipv4	outside	10.99.10.1	false	1	
<b>IPv6 Routes</b>					

**Step 4** Click **Save**.

## Configure NAT

A typical NAT rule converts internal addresses to a port on the outside interface IP address. This type of NAT rule is called *interface Port Address Translation (PAT)*.

### Procedure

**Step 1** Choose **Devices > NAT**, and click **New Policy > Threat Defense NAT**.

**Step 2** Name the policy, select the device(s) that you want to use the policy, and click **Save**.

The screenshot shows the 'New Policy' dialog box. The 'Name' field contains 'interface\_PAT'. Below it is a 'Description' field. The 'Targeted Devices' section is divided into 'Available Devices' and 'Selected Devices'. In the 'Available Devices' list, the device '192.168.0.16' is highlighted. An 'Add to Policy' button is positioned between the two lists. In the 'Selected Devices' list, the device '192.168.0.16' is already present and circled in red. At the bottom of the dialog are 'Save' and 'Cancel' buttons.

The policy is added to the FMC. You still have to add rules to the policy.

**Step 3** Click **Add Rule**.

The **Add NAT Rule** dialog box appears.

**Step 4** Configure the basic rule options:

The screenshot shows the 'Add NAT Rule' dialog box. The 'NAT Rule' dropdown menu is set to 'Auto NAT Rule'. The 'Type' dropdown menu is set to 'Dynamic'. The 'Enable' checkbox is checked. At the bottom, there are four tabs: 'Interface Objects', 'Translation' (which is selected and highlighted in blue), 'PAT Pool', and 'Advanced'.

- **NAT Rule**—Choose **Auto NAT Rule**.

- **Type**—Choose **Dynamic**.

**Step 5** On the **Interface Objects** page, add the outside zone from the **Available Interface Objects** area to the **Destination Interface Objects** area.

The screenshot shows the 'Add NAT Rule' dialog box with the 'Interface Objects' tab selected. The 'NAT Rule' is set to 'Auto NAT Rule' and the 'Type' is 'Dynamic'. The 'Enable' checkbox is checked. In the 'Available Interface Objects' section, 'outside\_zone' is selected, and the 'Add to Destination' button is highlighted with a red '2'. The 'Destination Interface Objects' section shows 'outside\_zone' has been added, indicated by a red '3'.

**Step 6** On the **Translation** page, configure the following options:

The screenshot shows the 'Add NAT Rule' dialog box with the 'Translation' tab selected. The 'Original Source' dropdown is set to 'all-ipv4' and circled in red. The 'Translated Source' dropdown is set to 'Destination Interface IP' and circled in red. The 'Original Port' is set to 'TCP'.

- **Original Source**—Click **Add (+)** to add a network object for all IPv4 traffic (0.0.0.0/0).

The screenshot shows the 'New Network Object' dialog box. The 'Name' field is 'all-ipv4'. The 'Network' radio button is selected and circled in red. The 'Network' field is '0.0.0.0/0' and circled in red. The 'Allow Overrides' checkbox is unchecked.

**Note** You cannot use the system-defined **any-ipv4** object, because Auto NAT rules add NAT as part of the object definition, and you cannot edit system-defined objects.

- **Translated Source**—Choose **Destination Interface IP**.

**Step 7** Click **Save** to add the rule.

The rule is saved to the **Rules** table.

The screenshot shows the FMC interface with the 'Rules' table. The table has columns for Direction, Type, Source Interface Objects, Destination Interface Objects, Original Sources, Original Destinations, Original Services, Translated Sources, Translated Destinations, Translated Services, and Options. A rule named 'interface\_PAT' is highlighted, showing it is a Dynamic rule with Source Interface Objects set to 'any', Destination Interface Objects set to 'outside\_zone', and Translated Sources set to 'Interface'. The rule is categorized under 'Auto NAT Rules'.

**Step 8** Click **Save** on the NAT page to save your changes.

## Allow Traffic from Inside to Outside

If you created a basic **Block all traffic** access control policy when you registered the FTD with the FMC, then you need to add rules to the policy to allow traffic through the device. The following procedure adds a rule to allow traffic from the inside zone to the outside zone. If you have other zones, be sure to add rules allowing traffic to the appropriate networks.

See the [FMC configuration guide](#) to configure more advanced security settings and rules.

### Procedure

**Step 1** Choose **Policy > Access Policy > Access Policy**, and click the **Edit** (✎) for the access control policy assigned to the FTD.

**Step 2** Click **Add Rule**, and set the following parameters:


The screenshot shows the 'Add Rule' configuration window. The rule name is 'inside\_to\_outside', it is enabled, and the action is 'Allow'. The rule is inserted into the 'Mandatory' policy. The 'Zones' tab is selected, showing 'Available Zones' with 'inside\_zone' and 'outside\_zone'. The 'Source Zones' list contains 'inside\_zone' and the 'Destination Zones' list contains 'outside\_zone'. Buttons for 'Add to Source' and 'Add to Destination' are visible.

- **Name**—Name this rule, for example, **inside\_to\_outside**.
- **Source Zones**—Select the inside zone from **Available Zones**, and click **Add to Source**.
- **Destination Zones**—Select the outside zone from **Available Zones**, and click **Add to Destination**.

Leave the other settings as is.

### Step 3 Click Add.

The rule is added to the **Rules** table.

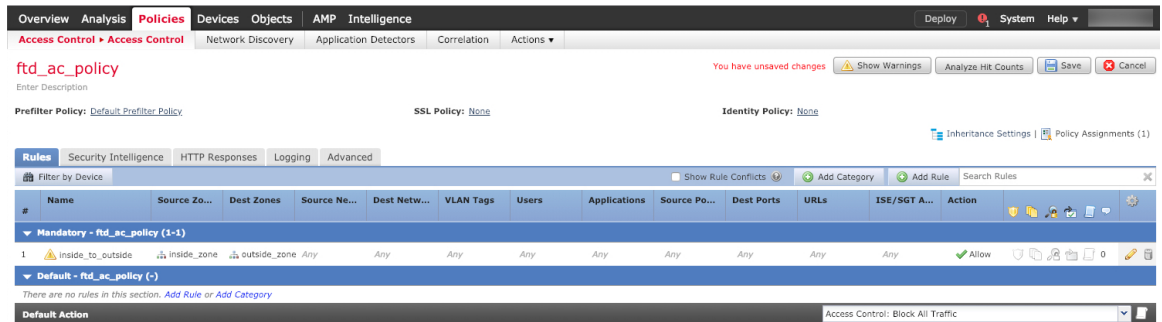


### Step 4 Click Save.

## Deploy the Configuration

Deploy the configuration changes to the FTD; none of your changes are active on the device until you deploy them.

### Procedure

#### Step 1 Click **Deploy** in the upper right.

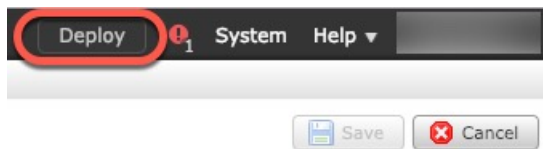


#### Step 2 Select the device in the **Deploy Policies** dialog box, then click **Deploy**.



#### Step 3 Ensure that the deployment succeeds. Click the icon to the right of the **Deploy** button in the menu bar to see status for deployments.



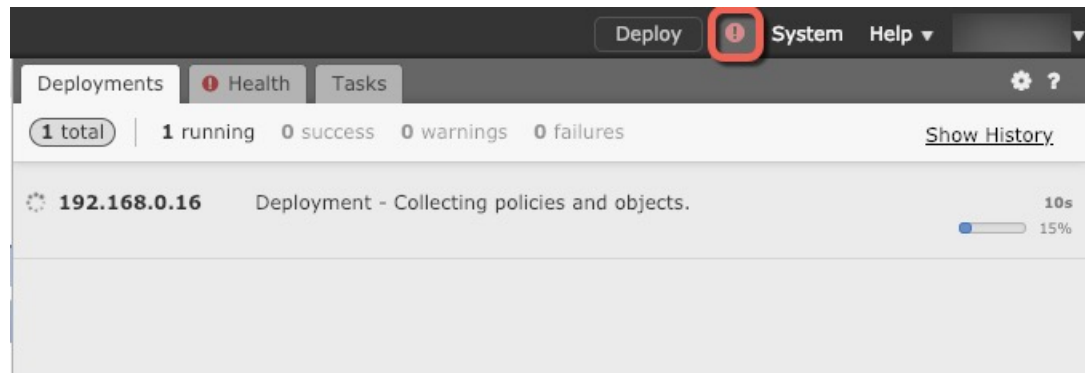

## Access the Firepower Threat Defense CLI

Use the command-line interface (CLI) to set up the system and do basic system troubleshooting. You cannot configure policies through a CLI session. You can access the CLI by connecting to the console port.

You can SSH to the management interface of the FTD device. You can also connect to the address on a data interface if you open the interface for SSH connections. SSH access to data interfaces is disabled by default.

### Procedure

- Step 1** To log into the CLI, connect your management computer to the console port.. The ASA 5508-X and 5516-X ship with a USB A-to-B serial cable. Be sure to install any necessary USB serial drivers for your operating system (see the [hardware guide](#)). Use the following serial settings:
- 9600 baud
  - 8 data bits
  - No parity
  - 1 stop bit
- Step 2** Log in to the FTD CLI using the **admin** username and the password you set at initial setup (the default is **Admin123**).
- After logging in, for information on the commands available in the CLI, enter **help** or **?**. For usage information, see the [Cisco Firepower Threat Defense Command Reference](#).

## Power Off the Device

It's important that you shut down your system properly. Simply unplugging the power or pressing the power switch can cause serious file system damage. Remember that there are many processes running in the background all the time, and unplugging or shutting off the power does not allow the graceful shutdown of your Firepower system.

## Procedure

---

**Step 1** Connect to the console port to access the FTD CLI, and then shut down the FTD.

### shutdown

#### Example:

```
> shutdown
This command will shutdown the system. Continue?
Please enter 'YES' or 'NO': yes
INIT: Stopping Cisco Threat Defense.....ok
Shutting down sfidf... [ OK ]
Clearing static routes
Unconfiguring default route [ OK ]
Unconfiguring address on br1 [ OK ]
Unconfiguring IPv6 [ OK ]
Downing interface [ OK ]
Stopping xinetd:
Stopping nscd... [ OK ]
Stopping system log daemon... [ OK ]
Stopping Threat Defense ...
Stopping system message bus: dbus. [ OK ]
Un-mounting disk partitions ...
device-mapper: remove ioctl on root failed: Device or resource busy
[...]
mdadm: Cannot get exclusive access to /dev/md0:Perhaps a running process, mounted filesystem
or active volume group?
Stopping OpenBSD Secure Shell server: sshd
stopped /usr/sbin/sshd (pid 3520)
done.
Stopping Advanced Configuration and Power Interface daemon: stopped /usr/sbin/acpid (pid
3525)
acpid.
Stopping system message bus: dbus.
Stopping internet superserver: xinetd.
no /etc/sysconfig/kdump.conf
Deconfiguring network interfaces... ifdown: interface br1 not configured
done.
SSP-Security-Module is shutting down ...
Sending ALL processes the TERM signal ...
acpid: exiting
Sending ALL processes the KILL signal ...
Deactivating swap...
Unmounting local filesystems...

Firepower Threat Defense stopped.
It is safe to power off now.

Do you want to reboot instead? [y/N]
```

**Step 2** After the FTD shuts down, and the console shows that "It is safe to power off now", you can then turn off the power switch and unplug the power to physically remove power from the chassis if necessary.

Alternatively, you can reboot the system by typing **y** at the prompt.

---

## What's Next?

To continue configuring your FTD, see the documents available for your software version at [Navigating the Cisco Firepower Documentation](#).

For information related to using FMC, see the [Firepower Management Center Configuration Guide](#).

What's Next?