How to Configure Wireless Distribution System (WDS) on the RV130W

Objective

A Wireless Distribution System (WDS) is a system that enables the wireless interconnection of access points (APs) in a network. WDS allows a wireless network to be expanded using multiple access points without the need for a wired backbone to link them. To establish a WDS link, the device and other remote WDS peers must be configured in the same wireless network mode, wireless channel, wireless band selection, and encryption types (None or WEP). For more information, refer to *Configuring Basic Wireless Settings on the RV130W*.

In a typical small business environment, you can configure WDS in Bridge mode or Repeater mode. Bridge mode is useful if you want the other APs to extend the network signal for your device, which acts as the common link. Repeater mode is useful if you want your device to act as a network signal repeater for other APs by using a wireless connection.

The objective of this document is to show you how to configure a Wireless Distribution System on the RV130W.

Applicable Devices

RV130W

Software Version

• v1.0.1.3

Wireless Distribution System Configuration

Configuration of WDS in Bridge Mode

Step 1. Log in to the web configuration utility and choose **Wireless > WDS**. The *WDS* page opens:

WDS			
WDS MAC A	ddress: 3C:CE:73	3:8E:04:1E	
WDS			
Mode	WDS Brid	ge	
		Remote Wireless Bridge's MAC Address	
		MAC 1 (Hint: 00:11:22:33:44:55 or 001122334455)	
		MAC 2	
		MAC 3	
		MAC 4	
	WDS Rep	eater	
Allow wireless signal to be repeated by a repeater			
		MAC 1	
		MAC 2	
		MAC 3	
		MAC 4	
		Repeat wireless signal of a remote access point	
		Remote Access Point's MAC Address (Select one from the site survey list or define your own):	
		Show Available Networks	
		MAC	
Save	Cancel		

Step 2. To enable WDS, check the check box in the $\ensuremath{\textit{WDS}}$ field.

WDS			
WDS MAC Address: 3C:	WDS MAC Address: 3C:CE:73:8E:04:1E		
wds 🔻			
Mode	S Bridge		
	Remote Wireless Bridge's MAC Address		
	MAC 1 (Hint: 00:11:22:33:44:55 or 001122334455)		
	MAC 2		
	MAC 3		
	MAC 4		
WDS Repeater			
	Allow wireless signal to be repeated by a repeater		
	MAC 1		
	MAC 2		
	MAC 3		
	MAC 4		
	Repeat wireless signal of a remote access point		
	Remote Access Point's MAC Address (Select one from the site survey list or define your own):		
	Show Available Networks		
	MAC		
Save Cance	el		


Step 3. In the *Mode* field, click the **WDS Bridge** radio button. When the router's WDS is configured to Bridge mode, the WDS designates the configured access point as the common link between multiple access points.

WDS			
WDS MAC A	ress: 3C:CE:73:8E:04:1E		
WDS	$oldsymbol{\mathbb{V}}$		
Mode	WDS Bridge		
	Remote Wireless Bridge's MAC Address		
	MAC 1 (Hint: 00:11:22:33:44:55 or 001122334455)		
	MAC 2		
	MAC 3		
	MAC 4		
	© WDS Repeater		
Allow wireless signal to be repeated by a repeater			
	MAC 1		
	MAC 2		
	MAC 3		
	MAC 4		
	Repeat wireless signal of a remote access point		
	Remote Access Point's MAC Address (Select one from the site survey list or define your own):		
	Show Available Networks		
	MAC		
Save	Cancel		

Step 4. In the *Remote Wireless Bridge's MAC Address* section, enter the MAC address of an access point to use as a bridge in the *MAC 1* field. You can also configure additional access points to use as bridges in the *MAC 2*, *MAC 3*, and *MAC 4* fields.

1	WDS	
	WDS MAC Add	ess: 3C:CE:73:8E:04:1E
	WDS	
	Mode	WDS Bridge
		Remote Wireless Bridge's MAC Address
		MAC 1 (00:11:3E:8E:44:55 (Hint: 00:11:22:33:44:55 or 001122334455)
		MAC 2
		MAC 3
		MAC 4
		© WDS Repeater
		Allow wireless signal to be repeated by a repeater
		MAC 1
		MAC 2
		MAC 3
		MAC 4
		Repeat wireless signal of a remote access point
		Remote Access Point's MAC Address (Select one from the site survey list or define your own):
		Show Available Networks
		MAC
	Save	Cancel

Step 5. Click **Save** to save the changes.

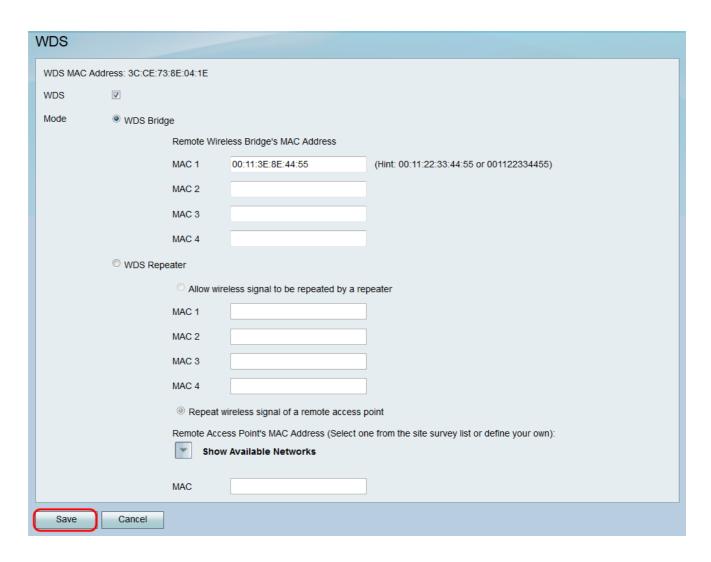

Configuration of WDS in Wireless Repeater Mode


Step 1. Log in to the web configuration utility and choose **Wireless > WDS**. The WDS page opens.

WDS			
WDS MAC A	ddress: 3C:CE:73	3:8E:04:1E	
WDS			
Mode	WDS Brid	ge	
		Remote Wireless Bridge's MAC Address	
		MAC 1 (Hint: 00:11:22:33:44:55 or 001122334455)	
		MAC 2	
		MAC 3	
		MAC 4	
	WDS Rep	eater	
Allow wireless signal to be repeated by a repeater			
		MAC 1	
		MAC 2	
		MAC 3	
		MAC 4	
		Repeat wireless signal of a remote access point	
		Remote Access Point's MAC Address (Select one from the site survey list or define your own):	
		Show Available Networks	
		MAC	
Save	Cancel		

Step 2. To enable WDS, check the check box in the $\ensuremath{\textit{WDS}}$ field.

WDS			
WDS MAC	Address: 3C:CE:73:8E:04:1E		
WDS			
Mode	© WDS Bridge		
	Remote Wireless Bridge's MAC Address		
	MAC 1 (Hint: 00:11:22:33:44:55 or 001122334455)		
	MAC 2		
	MAC 3		
	MAC 4		
	WDS Repeater		
	Allow wireless signal to be repeated by a repeater		
	MAC 1		
	MAC 2		
	MAC 3		
	MAC 4		
	Repeat wireless signal of a remote access point		
	Remote Access Point's MAC Address (Select one from the site survey list or define your own):		
	Show Available Networks		
	MAC		
Save	Cancel		

Step 3. In the *Mode* field, click the **WDS Repeater** radio button. When the router's WDS is configured to Repeater mode, the WDS designates the configured access point to connect to multiple access points without a wired connection to the LAN by repeating signals using wireless connection.

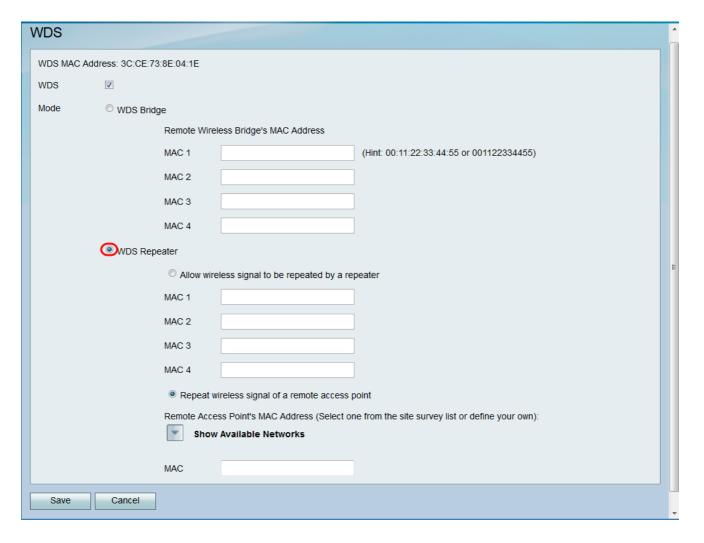

Step 4. Choose the desired option for the WDS Repeater mode. The available options are defined as follows:

- Allow wireless signal to be repeated by a repeater Designated Access Points are used to repeat the device's wireless signal.
- Repeat wireless signal of a remote access point The device is used to repeat the wireless signal of another wireless access point. If you select this option, skip to Step 6.


Step 5. If you choose **Allow wireless signal to be repeated by a repeater** in Step 4, enter the MAC address of an access point to use as a repeater in the *MAC 1* field. You can configure additional access points to use as repeaters in the *MAC 2*, *MAC 3*, and *MAC 4* fields. Skip to Step 9.

WE	DS		
W	DS MAC Add	dress: 3C:CE:73:8E:04:1E	
W	'DS		
Mo	ode	© WDS Bridge	
		Remote Wireless Bridge's MAC Address	
		MAC 1 (Hint: 00:11:22:33:44:55 or 001122334455)	
		MAC 2	
		MAC 3	
		MAC 4	
	WDS Repeater		
		Allow wireless signal to be repeated by a repeater	
		MAC 1 00:01:32:23:3C:9D	
		MAC 2	
		MAC 3	
		MAC 4	
		Repeat wireless signal of a remote access point	
		Remote Access Point's MAC Address (Select one from the site survey list or define your own):	
		Show Available Networks	
		MAC	
	Save	Cancel	


Step 6. If you choose **Repeat wireless signal of a remote access point** in Step 4, click **Show Available Networks** to find available wireless access points to connect to.

WDS			
WDS MAC Add	dress: 3C:CE:73:8E:04:1E		
WDS	v		
Mode	○ WDS Bridge		
	Remote Wire	ess Bridge's MAC Address	
	MAC 1	(Hir	nt: 00:11:22:33:44:55 or 001122334455)
	MAC 2		
	MAC 3		
	MAC 4		
WDS Repeater			
. ○ Allow wireless signal to be repeated by a repeater			
	MAC 1		
	MAC 2		
	MAC 3		
	MAC 4		
		ireless signal of a remote access point	
			m the site survey list or define your own):
		Available Networks	,
	MAC		


The Available Networks Table appears:

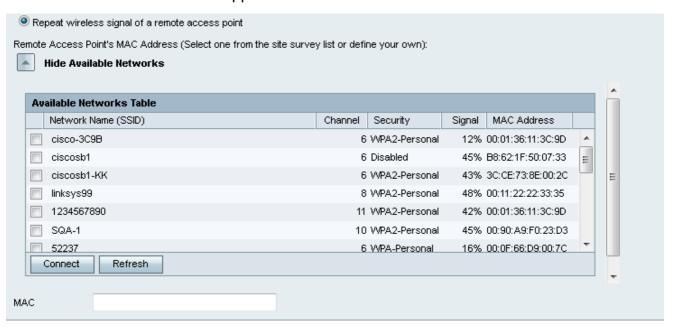


Step 7. Check the desired check box of the network name to designate which available wireless access point you want the device to repeat the signal for.

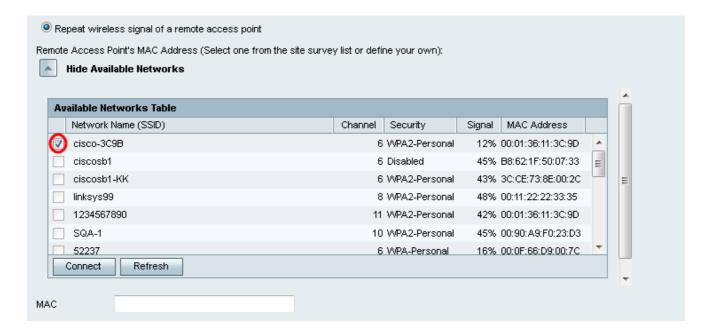

Step 8. Click the **Connect** button to add the MAC address of the selected access point to the *MAC* field.

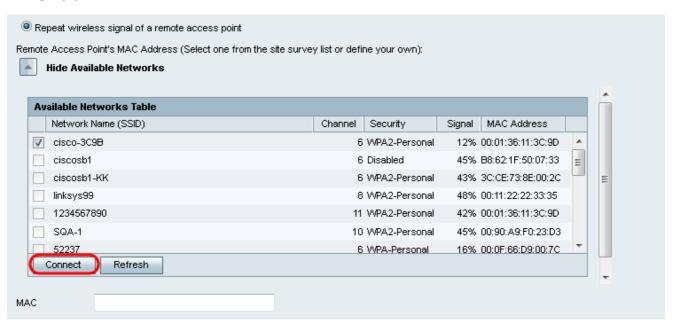

The MAC field will be updated with the MAC Address of the selected network.

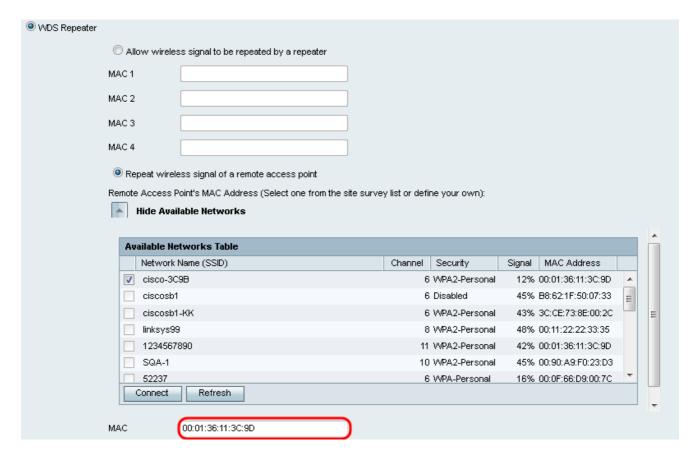

Step 9. Click Save to save your settings.

