



## Configuring Bridging

This chapter describes how to configure bridging for the ML-Series card. For more information about the Cisco IOS commands used in this chapter, refer to the *Cisco IOS Command Reference* publication.

This chapter includes the following major sections:

- [Understanding Bridging, page 5-1](#)
- [Monitoring and Verifying Bridging, page 5-3](#)



Cisco Inter-Switch Link (ISL) and Cisco Dynamic Trunking Protocol (DTP) are not supported by the ML-Series cards, but the ML-Series broadcast forwards these formats. Using ISL or DTP on connecting devices is not recommended. Some Cisco devices attempt to use ISL or DTP by default.

## Understanding Bridging

The ML-Series card can be configured to serve as an IP router and a bridge. Cisco IOS software supports transparent bridging for Fast Ethernet, Gigabit Ethernet, and POS. Cisco IOS software functionality combines the advantages of a spanning-tree bridge and a router. This combination provides the speed and protocol transparency of a spanning-tree bridge, along with the functionality, reliability, and security of a router.

To configure bridging, you must perform the following tasks in the modes indicated:

- In global configuration mode:
  - Enable bridging of IP packets.
  - Select the type of Spanning Tree Protocol (STP).
- In interface configuration mode:
  - Determine which interfaces belong to the same bridge group.

These interfaces become part of the same spanning tree, allowing the ML-Series card to bridge all nonrouted traffic among the network interfaces comprising the bridge group. Interfaces not participating in a bridge group cannot forward bridged traffic.

If the destination address of the packet is known in the bridge table, the packet is forwarded on a single interface in the bridge group. If the packet's destination is unknown in the bridge table, the packet is flooded on all forwarding interfaces in the bridge group. The bridge places source addresses in the bridge table as it learns them during the process of bridging.

A separate spanning-tree process runs for each configured bridge group. Each bridge group participates in a separate spanning tree. A bridge group establishes a spanning tree based on the bridge protocol data units (BPDUs) it receives on only its member interfaces.


## Configuring Bridging

Use the following steps to configure bridging:

Step	Command	Purpose
Step 1	Router(config)# no ip routing	Enables bridging of IP packets. This command needs to be executed once per card, not once per bridge-group. This step is not done for integrated routing and bridging (IRB).
Step 2	Router(config)# bridge bridge-group-number protocol {rstp   ieee}	Assigns a bridge group number and defines the appropriate spanning-tree type: either IEEE 802.1D Spanning Tree Protocol or IEEE 802.1W Rapid Spanning Tree.
Step 3	Router(config)# bridge bridge-group-number priority number	(Optional) Assigns a specific priority to the bridge, to assist in the spanning-tree root definition. The lower the priority, the more likely the bridge is selected as the root.
Step 4	Router(config)# interface interface-type interface-number	Enters interface configuration mode to configure the interface of the ML-Series card.
Step 5	Router(config-if)# bridge-group bridge-group-number	Assigns a network interface to a bridge group.
Step 6	Router(config-if)# no shutdown	Changes the shutdown state to up and enables the interface.
Step 7	Router(config-if)# end	Returns to privileged EXEC mode.
Step 8	Router# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

Figure 5-1 shows a bridging example. [Example 5-1](#) shows the code used to configure Router A. [Example 5-2](#) shows the code used to configure Router B.

**Figure 5-1 Bridging Example**

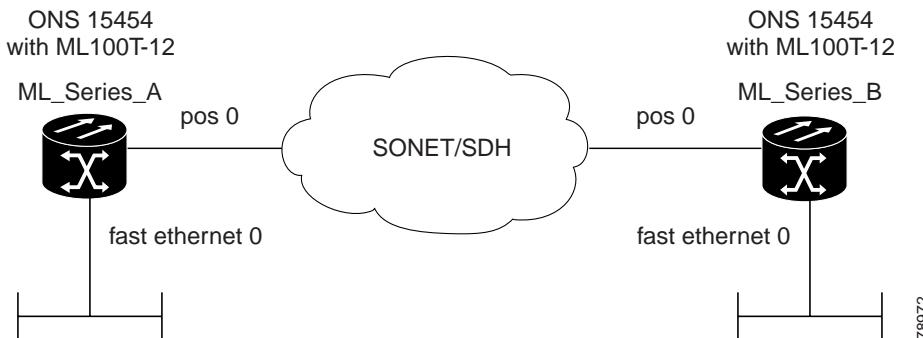

***Example 5-1 Router A Configuration***

```
bridge 1 protocol ieee
!
!
interface FastEthernet0
  no ip address
  bridge-group 1
!
interface POS0
  no ip address
  crc 32
bridge-group 1
  pos flag c2 1
```

***Example 5-2 Router B Configuration***

```
bridge 1 protocol ieee
!
!
interface FastEthernet0
  no ip address
  bridge-group 1
!
interface POS0
  no ip address
  crc 32
bridge-group 1
  pos flag c2 1
```

## Monitoring and Verifying Bridging

After you have set up the ML-Series card for bridging, you can monitor and verify its operation by performing the following procedure in privileged EXEC mode:

	<b>Command</b>	<b>Purpose</b>
Step 1	Router# <b>clear bridge bridge-group-number</b>	Removes any learned entries from the forwarding database of a particular bridge group, clears the transmit, and receives counts for any statically configured forwarding entries.
Step 2	Router# <b>show bridge {bridge-group-number   interface-address}</b>	Displays classes of entries in the bridge forwarding database.
Step 3	Router# <b>show bridge verbose</b>	Displays detailed information about configured bridge groups.
Step 4	Router# <b>show spanning-tree</b>	Displays the spanning tree topology known to the ML-Series card.

[Example 5-3](#) shows an example of the monitoring and verifying bridging.

***Example 5-3 Monitoring and Verifying Bridging***

```
Router# show bridge
Total of 300 station blocks, 298 free
```

## ■ Monitoring and Verifying Bridging

Codes: P - permanent, S - self

Bridge Group 1:

Maximum dynamic entries allowed: 1000  
Current dynamic entry count: 2

Address	Action	Interface
0000.0001.6000	forward	FastEthernet0
0000.0001.6100	forward	POS0

Router# **show bridge verbose**

Total of 300 station blocks, 298 free  
Codes: P - permanent, S - self

Maximum dynamic entries allowed: 1000  
Current dynamic entry count: 2

BG Hash	Address	Action	Interface	VC	Age	RX count	TX co
unt							
1 60/0	0000.0001.6000	forward	FastEthernet0		-		
1 61/0	0000.0001.6100	forward	POS0		-		

Flood ports

FastEthernet0  
POS0

Router# **show spanning-tree**

Bridge group 1

Spanning tree enabled protocol ieee  
Root ID Priority 32769  
Address 0005.9a39.6634  
This bridge is the root  
Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec

Bridge ID Priority 32769 (priority 32768 sys-id-ext 1)  
Address 0005.9a39.6634  
Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec  
Aging Time 300

Interface	Role	Sts	Cost	Prio.Nbr	Type
Fa0	Desg	FWD	19	128.3	P2p
PO0	Desg	FWD	9	128.20	P2p