



# Upgrade Cisco NFVIS

---

The Cisco NFVIS enabled hardware comes preinstalled with Cisco NFVIS version. Follow the steps below to upgrade it to the latest version of the release.

The Cisco Enterprise NFVIS upgrade image is available as a `.iso` and `.nfvispkg` file. Currently, downgrade is not supported. All RPM packages in the Cisco Enterprise NFVIS upgrade image are signed to ensure cryptographic integrity and authenticity. In addition, all RPM packages are verified during Cisco Enterprise NFVIS upgrade.

Ensure that you copy the image to the Cisco NFVIS server before starting the upgrade process. Always specify the exact path of the image when registering the image. Use the `scp` command to copy the upgrade image from a remote server to your Cisco Enterprise NFVIS server. When using the `scp` command, you must copy the image to the `"/data/intdatastore/uploads"` folder on the Cisco Enterprise NFVIS server.



---

## Note

- In Cisco NFVIS release 4.2.1 and earlier releases, you can upgrade Cisco NFVIS from one release to the very next release using the `.nfvispkg` file. For example, you can upgrade your NFVIS from Cisco NFVIS release 3.5.2 to Cisco NFVIS release 3.6.1.
- Starting from Cisco NFVIS release 4.4.1, you can upgrade NFVIS using `.iso` file.
- To know if a downloaded file is safe to install, it is essential to compare the file's checksum before using it. Verifying the checksum helps ensure that the file was not corrupted during network transmission, or modified by a malicious third party before you downloaded it. For more information see, [Virtual Machine Security](#).

- 
- [Upgrade Matrix for Upgrading Cisco NFVIS, on page 2](#)
  - [Restrictions for Cisco NFVIS ISO File Upgrade, on page 5](#)
  - [Upgrade Cisco NFVIS 4.8.1 and Later Using ISO File, on page 5](#)
  - [Register an Image, on page 6](#)
  - [Upgrade the Registered Image, on page 6](#)
  - [Upgrade APIs and Commands, on page 7](#)
  - [Upgrade Cisco NFVIS 4.7.1 and Earlier Using a .nfvispkg File, on page 7](#)
  - [Firmware Upgrade, on page 9](#)

# Upgrade Matrix for Upgrading Cisco NFVIS


**Note**

- Use the following table to upgrade from your current version of Cisco NFVIS software to the latest supported upgrade versions only. If you upgrade to an unsupported version, the system might crash.
- Upgrading using .iso file is recommended if the supported upgrade image type is both .iso and .nfvispkg.

**Table 1: Upgrade Matrix for Upgrading Cisco NFVIS from Cisco NFVIS Release 4.6.1 and later**

Running Version	Supported Upgrade Version	Supported Upgrade Image Type
4.14.1	4.15.1 (future release)	iso
4.13.1	4.15.1 (future release) 4.14.1	iso
4.12.3	4.15.1 (future release) 4.14.1	iso
4.12.2	4.15.1 (future release) 4.14.1 4.13.1 4.12.3	iso
4.12.1	4.15.1 (future release) 4.14.1 4.13.1 4.12.3	iso
4.11.1	4.12.3	iso
4.10.1	4.11.1 4.12.3	iso
4.9.5	4.12.3	
4.9.4	4.12.3 4.9.5	
4.9.3	4.12.3 4.11.1 4.9.4 and 4.9.5	iso

4.9.2	4.12.3	iso
	4.11.1	
	4.9.3, 4.9.4, and 4.9.5	
4.9.1	4.12.3	iso
	4.11.1	
	4.10.1	
	4.9.5, 4.9.4, 4.9.3, and 4.9.2	
4.8.1	4.9.4	iso
	4.9.3	
	4.9.2	
	4.9.1	
4.7.1	4.9.4	iso
	4.9.3	
	4.9.2	
	4.9.1	
	4.8.1	iso, nfvispkg
4.6.3	4.9.4	iso
	4.9.3	
	4.9.2	
	4.9.1	
	4.8.1	
	4.7.1	nfvispkg
4.6.2	4.9.1 or 4.9.2 or 4.9.3 or 4.9.4	iso
	4.8.1	
	4.7.1	
	4.6.3	

4.6.1	4.9.1 or 4.9.2 or 4.9.3 or 4.9.4	iso
	4.8.1	
	4.7.1	iso, nfvispkg
	4.6.3	iso

**Table 2: Upgrade Matrix for Upgrading Cisco NFVIS from Cisco NFVIS Release 4.5.1 and earlier**

Running Version	Supported Upgrade Version	Supported Upgrade Image Type(s)
4.5.1	4.7.1	iso
	4.6.3	iso, nfvispkg
	4.6.2	iso, nfvispkg
	4.6.1	iso, nfvispkg
4.4.2	4.6.3	iso
	4.6.2	iso
	4.6.1	iso
	4.5.1	iso, nfvispkg
4.4.1	4.6.3	iso
	4.6.2	iso
	4.6.1	iso
	4.5.1	iso, nfvispkg
	4.4.2	iso, nfvispkg
4.2.1	4.4.2	nfvispkg
	4.4.1	nfvispkg
4.1.2	4.2.1	nfvispkg
4.1.1	4.2.1	nfvispkg
	4.1.2	nfvispkg
3.12.3	4.1.1	nfvispkg
3.11.3	3.12.3	nfvispkg
3.10.3	3.11.3	nfvispkg
3.9.2	3.10.3	nfvispkg
3.8.1	3.9.2	nfvispkg

## Restrictions for Cisco NFVIS ISO File Upgrade

- Cisco NFVIS supports .iso upgrade only from version N to versions N+1, N+2 and N+3 starting from Cisco NFVIS release 4.6.x (except Cisco NFVIS releases 4.7.x and 4.8.x). NFVIS does not support .iso upgrade from version N to version N+4 and above.
- Image downgrade using .iso file is not supported.



---

**Note** In case of an error while upgrading from version N to N+1 or N+2, Cisco NFVIS rolls back to the image version N.

---

## Upgrade Cisco NFVIS 4.8.1 and Later Using ISO File

The following example shows how to use the **scp** command to copy the upgrade image:

- To copy the upgrade image, use the **scp** command from Cisco NFVIS CLI:

```
nfvis# scp
admin@192.0.2.9:/NFS/2022-01-23/13/nfvis/iso/Cisco_NFVIS-4.8.0-13-20220123_020232.iso
intdatastore:Cisco_NFVIS-4.8.0-13-20220123_020232.iso
```

- To copy the upgrade image, use the **scp** command from remote linux:

```
config terminal
system settings ip-receive-acl 0.0.0.0/0
service scpd action accept
commit

scp -P22222 Cisco_NFVIS-4.8.0-13-20220123_020232.iso
admin@172.27.250.128:/data/intdatastore/uploads/Cisco_NFVIS-4.8.0-13-20220123_020232.iso
```

Alternatively, you can upload the image to the Cisco Enterprise NFVIS server using the **System Upgrade** option from the Cisco Enterprise NFVIS portal.



---

**Note** When the NFVIS upgrade is in progress, ensure that the system is not powered off. If the system is powered off during the NFVIS upgrade process, the system may become inoperable and you may need to reinstall the system.

---

The upgrade process comprises of two tasks:

1. Register the image using the **system upgrade image-name** command.
2. Upgrade the image using the **system upgrade apply-image** command.

## Register an Image

To register an image, use the following command:

```
config terminal
system upgrade image-name Cisco_NFVIS-4.8.0-13-20220123_020232.iso location
/data/intdatastore/uploads/Cisco_NFVIS-4.8.0-13-20220123_020232.iso
commit
```



**Note** You must verify the image registration status before upgrading the image using the **system upgrade apply-image** command. The package status must be valid for the registered image.

To verify the image registration status, use the following command:

```
nfvis# show system upgrade
```

NAME	PACKAGE		LOCATION	
	VERSION	STATUS	UPLOAD DATE	
Cisco_NFVIS-4.8.0-13-20220123_020232.iso				
/data/upgrade/register/Cisco_NFVIS-4.8.0-13-20220123_020232.iso	4.8.0-13	Valid	2022-01-24T02:40:29.236057-00:00	

```
nfvis# show system upgrade reg-info
```

NAME	PACKAGE		LOCATION	
	VERSION	STATUS	UPLOAD DATE	
Cisco_NFVIS-4.8.0-13-20220123_020232.iso				
/data/upgrade/register/Cisco_NFVIS-4.8.0-13-20220123_020232.iso	4.8.0-13	Valid	2022-01-24T02:40:29.236057-00:00	

## Upgrade the Registered Image

To upgrade the registered image, use the following command:

```
config terminal
system upgrade apply-image Cisco_NFVIS-4.8.0-13-20220123_020232.iso scheduled-time 5
commit
```

To verify the upgrade status, use the **show system upgrade apply-image** command in the privileged EXEC mode.

```
nfvis# show system upgrade
```

NAME	STATUS	UPGRADE	UPGRADE
		FROM	TO
Cisco_NFVIS-4.8.0-13-20220123_020232.iso	SCHEDULED	-	-

NAME	PACKAGE		LOCATION	
	VERSION	STATUS	UPLOAD DATE	
Cisco_NFVIS-4.8.0-13-20220123_020232.iso				
/data/upgrade/register/Cisco_NFVIS-4.8.0-13-20220123_020232.iso	4.8.0-13	Valid	2022-01-24T02:40:29.236057-00:00	

VERSION	STATUS	UPLOAD DATE
Cisco_NFVIS-4.8.0-13-20220123_020232.iso		
/data/upgrade/register/Cisco_NFVIS-4.8.0-13-20220123_020232.iso	4.8.0-13	Valid
2022-01-24T02:40:29.236057-00:00		

## Upgrade APIs and Commands

The following table lists the upgrade APIs and commands:

Upgrade APIs	Upgrade Commands
<ul style="list-style-type: none"> <li>• /api/config/system/upgrade</li> <li>• /api/config/system/upgrade/image-name</li> <li>• /api/config/system/upgrade/reg-info</li> <li>• /api/config/system/upgrade/apply-image</li> </ul>	<ul style="list-style-type: none"> <li>• system upgrade image-name</li> <li>• system upgrade apply-image</li> <li>• show system upgrade reg-info</li> <li>• show system upgrade apply-image</li> </ul>

## Upgrade Cisco NFVIS 4.7.1 and Earlier Using a .nfvispkg File

The following example shows how to use the `scp` command to copy the upgrade image:

`scp` command from NFVIS CLI:

```
nfvis# scp admin@192.0.2.9:/NFS/Cisco_NFVIS_BRANCH_Upgrade-351.nfvispkg
intdatastore:Cisco_NFVIS_BRANCH_Upgrade-351.nfvispkg
```

`scp` command from remote linux:

```
config terminal
system settings ip-receive-acl 0.0.0.0/0
service scpd action accept
commit
```

```
scp -P 22222 nfvis-351.nfvispkg admin@192.0.2.9:/data/intdatastore/uploads/nfvis-351.nfvispkg
```

Alternatively, you can upload the image to the Cisco Enterprise NFVIS server using the **System Upgrade** option from the Cisco Enterprise NFVIS portal.



**Note** When the NFVIS upgrade is in progress, ensure that the system is not powered off. If the system is powered off during the NFVIS upgrade process, the system may become inoperable and you may need to reinstall the system.

The upgrade process comprises two tasks:

- Registering the image using the `system upgrade image-name` command.
- Upgrading the image using the `system upgrade apply-image` command.

## Register an Image

To register an image:

```
config terminal
system upgrade image-name nfvis-351.nfvispkg location
/data/intdatastore/uploads/<filename.nfvispkg>
commit
```



**Note** You must verify the image registration status before upgrading the image using the **system upgrade apply-image** command. The package status must be valid for the registered image.

## Verify the Image Registration

Use the **show system upgrade reg-info** command in the privileged EXEC mode to verify the image registration.

```
nfvis# show system upgrade reg-info
PACKAGE
NAME                LOCATION                                VERSION          STATUS  UPLOAD DATE
-----
nfvis-351.nfvispkg  /data/upgrade/register/nfvis-351.nfvispkg  3.6.1-722  Valid
2017-04-25T10:29:58.052347-00:00
```

## Upgrade the Registered Image

To upgrade the registered image:

```
config terminal
system upgrade apply-image nfvis-351.nfvispkg scheduled-time 5
commit
```

## Verify the Upgrade Status

Use the **show system upgrade apply-image** command in the privileged EXEC mode

```
nfvis# show system upgrade apply-image
UPGRADE
NAME  STATUS   FROM      UPGRADE TO
-----
nfvis-351.nfvispkg SUCCESS  3.5.0  3.5.1
```

The only upgrade supported when BIOS secured boot (UEFI mode) is enabled on ENCS 5400 platform is:

NFVIS 3.8.1 + BIOS 2.5(legacy) --> NFVIS 3.9.1 + BIOS 2.6(legacy)

The following upgrade requires re-installation of NFVIS in UEFI mode:

NFVIS 3.8.1 + BIOS 2.5(legacy) --> NFVIS 3.9.1 + BIOS 2.6(UEFI)

NFVIS 3.9.1 + BIOS 2.6(legacy) --> NFVIS 3.9.1 + BIOS 2.6(UEFI)



### Upgrade APIs and Commands

The following table lists the upgrade APIs and commands:

Upgrade APIs	Upgrade Commands
<ul style="list-style-type: none"> <li>• /api/config/system/upgrade</li> <li>• /api/config/system/upgrade/image-name</li> <li>• /api/config/system/upgrade/reg-info</li> <li>• /api/config/system/upgrade/apply-image</li> </ul>	<ul style="list-style-type: none"> <li>• system upgrade image-name</li> <li>• system upgrade apply-image</li> <li>• show system upgrade reg-info</li> <li>• show system upgrade apply-image</li> </ul>

## Firmware Upgrade




**Note** Firmware upgrade is supported only on ENCS 5400 series devices.

This feature was introduced in NFVIS 3.8.1 release as part of NFVIS auto-upgrade and it supports upgrade of selected firmwares on ENCS 5400 series devices. Firmware upgrade is triggered during NFVIS upgrade as part of the post reboot phase. To trigger the firmware upgrade refer to the NFVIS upgrade feature.

Starting from NFVIS 3.9.1 release, an on demand upgrade is supported which provides a separate firmware package (.fwpkg extension) to be registered and applied through NFVIS CLI. You can also upgrade to the latest firmware through a fresh installation of NFVIS.

The following firmwares can be upgraded:

- Cisco Integrated Management Controller (CIMC)
- BIOS
- Intel 710
- FPGA

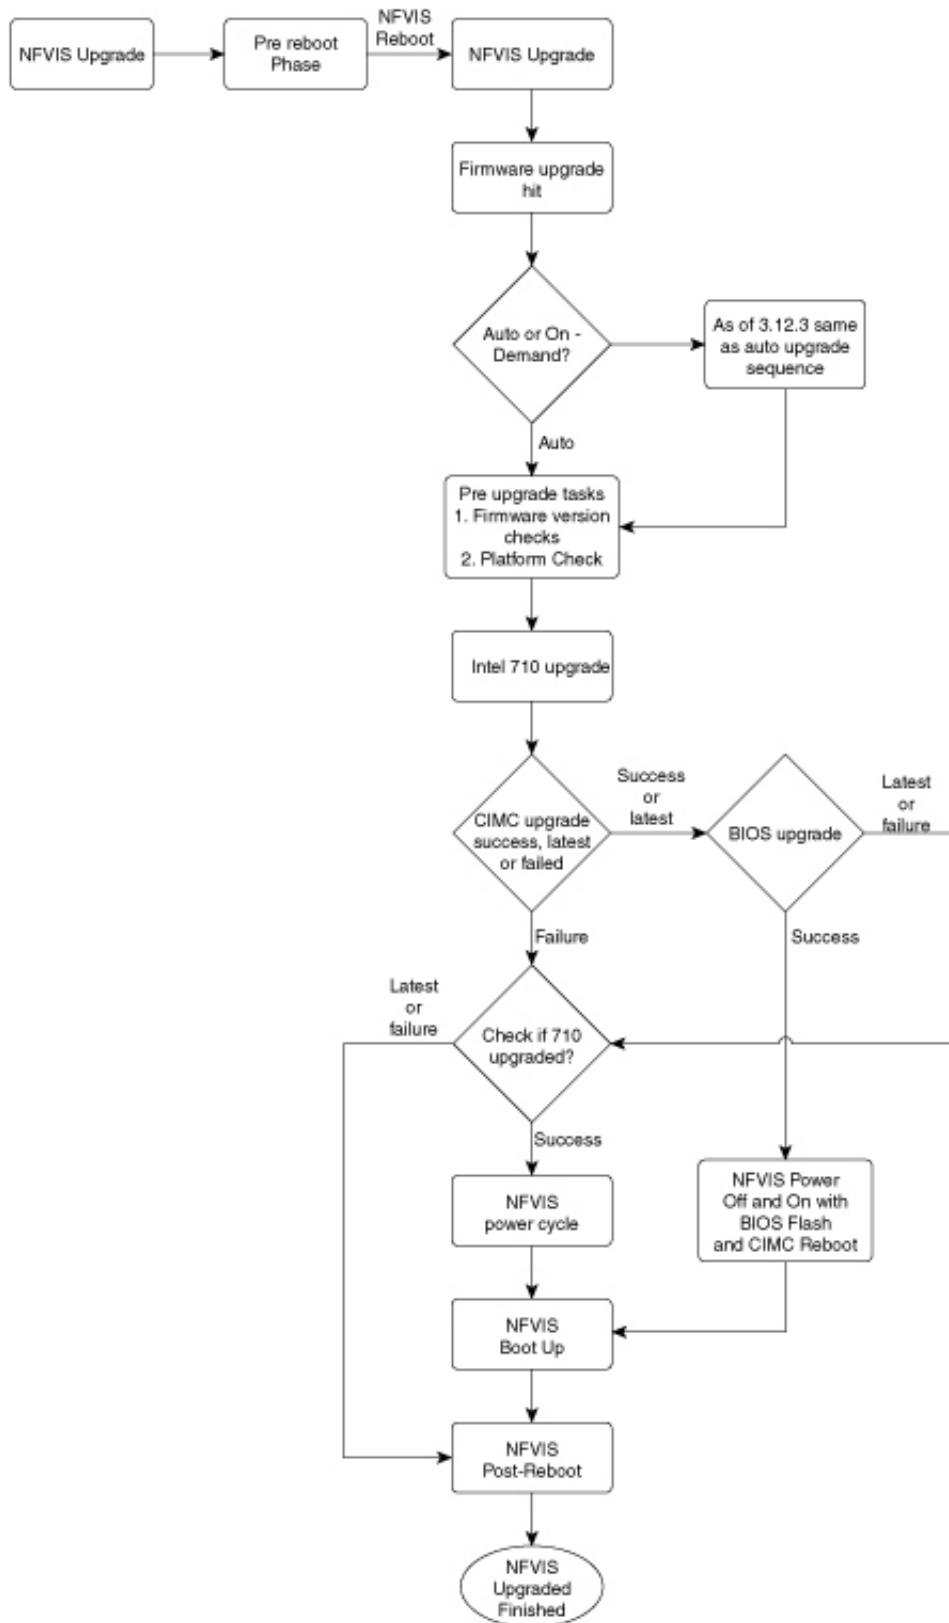

Starting from NFVIS 3.12.3 release, the firmware upgrade script is changed from executable to module format. The code is modularized and each firmware can be individually upgraded. The shell commands are called with subprocess instead of os.system() calls. Each firmware upgrade call is monitored with a time limit. If the call is stuck, the process is killed and execution control will return back to the code flow with appropriate message.

The following table shows the sequence of firmware upgrade:

<b>NFVIS Upgrade</b>	<b>Fresh Install</b>	<b>On Demand Upgrade</b>
Intel 710		
<ol style="list-style-type: none"> <li>1. NFVIS upgrade</li> <li>2. Reboot</li> <li>3. Login</li> <li>4. Firmware upgrade 710</li> <li>5. NFVIS power cycle</li> <li>6. Login</li> </ol>	<ol style="list-style-type: none"> <li>1. Install</li> <li>2. Reboot</li> <li>3. Login</li> <li>4. Firmware upgrade 710</li> <li>5. NFVIS power cycle</li> <li>6. Login</li> </ol>	<ol style="list-style-type: none"> <li>1. Firmware upgrade 710</li> <li>2. NFVIS power cycle</li> <li>3. Login</li> </ol>
Intel 710 and BIOS		
<ol style="list-style-type: none"> <li>1. NFVIS upgrade</li> <li>2. Reboot</li> <li>3. Login</li> <li>4. Firmware upgrade 710 and BIOS</li> <li>5. NFVIS power off/on due to BIOS</li> <li>6. Login</li> </ol>	<ol style="list-style-type: none"> <li>1. Install</li> <li>2. Reboot</li> <li>3. Login</li> <li>4. Firmware upgrade 710 and BIOS</li> <li>5. NFVIS power off/on due to BIOS</li> <li>6. Login</li> </ol>	<ol style="list-style-type: none"> <li>1. Firmware upgrade 710 and BIOS</li> <li>2. NFVIS power off/on due to BIOS</li> <li>3. Login</li> </ol>
Intel 710 and CIMC		
<ol style="list-style-type: none"> <li>1. NFVIS upgrade</li> <li>2. Reboot</li> <li>3. Login</li> <li>4. Firmware upgrade 710 and CIMC</li> <li>5. CIMC reboot</li> <li>6. NFVIS power cycle due to 710</li> <li>7. Login</li> </ol>	<ol style="list-style-type: none"> <li>1. Install</li> <li>2. Reboot</li> <li>3. Login</li> <li>4. Firmware upgrade 710 and CIMC</li> <li>5. CIMC reboot</li> <li>6. NFVIS power cycle due to 710</li> <li>7. Login</li> </ol>	<ol style="list-style-type: none"> <li>1. Firmware upgrade 710 and CIMC</li> <li>2. CIMC reboot</li> <li>3. NFVIS power cycle due to 710</li> <li>4. Login</li> </ol>
CIMC		

<b>NFVIS Upgrade</b>	<b>Fresh Install</b>	<b>On Demand Upgrade</b>
<ol style="list-style-type: none"> <li>1. NFVIS upgrade</li> <li>2. Reboot</li> <li>3. Login</li> <li>4. Firmware upgrade CIMC</li> <li>5. CIMC reboot</li> <li>6. Login</li> </ol>	<ol style="list-style-type: none"> <li>1. Install</li> <li>2. Reboot</li> <li>3. Login</li> <li>4. Firmware upgrade CIMC</li> <li>5. CIMC reboot</li> <li>6. Login</li> </ol>	<ol style="list-style-type: none"> <li>1. Firmware upgrade CIMC</li> <li>2. CIMC reboot</li> <li>3. Login</li> </ol>
CIMC and BIOS		
<ol style="list-style-type: none"> <li>1. NFVIS upgrade</li> <li>2. Reboot</li> <li>3. Login</li> <li>4. Firmware upgrade CIMC and BIOS</li> <li>5. NFVIS power off</li> <li>6. CIMC reboot</li> <li>7. BIOS flash</li> <li>8. NFVIS power on</li> <li>9. Login</li> </ol>	<ol style="list-style-type: none"> <li>1. Install</li> <li>2. Reboot</li> <li>3. Login</li> <li>4. Firmware upgrade CIMC and BIOS</li> <li>5. NFVIS power off</li> <li>6. CIMC reboot</li> <li>7. BIOS flash</li> <li>8. NFVIS power on</li> <li>9. Login</li> </ol>	<ol style="list-style-type: none"> <li>1. Firmware upgrade CIMC and BIOS</li> <li>2. NFVIS power off</li> <li>3. CIMC reboot</li> <li>4. BIOS flash</li> <li>5. NFVIS power on</li> <li>6. Login</li> </ol>
BIOS		
<ol style="list-style-type: none"> <li>1. NFVIS upgrade</li> <li>2. Reboot</li> <li>3. Login</li> <li>4. Firmware upgrade BIOS</li> <li>5. NFVIS power off</li> <li>6. BIOS flash</li> <li>7. NFVIS power on</li> <li>8. Login</li> </ol>	<ol style="list-style-type: none"> <li>1. Install</li> <li>2. Reboot</li> <li>3. Login</li> <li>4. Firmware upgrade BIOS</li> <li>5. NFVIS power off</li> <li>6. BIOS flash</li> <li>7. NFVIS power on</li> <li>8. Login</li> </ol>	<ol style="list-style-type: none"> <li>1. Firmware upgrade BIOS</li> <li>2. NFVIS power off</li> <li>3. BIOS flash</li> <li>4. NFVIS power on</li> <li>5. Login</li> </ol>
Intel 710, CIMC and BIOS		

<b>NFVIS Upgrade</b>	<b>Fresh Install</b>	<b>On Demand Upgrade</b>
1. NFVIS upgrade	1. Install	1. Firmware upgrade 710, CIMC and BIOS
2. Reboot	2. Reboot	2. NFVIS power off
3. Login	3. Login	3. CIMC reboot
4. Firmware upgrade 710, CIMC and BIOS	4. Firmware upgrade 710, CIMC and BIOS	4. BIOS flash
5. NFVIS power off	5. NFVIS power off	5. NFVIS power on
6. CIMC reboot	6. CIMC reboot	6. Login
7. BIOS flash	7. BIOS flash	
8. NFVIS power on	8. NFVIS power on	
9. Login	9. Login	

